

 


MULTICLEAN® WET + DRY DRUM VACUUM 2035 SERIES

| | |
|------------------------------------|---|
| Important Safety Information..... | 2 |
| What's in the Box?..... | 3 |
| Getting Ready to Clean..... | 3 |
| Cleaning Your Floors..... | 4 |
| Emptying the Dirt Tank..... | 5 |
| Cleaning the Filters..... | 6 |
| Protecting the Vacuum's Motor..... | 7 |
| Troubleshooting..... | 7 |
| Warranty..... | 7 |

Product Overview

1. Air Flow Regulator
2. Handle
3. Extension Wand
4. Carry Handle
5. ON/OFF Switch
6. Blower Function Connection
7. Lid Clip
8. Hose Connector and Suction Inlet

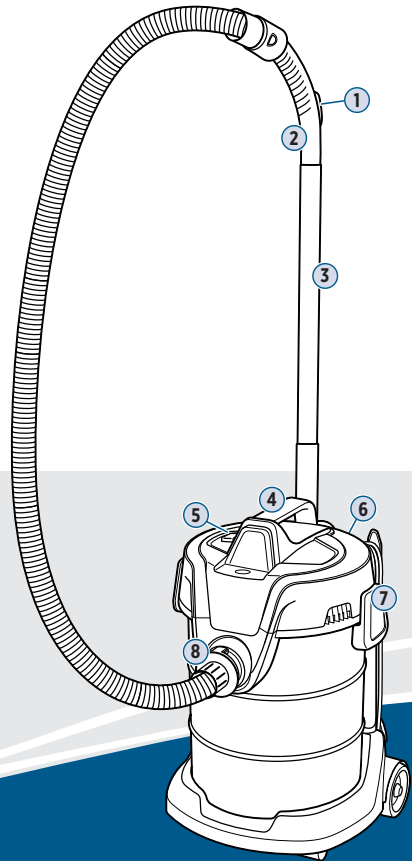

Meet your new BISSELL product!

Go to support.BISSELL.com for a comprehensive walkthrough of your new purchase, including videos, tips, support, and more. Want to get started right away? This guide has all the information you need to set up your new product. Let's take a look...

IMPORTANT SAFETY INSTRUCTIONS



READ ALL INSTRUCTIONS BEFORE USING YOUR APPLIANCE.

When using an electrical appliance, basic precautions should be observed, including the following:



WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Connect to a properly grounded outlet only. See grounding instructions. Do not modify the 3-prong grounded plug.
- Do not leave vacuum cleaner when it is plugged in.
- Unplug from outlet when not in use and before servicing.
- Do not expose to rain, store indoors.
- Intended primarily for indoor use and occasional outdoor use.
- Do not freeze.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- Do not use for any purpose other than described in this user guide. Use only manufacturer's recommended attachments.
- Do not plug in your vacuum cleaner until you are familiar with all instructions and operating procedures.
- To reduce the risk of electrical shock, turn power switch OFF and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners.
- Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.

- Do not handle plug or vacuum cleaner with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn OFF all controls before plugging or unplugging vacuum cleaner.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- Do not use vacuum cleaner in an enclosed space filled with vapors given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapors.
- Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Keep appliance on a level surface.
- Do not carry the appliance while in use.
- This product should not be used with detergents or to pick up foaming wet messes to prevent internal component damage.
- Do not immerse. Use only on surfaces moistened by the cleaning process.
- Do not use without filters in place.
- Always install float before any wet pick-up operation.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.


COMMERCIAL USE OF THIS UNIT voids THE MANUFACTURER'S WARRANTY.

WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. **DO NOT MODIFY THE PLUG.** If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the illustration. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.




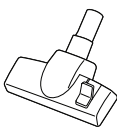
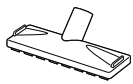

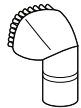

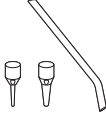

GROUNDING INSTRUCTIONS

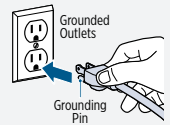This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.




What's in the Box?

Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.


| | | | | |
|---|---|---|---|---|
|  |  |  |  |  |
| Base | Hose and Handle (stored inside drum) | Extension Wand | Multi-Surface Floor Tool | Wet Floor Tool |
|  |  |  |  |  |
| Crevice Tool | Dusting Brush | Precision Suction Tool | Precision Blower and Detail Tools | Upholstery Tool |

Getting Ready to Clean


1. Attach the hose depending on your cleaning method. **Note:** The hose is stored inside the drum.

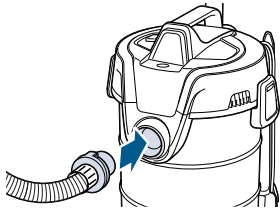

Suction: Line up the tab on the end of the hose with the arrow on the suction inlet on the **front** of the machine. Insert the hose and turn clockwise to secure.

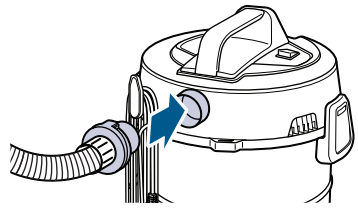


Blower: Line up the tab on the end of the hose with the arrow on the blower outlet on the **back** of the machine. Insert the hose and turn clockwise to secure.

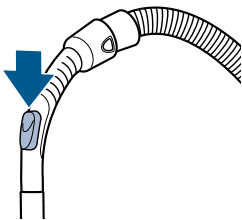

2. For full suction, slide the air flow regulator down. Open the regulator to reduce suction power for vacuuming delicate fabrics.




3. For above floor cleaning, attach your desired tool.

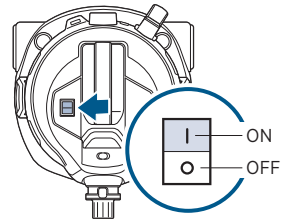


4. Plug the machine into an outlet. Use the power switch to turn the machine ON and OFF.

Cleaning Your Floors

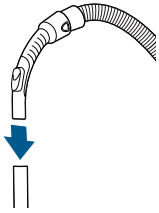


1. Connect hose handle to the end of the extension wand and twist slightly to tighten.

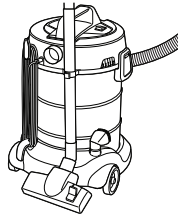


2. Once assembled, you can store the machine by inserting the parking hook (located on the extension wand) into the storage slot on the back.

Multi-Surface Floor Tool

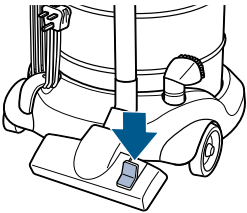


1. To vacuum carpets and rugs, push the brush switch to the carpet position.

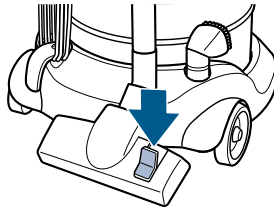


2. To vacuum bare floors, push the brush switch to the bare floor position.

Wet Floor Tool

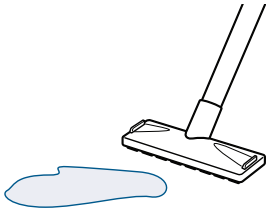


1. Use the wet cleaning foot to vacuum up wet messes, like spills.

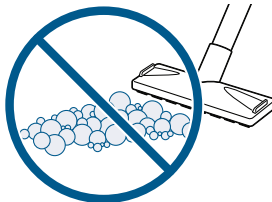


2. This product should not be used with detergents or used to pick up foaming wet messes.

Emptying the Dirt Tank


Note: If you suffer from allergies, place a plastic bag over top of dirt tank and tip upside down to empty. Wait for dust to settle, remove bag and discard.

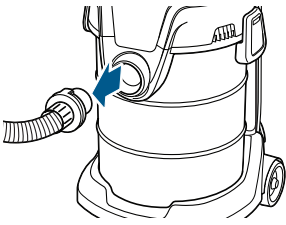


1. Unplug the vacuum from the electrical outlet and disconnect the hose.

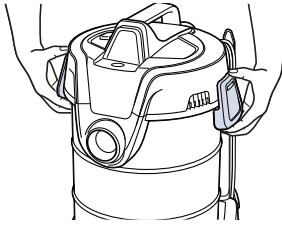


2. Undo the clips on both sides of the top cover and lift up to remove.

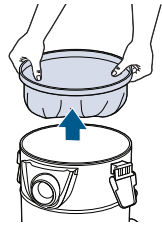


3. Remove the large fabric filter by pulling up on both sides and setting it to the side.

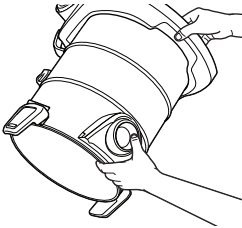

4. Hold the machine by the base and handle above hose inlet and tip dirt out into a trash can for dry messes and outside or in a sink for wet messes.

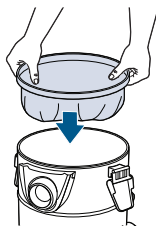

5. Return filter, ensuring its seal covers the top of the wall of the dirt tank all the way around.

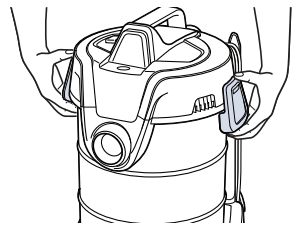


6. Replace top cover and close clips.


WARNING

- To reduce the risk of electrical shock, turn power switch OFF and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.
- Before using your vacuum, make sure the dirt tank is latched closed and the filter is in place. Do not operate without filter.


Cleaning the Filters

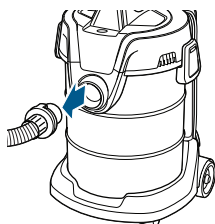


1. Unplug the vacuum from the electrical outlet and disconnect the hose.

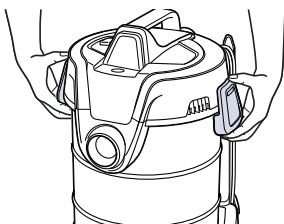


2. Undo clips on both sides of top cover.

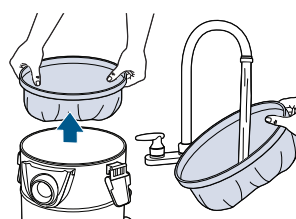


3. Remove the large fabric filter and hand wash in cold water with mild detergent. Rinse well and air dry for 24 hours.

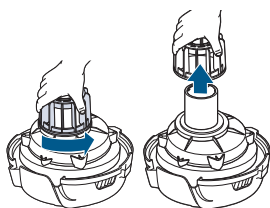


4. Remove the top cover of drum vacuum and grasp the plastic filter cage, turning counter-clockwise to unlock. Pull up to remove.

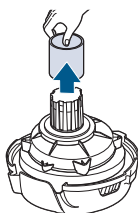

5. Remove the foam filter and rinse to clean. Allow the filter to fully dry before reinstalling.

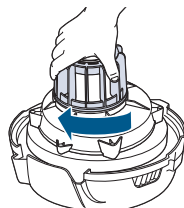

6. Once completely dry, return filters to the dirt tank. Ensure the filter basket is installed and surrounding entire tank wall. Turn clockwise to seal.

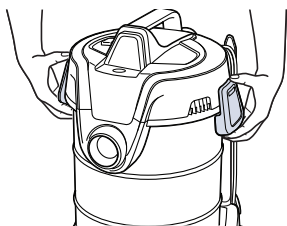

7. Return the dry large fabric filter and replace top cover, closing the clips to seal closed.

WARNING

- To reduce the risk of electrical shock, turn power switch OFF and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.
- Do not operate vacuum with a damp or wet filter, or without filter or the dirt tank in place. Allow components to dry before reassembling the dirt tank.

Protecting the Vacuum's Motor

🔧 For more assistance with your vacuum's motor protection, visit support.BISSELL.com.

An internal thermal protector has been designed into your cleaner to protect it from overheating. When the thermal protector activates, the main vacuum motor will stop operating. If this happens, proceed as follows.

1. Turn vacuum OFF and unplug from electrical outlet.
2. Check vacuum for the source of overheating problem (i.e. full dirt tank, dirty filters or clog).
3. Fix the problem by following the steps in the maintenance section of the user guide.
4. When the motor cools for approximately 30 minutes, the thermal protector automatically resets and cleaning may continue. If the vacuum will not turn ON or the thermal protector continues to activate, call BISSELL Consumer Services or visit the website to locate an authorized service center.

Note: Any other maintenance or servicing not included in this manual should be performed by an authorized service representative.

Troubleshooting

🔍 Below are some of the issues you may run into. If you don't see the issue you're experiencing below, visit support.BISSELL.com.

| Problem | Possible Cause | Remedies |
|----------------------------------|---------------------------------|---|
| Vacuum won't pick up dirt | Filter is dirty. | Remove and rinse filter. Allow 24 hours to dry properly before reinserting. |
| | Main hose is not connected. | Reconnect the main hose by pushing the hose connection to secure latch. |
| | Crack or hole in the main hose. | Thoroughly inspect hose for cracks or holes. If needed, order a new hose at BISSELL.com . |
| | Clog in the floor tool. | Remove debris and any other material that may be restricting airflow. |
| | Clog in the vacuum. | Check to see if there are any clogs in the suction inlet. |
| | Filter is not seated correctly. | Ensure the black portion of the filter completely covers the top wall of the dirt tank. |
| Dirt is escaping from the vacuum | Dirt tank is full. | Empty the dirt tank. |
| | Filter is missing. | Check to see if filter is in place. |
| | Filter is not seated properly. | Ensure the filter basket is sitting completely on the wall of the dirt tank all the way around. |

Warranty

🔧 Limited 2-year warranty, may vary by state. Visit support.BISSELL.com or call 1-800-237-7691 for complete warranty information.

⚠️ WARNING To reduce the risk of electrical shock, turn power switch OFF and disconnect polarized plug from electrical outlet before performing maintenance or troubleshooting checks.



We're Waggin' Our Tails!

BISSELL proudly supports BISSELL Pet Foundation® and its mission to help save homeless pets. When you buy a BISSELL® product, you help save pets, too. We're proud to design products that help make pet messes, odors and pet homelessness disappear.

Visit [BISSELLsavespets.com](https://www.bissellsavespets.com) to learn more.

But wait, there's more!

Join us online for a complete guide to your new product, including troubleshooting, product registration, parts, and more.

Go to [support.BISSELL.com](https://support.bissell.com).



REGISTER



INFO



VIDEOS



PARTS



SUPPORT



©2023 BISSELL, Inc. All rights reserved.
Part Number 1627326 09/23 v1