 
 
 







Assembly Instructions— Sofa with Drop Down Table & Multi Media Control Console

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come lose inside the carton during shipment.

Inside the carton you will find two red plastic bags that have the sofa's wings in it. Remove the wings from the plastic bag and set them aside to be used in assembly and installation.

 Make sure to read the instructions below before assembling your Sofa.

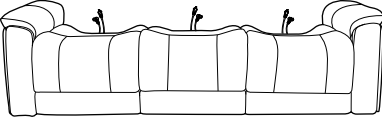Ax1 	Bx1 	Cx1 	Ex2 	Fx2 
Dx1 			 Not Included	

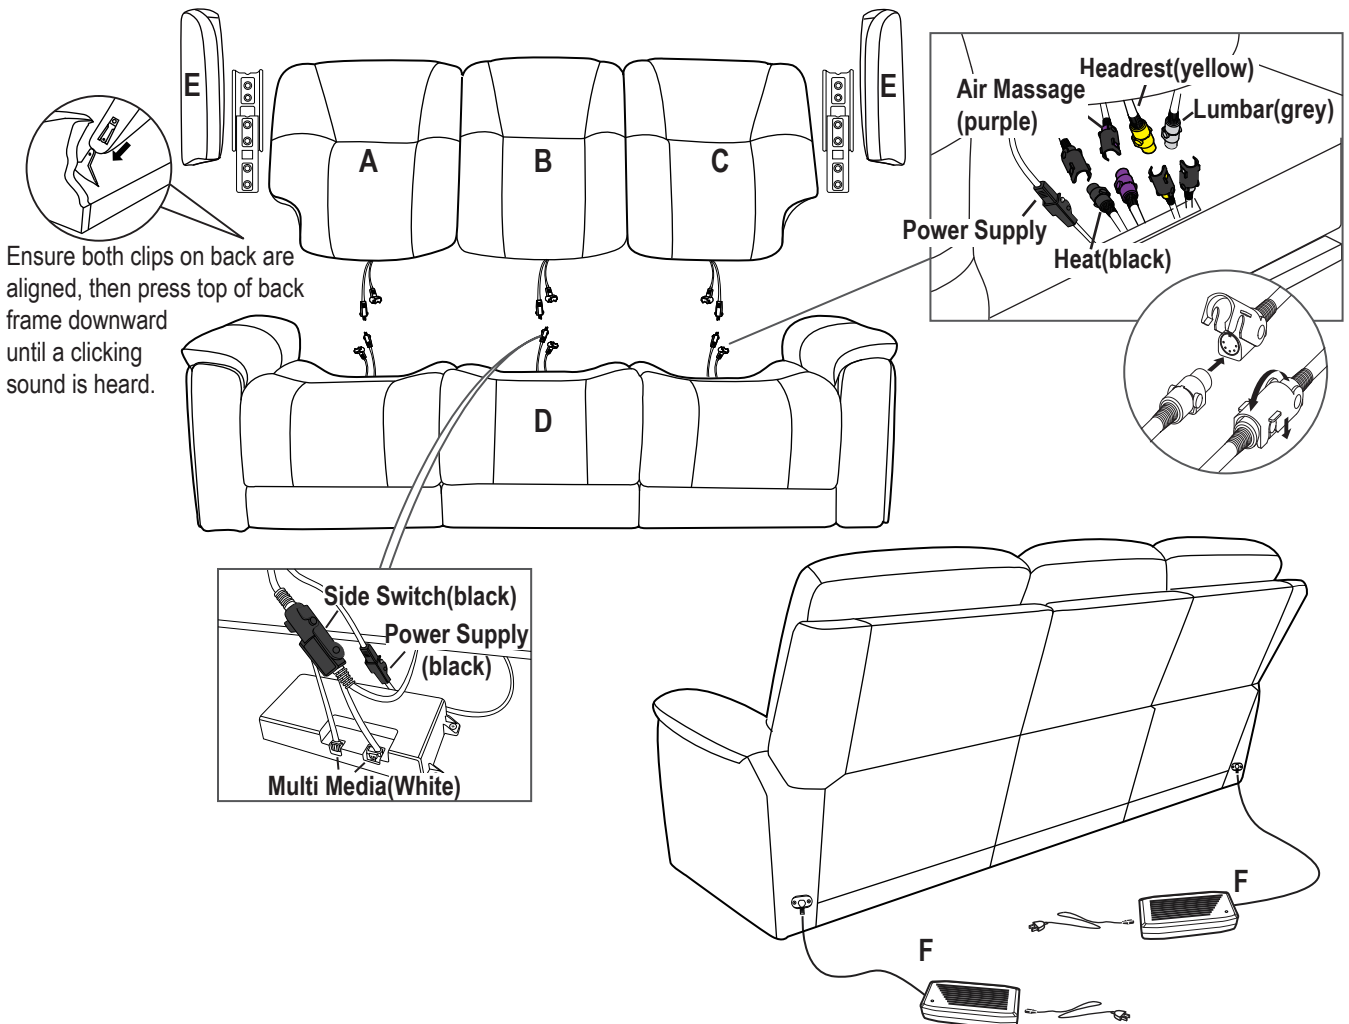

Do Not plug the power cord into a power outlet until your furniture is fully assembled and in place.


Notes:

- 1) To help prevent shock and damage to your product only plug the power cord into a grounded outlet.
- 2) Read the operating instructions carefully before operating your power furniture.

IMPORTANT NOTE

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.

How to Use LED Lights
Press the Middle of LED Lights to activate the LED Light.
Press the Middle of LED Lights again to activate the stronger LED Light.
Press the Middle of LED Lights again to close the light.

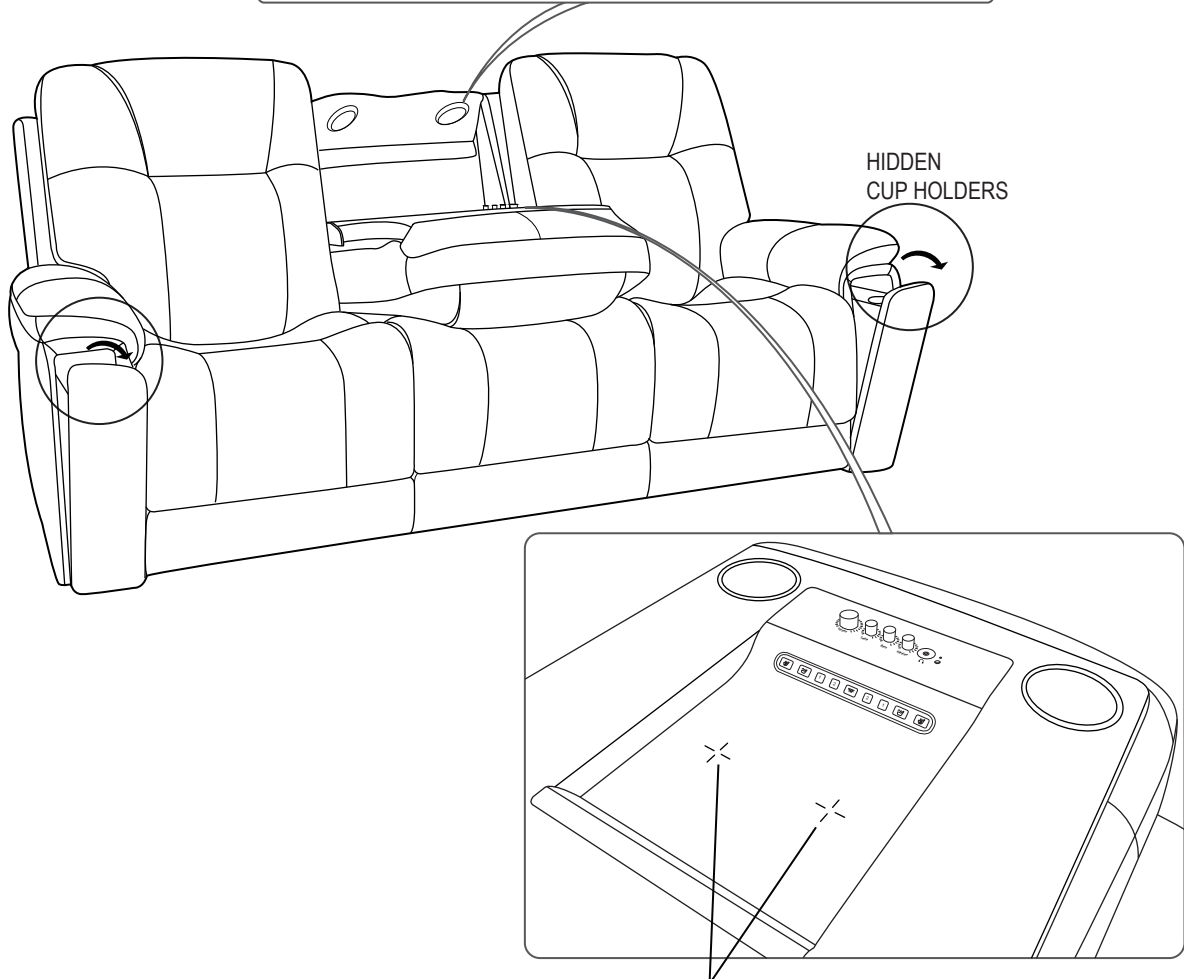

FCC INSTRUCTION

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Product Protected By Following Patents:
Patented Power Hidden Cupholder
Us Patent: 10,681,987


**Caution: Read the important instructions below before operating your power mechanized equipment
Do not allow children to play on or operate this power mechanized equipment**

Multi Media Control Panel

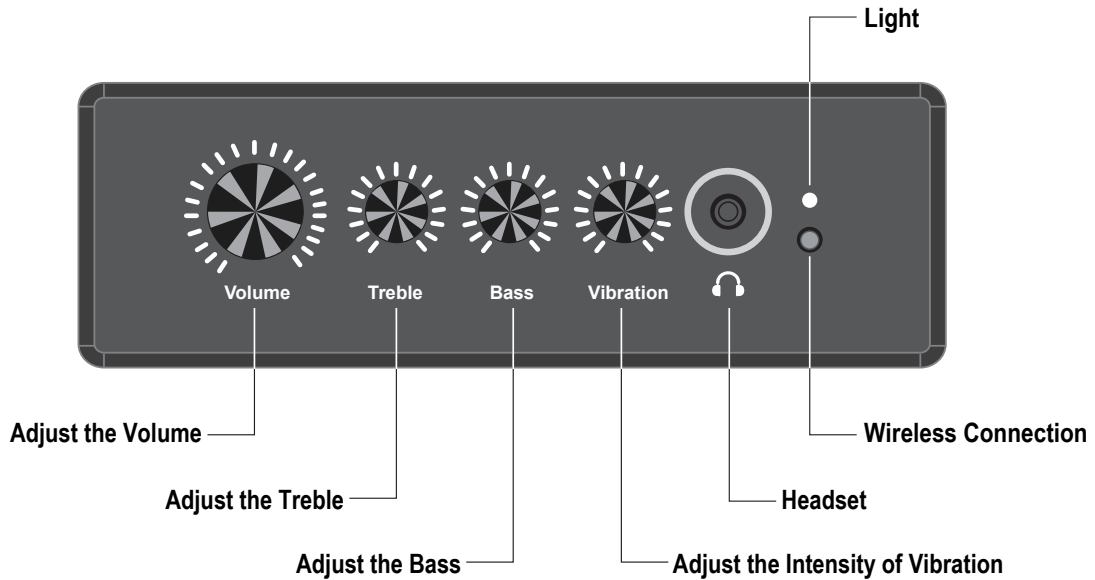


How to Connect Wireless

Press and hold the Wireless button, the LEDs on the memory buttons will flash to indicate that the control is in "pair" mode. Switch on the pairing function on your device.

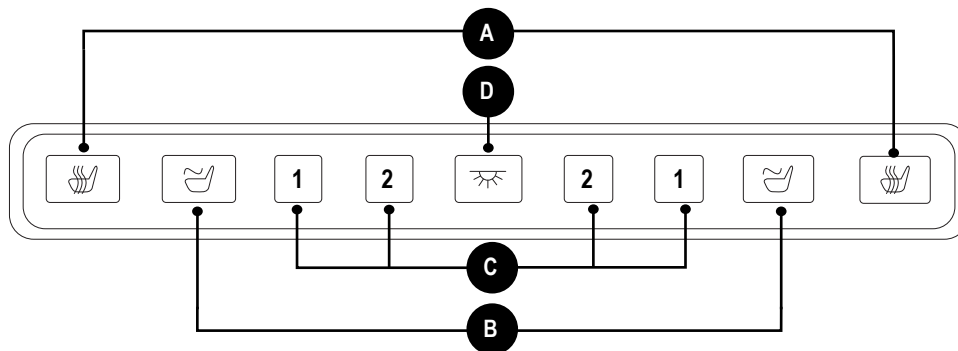

- A HEAT BUTTON**
Press the heat button to activate the heat function.
Press again to cycle intensity through low, medium, and high heat.
- B AIR MASSAGE BUTTON**
Press the air massage button to activate the gentle pressure massage function. Press again to cycle through low, medium, and high intensity.
- C Set Up Memory Function**
To setup memory function, adjust the chair position as the user desires, then press and hold the "1" & "2" together for 4 to 5 seconds, then press "1" or "2" to save the position until you hear a beep sound from the control box, to indicate that setup is complete.
- D Lighting:**
Press the lighting button to open or closed

**Caution: Read the important instructions below before operating your power mechanized equipment
Do not allow children to play on or operate this power mechanized equipment**

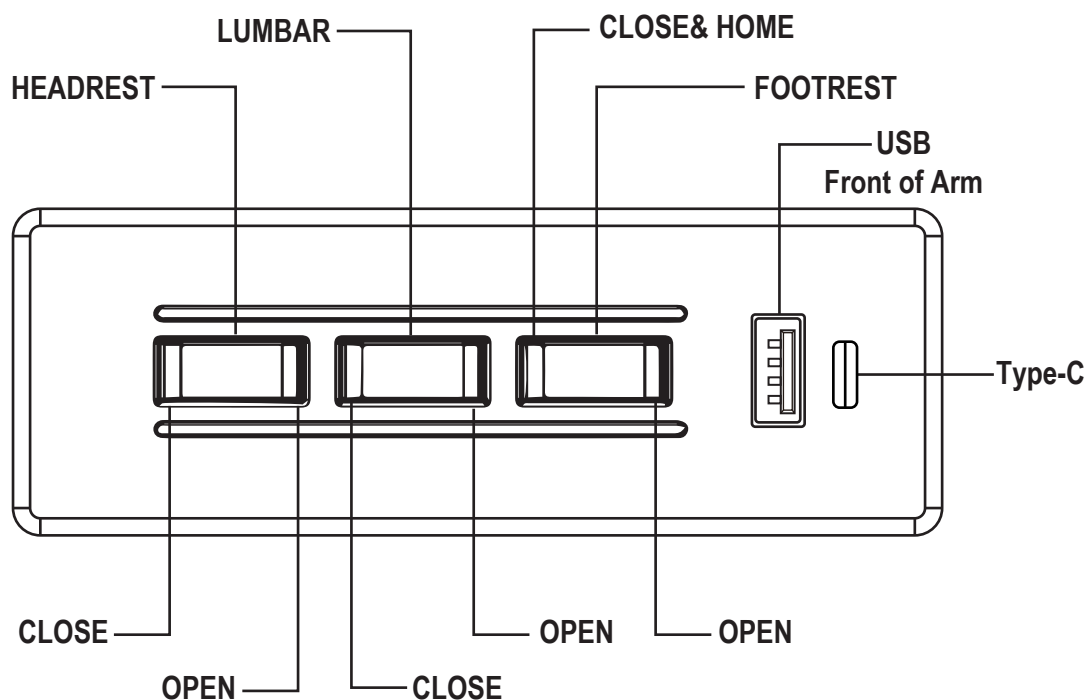

To recline: Sit on the furniture, and press the front of the button closest to the footrest to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press the back side of the button closest to the footrest.

To adjust headrest: Press the front of the button closest to the backrest to smoothly raise and adjust the headrest to any position. To lower the headrest and return it to its original position, press the back side of the button closest to the backrest.

To adjust lumbar support: Press the front of the center button to smoothly raise and adjust the lumbar support to any position. To lower the lumbar support and return it to its original position, press the back side of the center button.

To close all: To simultaneously return the headrest, footrest, and lumbar support to their original positions, press and hold the back side of the button closest to the footrest.

Customer Service

If you have any questions regarding the use of this unit, or find that your unit needs service, please contact your retailer.

Product Protected By Following Patents:
Patented Power Hidden Cupholder
US Patent: 10,681,987
Patented Articulating Power Headrest & Lumbar
Us Patent: 10,736,423