

WHAT'S INCLUDED

Attachments & accessories vary by model.



Power Base:
Choose from multiple attachments and accessories to unlock an array of outputs for the power base.



Hand Mixer Attachment:
Power through any recipe with 5 mixing speeds.

Hand Mixer Accessories:
(vary by model)

Two Beaters, Two Dough Hooks, and Single Whisk



Chopper Attachment:
(not included with all models)

Attach with power base to chop, mince, and puree ingredients. Storage lid included.



Immersion Blender Attachment:
2 blending speeds allow you to blend the toughest ingredients.



3-Cup Blending Vessel & Lid

Perfectly designed for the immersion blender attachment so you can blend your favorite ingredients.

NOTE:
The 3-cup blending vessel is not microwave safe.

CLEANING

Unplug the power base before cleaning. Wipe the power base, hand mixer attachment, and chopper processing lid with a clean, damp cloth.

The immersion blender, beaters, dough hooks, whisk, and chopper bowl, blade assembly, and storage lid are all top-rack dishwasher safe.

If hand-washing, wash in warm, soapy water. Use a dishwashing utensil with a handle when washing blade assemblies.



WARNING: Handle the blade assemblies with care when washing, as the blades are sharp. Contact with the blade's edges can result in laceration.

NINJA Foodi

POWER MIXER™ SYSTEM

Scan here to learn how to use your Power Mixer System, explore recipes, and purchase additional accessories!

VISIT
[QR.NINJAKITCHEN.COM/
POWERMIXERSYSTEM](https://qr.ninjakitchen.com/powermixersystem)
OR

SCAN HERE



FOODI and NINJA are registered trademarks of SharkNinja Operating LLC.
POWER MIXER is a trademark of SharkNinja Operating LLC.
This product may be covered by one or more U.S. patents.
See sharkninja.com/patents for more information.

© 2022 SharkNinja Operating LLC
CI100Series_QSG_MP_Mv11

Please make sure to read the enclosed Owner's Guide prior to using your unit.

Quick Start Guide

NINJA Foodi

POWER MIXER™ SYSTEM



NOTE: Attachments & accessories vary by model

HAND MIXER



NOTE: Dough hooks not available with all models.

Assembly

 


Install power base:

Align the arrow on the power base with the arrow on the mixer attachment, then push the power base onto the attachment to lock it in place.



TIP: Whisk can be installed in either slot.

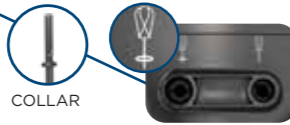

COLLAR

Choose your accessory:

Install both beaters, both dough hooks (not available with all models), or the whisk using the accessory slots on the mixer head. Insert the beater/dough hook with the collar into the slot with the diagram showing a collar. **The whisk can be inserted into either slot.** You will hear a slight click when locked into place.

NOTE:

If using the whisk, do not insert a beater/dough hook in the other slot.

 
Using the Controls

EJECT: Push to remove the beaters or other accessories.

SPEED RANGE INDICATOR: LEDs illuminate to indicate speed settings 1-5.

POWER: Press \odot to turn the unit on and off.

SPEED SELECTOR: Increase or decrease speed by pressing the up or down arrow.

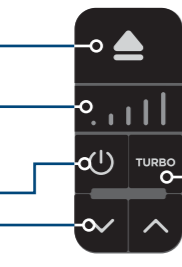

TURBO: Press and hold to quickly jump to speed 5.

Disassembly

1 Eject accessory: Push the eject button on the hand mixer attachment to remove the beaters or other accessories.



2 Eject power base: Press and hold the release buttons on each side of the power base to detach.

 
IMMERSION BLENDER



Assembly

Install the power base:

Align the arrow on the power base with the arrow on the immersion blender attachment, then push the power base onto the blender attachment to lock it in place.

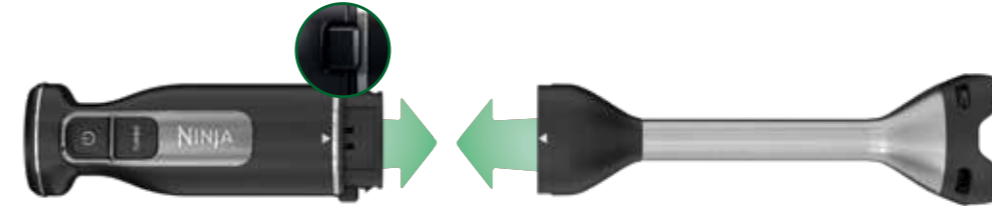


Disassembly

Remove the power base:

Press and hold the release buttons on each side of the power base to detach.

Using the controls

 POWER: Press \odot and hold continuously to blend.



TURBO: While continuously holding \odot to blend, press and hold the TURBO button to jump quickly to high speed.



Blending Speeds

LOW: Use to blend liquids, such as mayo or dressing, or soups and sauces with soft ingredients, such as tomato sauce.

TURBO: Use for tougher ingredients, such as butternut squash, or for smooth purees, such as hummus.

Blending



1 Choose your container: The container should be large enough for the **blender head to be fully submerged** in the ingredients. Once submerged, there should be ample room in the container to avoid overflowing and splashing. A cooking pot, large measuring container, or the blending vessel (not included with all models) is recommended.



2 Blending: Submerge vents of blender head in the ingredients. **Use an up-and-down motion to blend,** making sure to stop blending any time the vents are no longer submerged.

NOTE: For best results, hold the unit with the control panel facing away from you.

CHOPPER



Not available with all models. To purchase, visit ninjaaccessories.com. Visit qr.ninjakitchen.com/powermixersystem or **SCAN HERE**

Assembly

Set up the blade & lid assembly:

Holding the blade assembly by the top of the shaft, install it in the chopper bowl. Place ingredients in the bowl. Install the processing lid by aligning the lid with the notches in the bowl. Ensure the lid is fully installed; there will be no click.

Install the power base:

Attach the power base by aligning the arrow on the power base with the arrow on the processing lid, then push the power base onto the lid to lock it in place.



Using the controls

POWER: Press \odot and hold continuously to process. Use short presses for short pulses and long presses for long pulses.



The TURBO button is **disabled** when using the chopper attachment. Chopper will run on high speed by default.



Chopper Basics

For best results, we recommend:

- Prepping ingredients into even size pieces and ensuring they sit below the top blade.
- Being careful to avoid overfilling and over-processing (so you don't get uneven or watery results).
- Holding the chopper bowl with one hand while processing to help ensure it stays in place.



Disassembly

Remove the power base:

Press and hold the release buttons on each side of the power base to detach.

Remove the processing lid:

Lift up the processing lid. Always remove the blade assembly before emptying the bowl.

Storage

Use the included storage lid to store ingredients in the bowl.

WARNING: Chopping blade assembly is sharp and not locked in place. Before emptying the bowl carefully remove chopping blade assembly. Failure to do so will result in a risk of laceration. Refer to the Ninja Safety Instructions for additional information.