

CONNECT AND CONTROL YOUR APPLIANCE WITH THE HOME CONNECT APP

Wall Ovens Installation Guide

Available on the
App Store

Get it on
Google play

STEP 1: Download the Home Connect app and create a user account

 
Download the Home Connect (America) app from your App Store



Start the app and create an account



Login to the Home Connect app and click the button



Follow the directions in the app until it directs you to either Step 2.1 or Step 2.2



VIDEO TUTORIALS:

To help your pairing experience, follow the link below for a quick 'how-to' video guide



<https://www.bosch-home.com/us/connect>

STEP 2: Connect your appliance to a Wi-Fi network

Follow Step 2.1 only if your router supports WPS function ******(What is WPS? See backside for information)

2.1: WPS

OR

2.2: Step-by-Step

A Press the "Remote Start" button on the oven.



B Press the "Enter" button on the oven.



- "ENABLE WPS ON ROUTER" will appear on the display.

C Within 2 minutes, go to your router and press the WPS button.

D Follow the instructions in the app.

A Press the "Remote Start" button on the oven.



B Press the "Enter" button on the oven.



- "ENABLE WPS ON ROUTER" will appear on the display. Ignore this message and continue with step C below.

C Press the "Settings" button on the oven.




- The Manual network setup will start and "FOLLOW HC SETUP STEPS" will appear on the display.

D Go back to the app to complete the connection.



The oven opens a temporary Wi-Fi network called "HomeConnect" with the password "HomeConnect" for 5 minutes.

- When "CONNECTING TO NETWORK" appears on the display, the oven is in the process of connecting to the network.

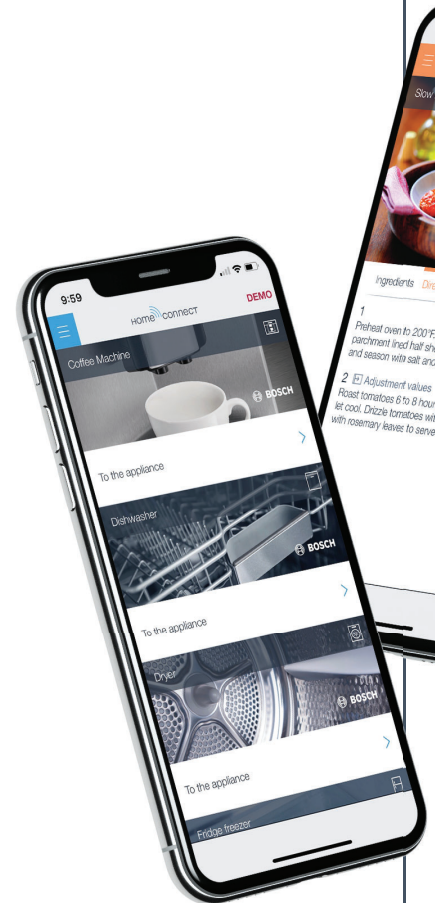

Follow STEP 3 on the backside only if prompted by the app

STEP 3: Connect your oven to the Home Connect app

*This should happen automatically; if not, follow the instructions below

A | The oven automatically starts connecting to the app.

- “CONFIRM ON HC APP” will appear on the oven display.

B | Go back to the app to finalize the pairing process.

- Once the connection has been established, “PAIRING SUCCESSFUL” will then appear on the oven display.

Note - Leave the menu by pressing and holding the “Clear/Off” button on your oven for 3 seconds

Troubleshooting:

If you have trouble connecting, please check:

- Your appliance is in the range of the Wi-Fi network.
- Your smartphone/tablet is connected to your home Wi-Fi network.
- Your smartphone/tablet and appliance are connected to the same home Wi-Fi network.

Step 2.1 Information:

**WPS is a button on your router that allows you to automatically connect your appliance without typing in the network password. Refer to your router manual for how to use WPS mode.

WPS mode is also called “Automatic mode”.

Step 2.2 Information:

The appliance opens a temporary Wi-Fi network called “HomeConnect” with the password “HomeConnect” for 5 minutes.

The app provides your home Wi-Fi network name (SSID) and its password via this temporary Wi-Fi network to the appliance, allowing it to connect.

Step-by-Step mode is also called “SAP mode” or “Manual mode”.

Helpful Tips:

We are constantly working to improve the Home Connect app, which may lead to differences in the setup steps. Please rely on the instructions in the latest version of the Home Connect app to guide you through the setup process.

Important Information:

The availability of the Home Connect function depends on the availability of Home Connect services in your country. Home Connect services are not available in every country. You can find more information on www.home-connect.com

Data Security:

Home Connect values customer data, ensuring the transfer of data is encrypted. Home Connect utilizes a variety of security measures, which are periodically reviewed. For further information you can visit www.home-connect.com

Appliance Safety:

To ensure safe operation of your appliance with Home Connect functionality, please consult the safety information in the appliance instruction manual.

If you have any questions, please visit us at www.home-connect.com

or call 1-800-944-2904

