



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

509441

SOFA

ITEM : 509441



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!





- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

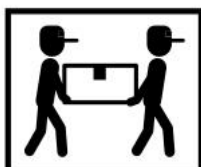


ASSEMBLY TIME

10 MINUTES

   
PARTS IDENTIFICATION

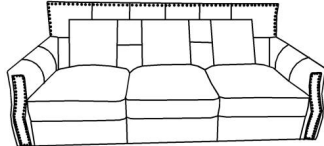A	SOFA		1PC
B	FRONT LEG		2PCS
C	BACK LEG		2PCS
D	MIDDLE LEG		1PC


ITEM : 509441
ASSEMBLY INSTRUCTIONS
STEP 1

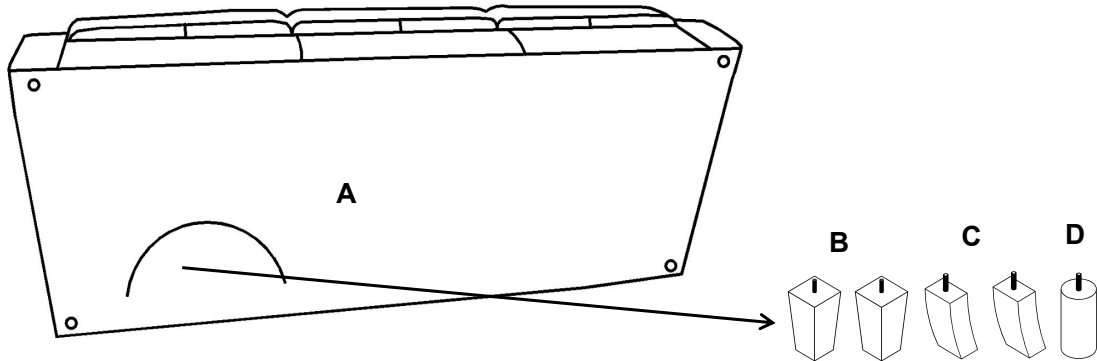


STEP 2

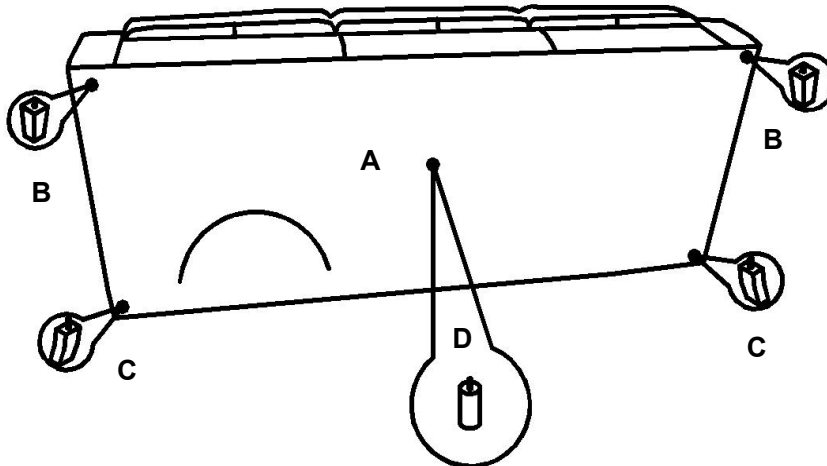

STEP 3

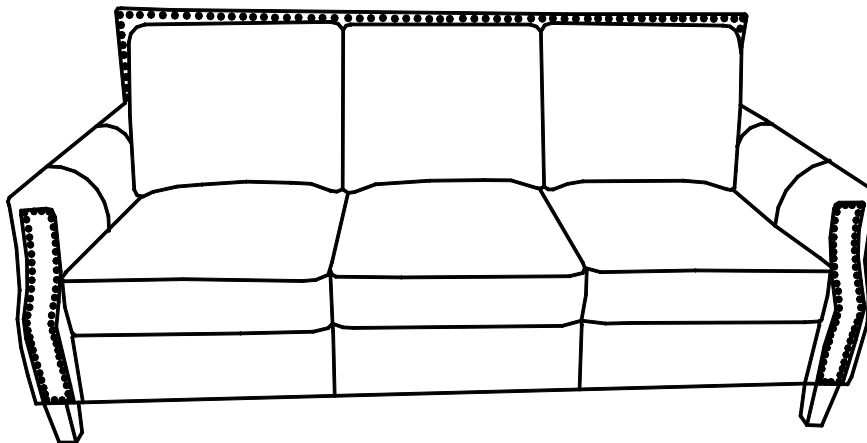

ITEM : 509441

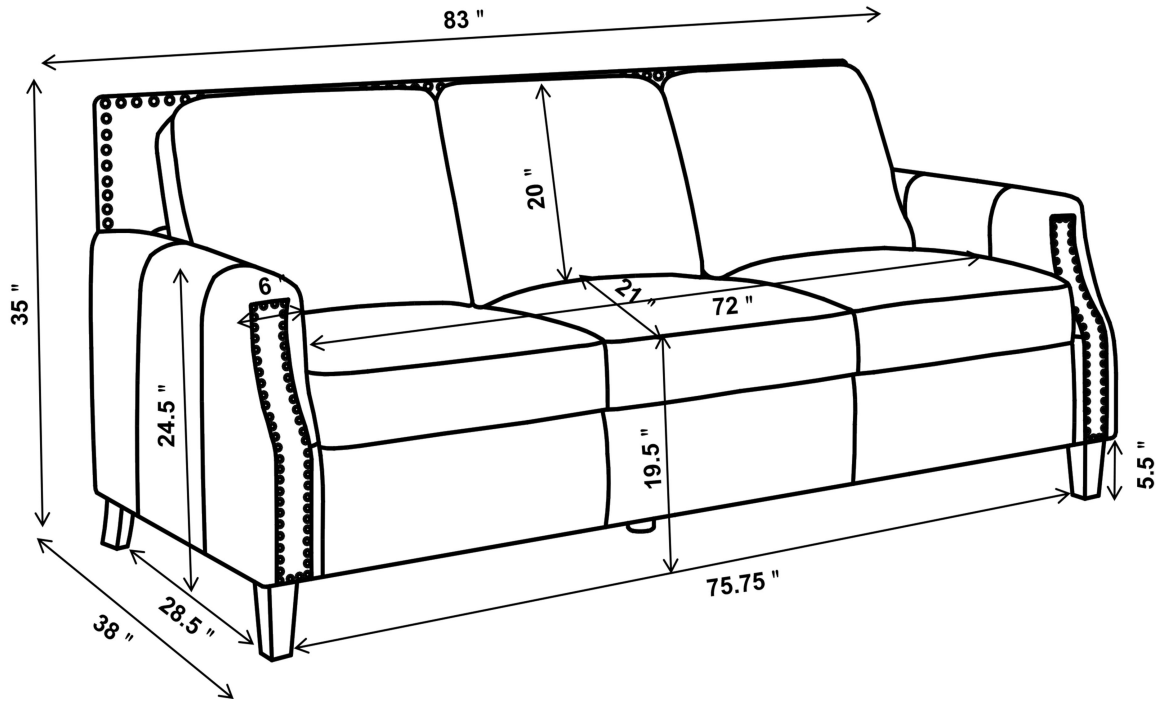

NOTE: Dimension tolerance $\pm 5\%$

