




ELECTRIC WALL OVEN

MODELS:

WOED3030LS00 (Stainless)


CONTROL PANEL PARTS

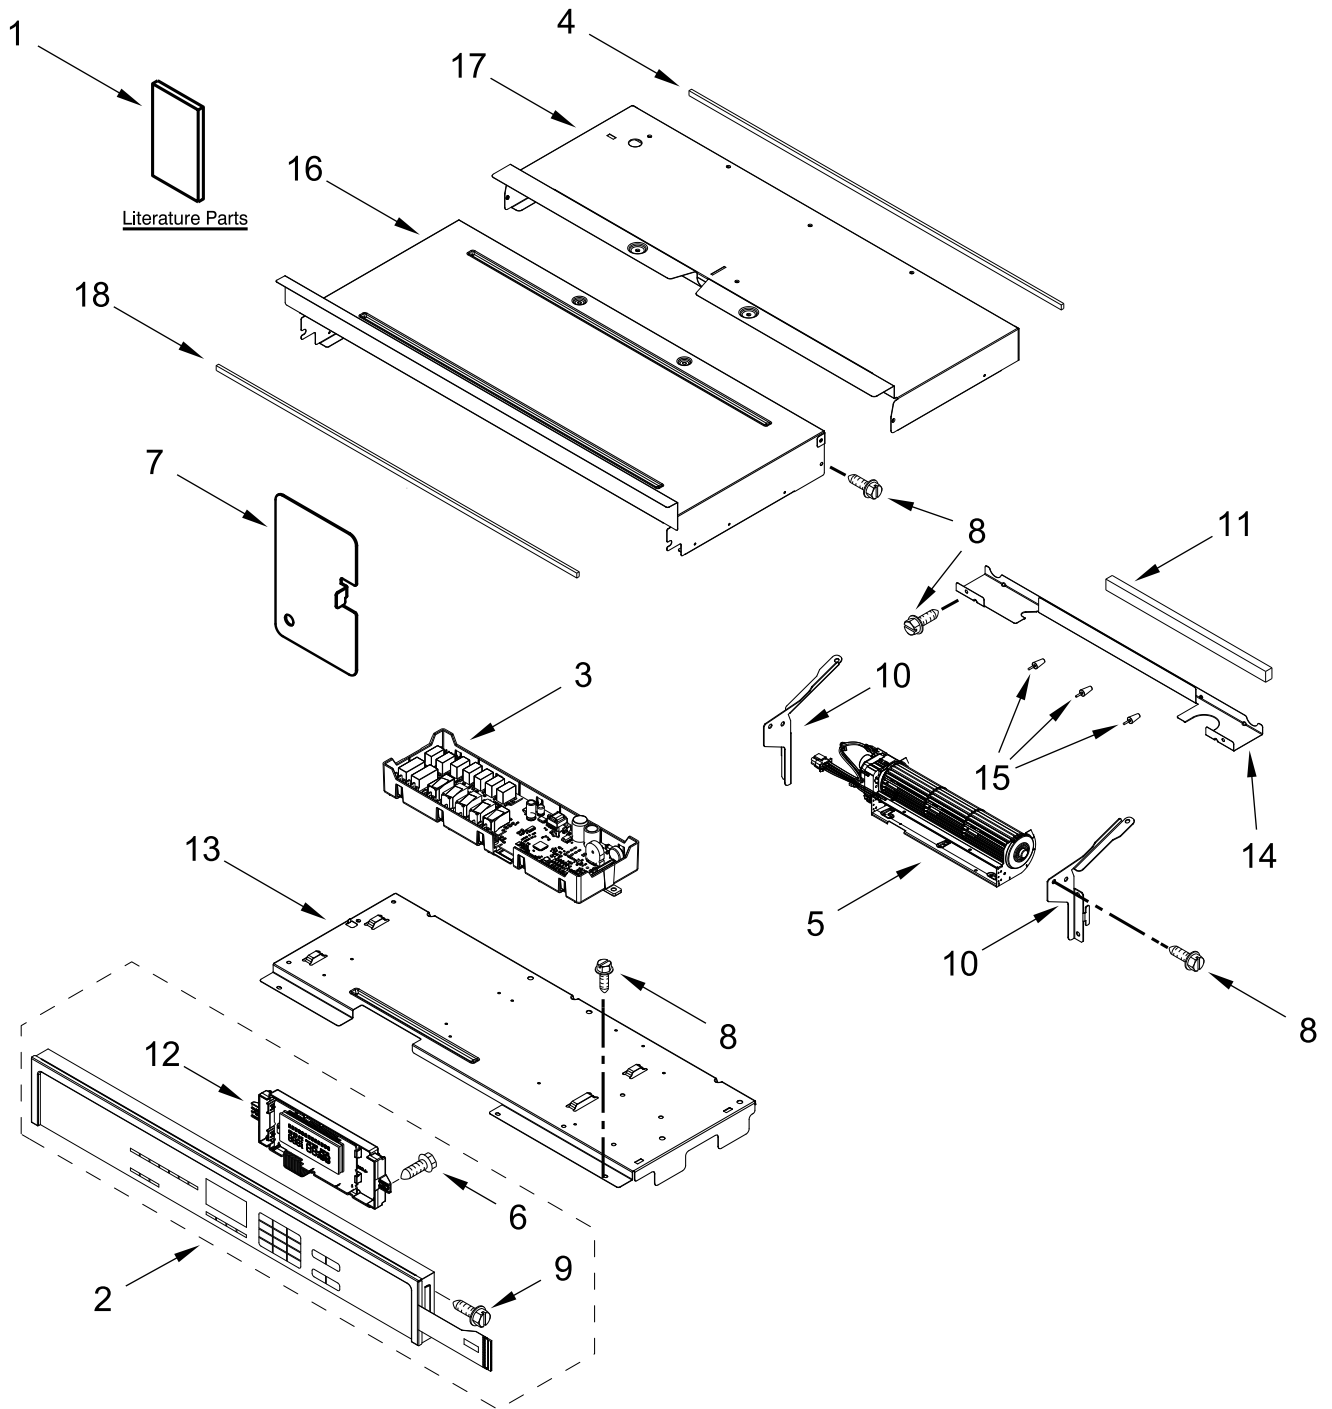

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9	W11339492	Screw (Black)	18	W11162063	Gasket, Rubber
	W11555306	Owner's Manual	10	W10655463	Bracket, Blower (Left)			FOLLOWING PARTS NOT ILLUSTRATED
	W11553919	Quick Start Guide		W10655462	Bracket, Blower (Right)		W11501788	Harness, Main
	W11603861	Tech Sheet	11	4451758	Block, Foam		W11264646	Harness, Door Latch
2		Assembly, Control Panel (Includes Overlay)	12	W10752316	Interface (Maxwell), User Board		W10409840	Harness, EOL (MRC)
	W11467622	Black	13	W11179509	Tray, Electronic		W11249912	Harness, Signal
3	W11556521	Control, Maxwell	14	W11166802	Divider, Chassis Back		W11233570	Harness, Console
4	W10728475	Gasket, Rubber	15	W10351295	Bumper		W10487999	Clip, Harness
5	W11397930	Blower	16	W11244445	Cover, 30 IN Chassis Top Front		W10655464	Bracket, Harness
6	7101P403-60	Screw					313438	Clip, Harness
7	W11533682	Cover, WIFI	17	W11223325	Cover, 30 IN Chassis Top Back		4450800	Screw, Grounding
8	7101P426-60	Screw					4448664	Clamp, Conduit
							W11394923	Bag, Hardware


OVEN PARTS

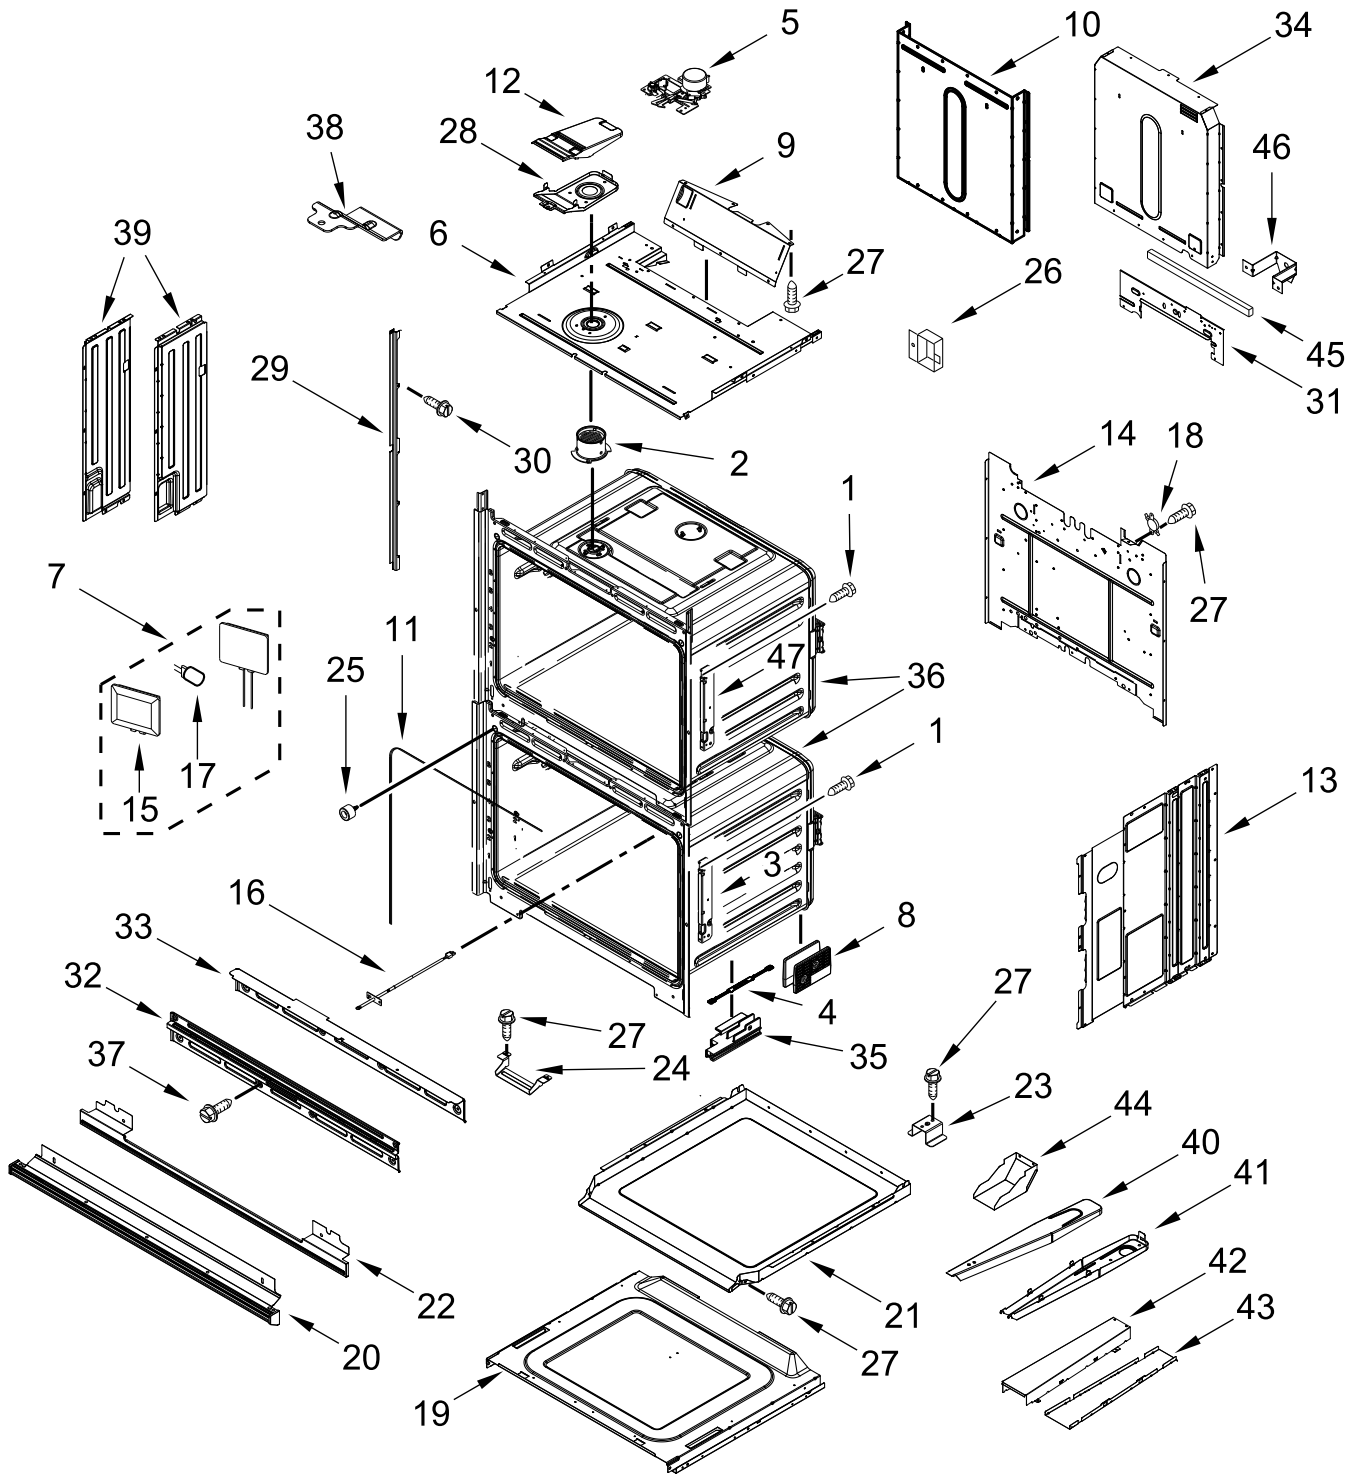

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10254050	Screw	21	W11244446	Duct, Bottom Chassis	39	W11167419	Cover, Suction (Left)
2	W11085298	Tube, Vent	22		Trim, Bottom Vent		W11186675	Cover, Suction (Right)
3	W11239070	Receiver, Hinge (Left)		W11560859	Black	40	W11256421	Cover, Top Back Exhaust
	W11239072	Receiver, Hinge (Right)	23	W11135135	Support, Air Channel	41	W11256420	Base, Top Back Exhaust
		(Lower)	24	W11390667	Spacer, Chassis Bottom Duct	42	W11256431	Cover, Lower Back Exhaust
4	W11558603	Spacer, Base	25	W11166315	Bumper and Screw	43	W11256430	Base, Lower Back Exhaust
5	W11132456	Latch, Motorized	26	8285593	Cover, Connector	44	W11256432	Deflector, Lower Back Exhaust
6	W11168071	Top, Chassis	27	7101P426-60	Screw	45	W11211345	Foam, U-Bracket
7	W11205574	Assembly, Oven Light	28	W11256423	Base, Vent Exhaust	46	W11344645	Hat Bracket, Vent
8	W11245118	Foot, Base	29	W11235460	Cover, Side trim (Left)	47	W11100732	Receiver, Hinge (Upper)
9	W10904163	Deflector, Blower		W11235461	Cover, Side Trim (Right)			FOLLOWING PARTS NOT ILLUSTRATED
10	W11134657	Duct, Lower Chassis Back	30	W11404000	Screw	W11188284		Insulation, Wrap
		(Lower)	31	W11186652	Bracket, U-Shape	W11234758		Insulation, Cavity
11	W11262567	Gasket	32	W11235482	Vent, Center 30"			
12	W11256424	Cover, Vent Exhaust	33	W11334857	Vent, Top 30 IN			
13	W11165274	Side, Chassis	34	W11165250	Duct, Chassis Back (Upper)			
14	W11442209	Back, Chassis	35	W11245114	Foot, Chassis (Left)			
15	W10472386	Lens, Light		W11245116	Foot, Chassis (Right)			
16	W11346074	Probe, Sensor	36		Liner, Oven (Not serviceable)			
17	W10472384	Bulb, Light	37	W11249635	Screw			
18	4449751	Thermostat (TOD)	38	W11342780	Bracket, Top Front			
19	W11135103	Base, Chassis						
20		Assembly, Bottom Vent						
	W11467754	Stainless						


UPPER OVEN DOOR PARTS

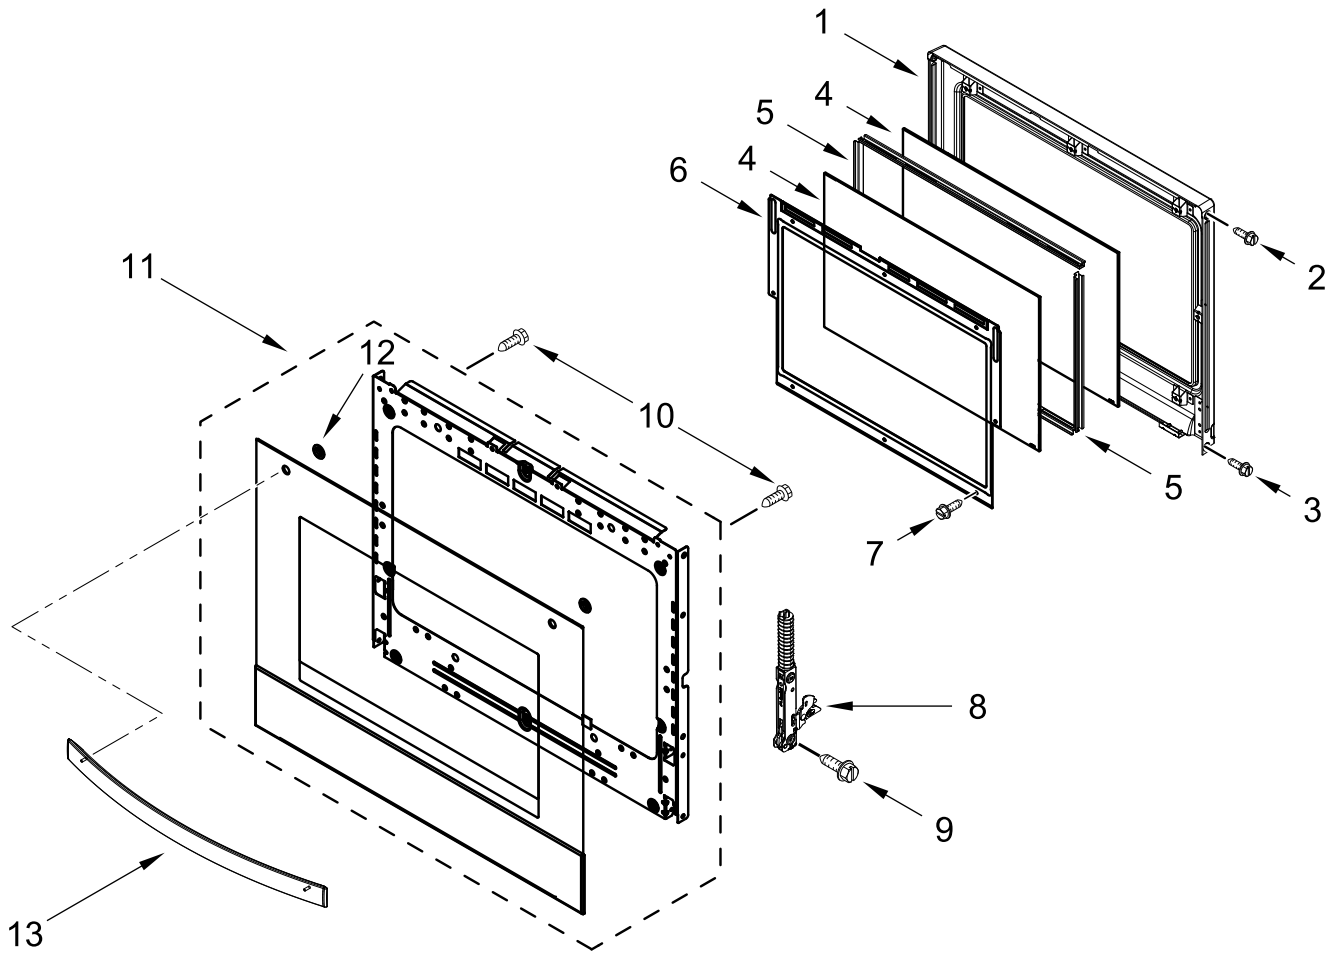

UPPER OVEN DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	7	7101P426-60	Screw	11		Door Assembly
2	7101P375-60	Screw	8	W11394143	Hinge, Door (Left)		W11499216	Stainless
3	W11290045	Screw		W11394144	Hinge, Door (Right)	12	W10319024	Washer, Door
4	W10618107	Glass, Inner				13		Handle Assembly
5	W11302730	Spacer, Air Divider	9	3196183	Screw		W11532517	Stainless
6	W11174095	Retainer, Air Divider Glass	10	W11317731	Screw (Black)			



LOWER OVEN DOOR PARTS

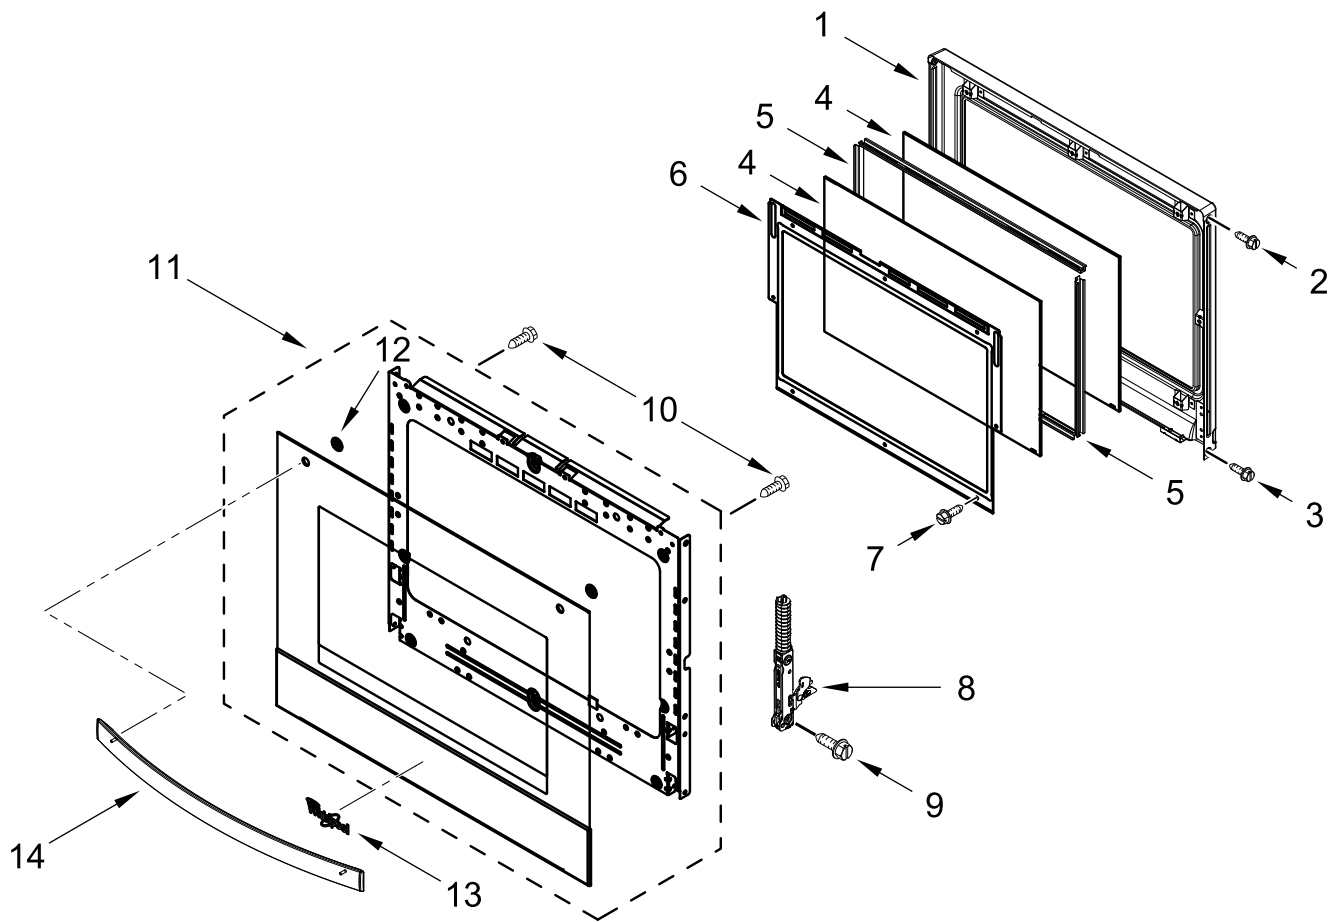

LOWER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	7	7101P426-60	Screw	11		Door Assembly
2	7101P375-60	Screw	8	W11394143	Hinge, Door (Left)		W11499216	Stainless
3	W11290045	Screw		W11394144	Hinge, Door (Right)	12	W10319024	Washer, Door
4	W10618107	Glass, Inner				13	W10884775	Badge
5	W11302730	Spacer, Air Divider	9	3196183	Screw	14		Handle Assembly
6	W11174095	Retainer, Air Divider Glass	10	W11317731	Screw (Black)		W11532517	Stainless

INTERNAL OVEN PARTS

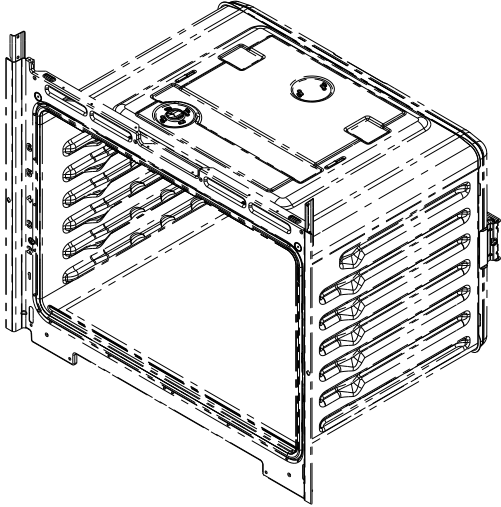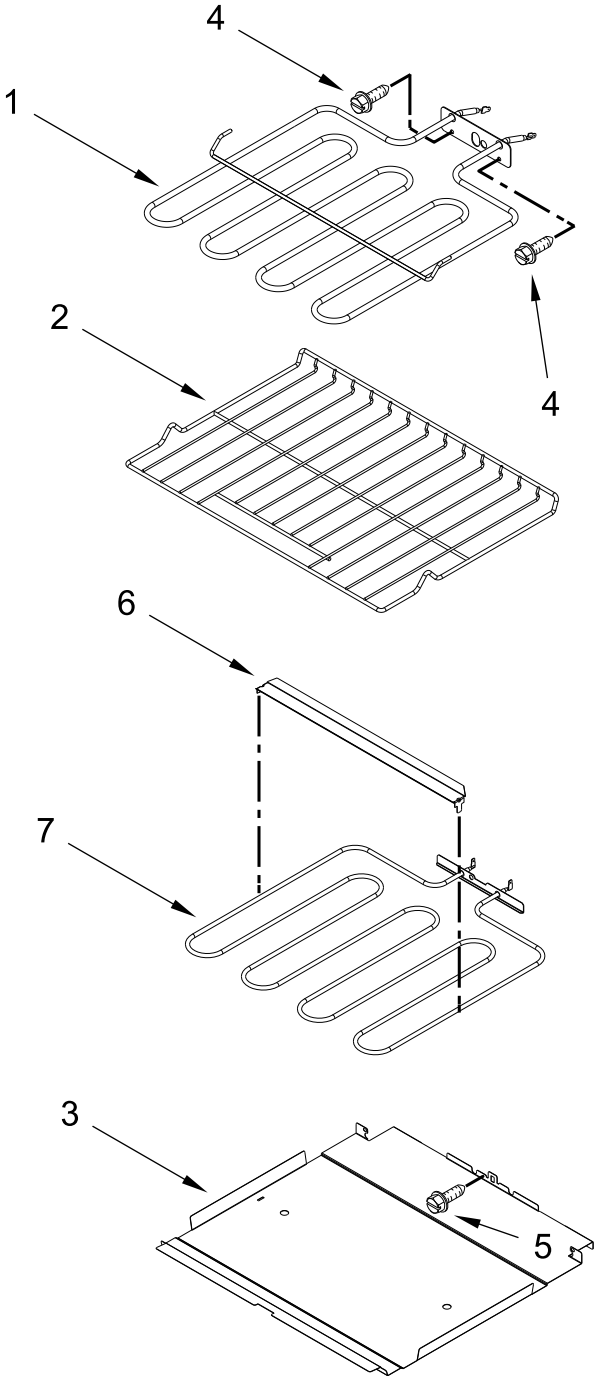

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238160	Element, Broil	4	7101P434-60	Screw	6	W10282957	Crossbar, Hidden Bake Tray
2	W11122597	Rack, Oven	5	7101P426-60	Screw	7	W11292248	Element, Bake
3	W10318198	Tray, Hidden Bake						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
		Trim, Tall Vent
	W11570325	Black
	W11570323	Stainless
		Vent, Deflector
	W11551866	Stainless
		Trim, Bottom Vent
	W11570321	Stainless