



ROKU[®]

Select Series
HD TV

Quick Start Guide

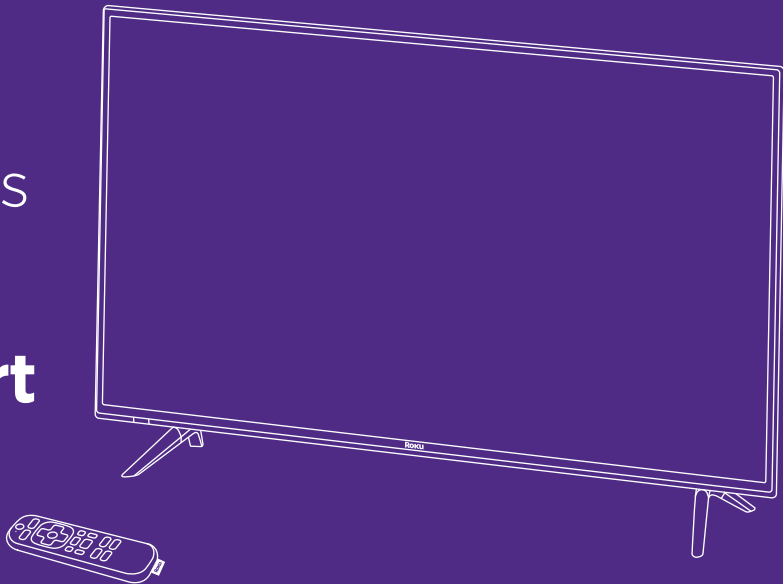


What's included

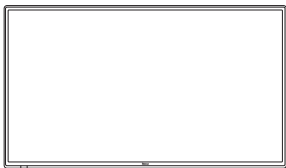


Roku Select Series HD TV



 TV stands



Stand screws
x 4

 


Pre-installed
AAA batteries
x 2



Roku
Voice Remote

 What you need



Phillips head
screwdriver




Laptop or mobile
phone for activation



Wireless
internet connection

STEP 1: Set up your TV

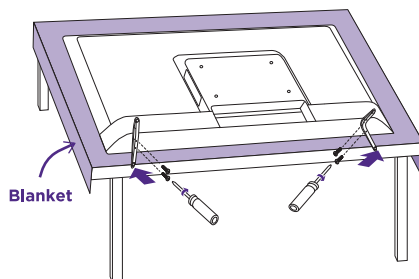

A Prepare a surface

Put a soft covering like a blanket down onto a flat surface and place the TV face down on it.

B Attach the stands

Use a screwdriver and included screws to attach the stands.


Note: Stands labeled “L” and “R” correspond to left and right slots with the TV face down.

C Set TV upright


Place your TV on a stable, flat surface.

Mounting your TV?

For instructions, skip these steps and visit go.roku.com/tvmount

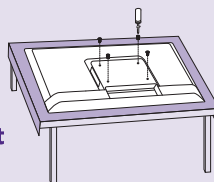


STEP 2: Plug TV in and pair remote

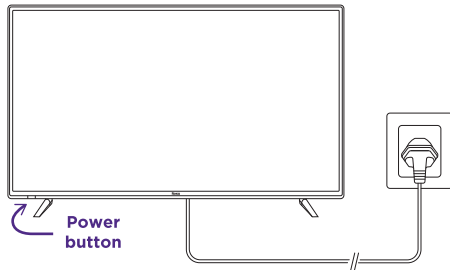

A Connect your TV

Plug your TV into a power outlet. It should turn on automatically. If it doesn't, press the power button.

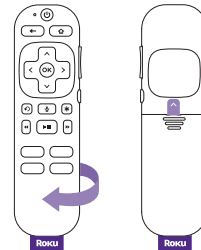

B Pair your remote

Pull out the battery tab on the back of your remote. It will pair to your TV automatically.

Get to know your TV

Video connections

HDMI* - Game consoles, DVD players

Antenna/Cable - Digital antenna, cable connection


Audio connections

HDMI ARC - AV receivers, soundbars (recommended)


Optical (S/PDIF) - AV receivers, soundbars

Other connections

USB - Flash drive

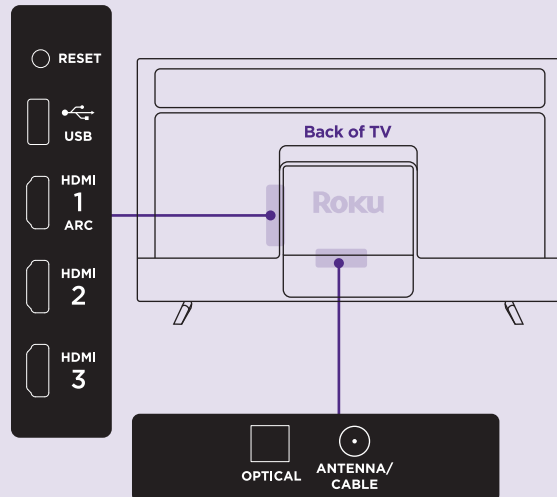

STEP 3: Activate your TV

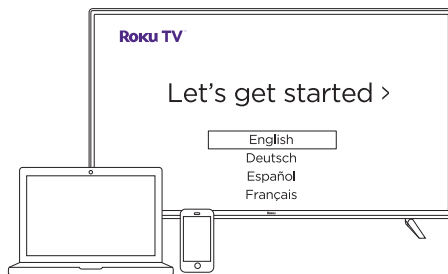

Connect to internet

Follow the instructions on your TV screen. Activate your TV by using your computer or smartphone to link a Roku account.



IMPORTANT

Roku never charges for activation support.

Need help?

For help with setup, video tutorials, and more visit go.roku.com/TV

Remote features



Voice control

Quickly search across thousands of channels, switch inputs, and control your TV with your voice.



Pre-set channel shortcuts


Launch popular streaming channels in just a press.



Options button

On the home screen:
Opens the channel settings menu.

While streaming:
Opens sound and picture settings.

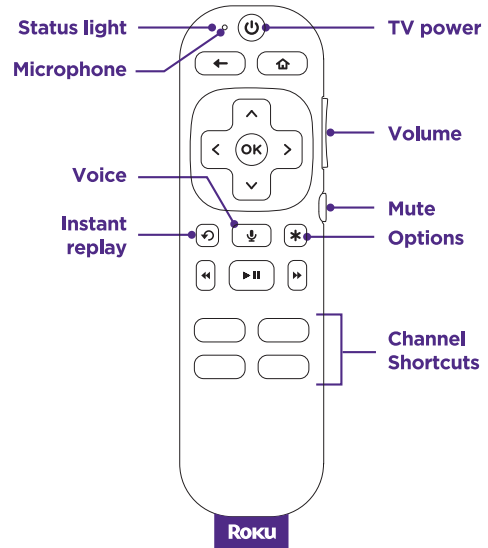



Frequently asked questions

Why do I need an internet connection?

You'll need an internet connection to set up your TV, stream your favorite channels and for automatic software updates.

Having trouble pairing your remote?

If you don't see a remote pairing alert on your TV screen, press and hold the home  and back arrow  buttons for 5 seconds.

Why should I enter a credit card?

Saving a payment method makes it easy to rent or buy movies, subscribe to popular channels, and start free trials in just a click. No charges will be made without your authorization.

What type of voice commands can I use with this remote?

- "Play classic rock"
- "Turn captions on"
- "Launch The Roku Channel"
- "Skip 30 seconds"
- "Show me action movies"

Need help?

For setup help or support, visit or call

go.roku.com/TV

1-816-272-8106

4:00 am - 8:00 pm PT



© 2024 Roku, Inc. All Rights Reserved. Roku, the Roku logo, and the purple d-pad and purple fabric tag designs are trademarks or registered trademarks of Roku, Inc.

4100001074_02