



Count & Swirl Ice Cream Maker™

 


Instruction Manual

This manual contains important information. Please keep it for future reference.

INTRODUCTION

Thank you for purchasing the **Count & Swirl Ice Cream Maker™**. Create sweet treats and learn colors and counting while building listening comprehension and motor skills. Pretend to complete customers orders or create your own frozen desserts, served in a cone or cup.

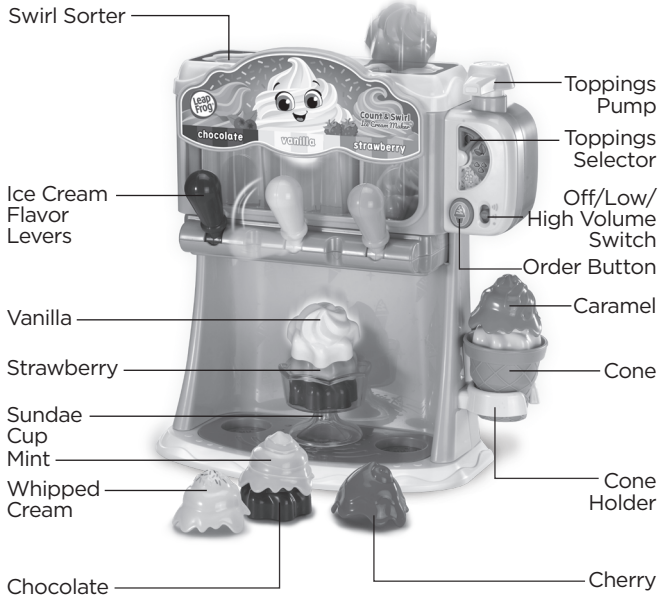

INCLUDED IN THE PACKAGE

- Count & Swirl Ice Cream Maker™



1 ice cream maker



2 chocolate swirls



2 vanilla swirls



2 strawberry swirls



1 cherry topping



1 mint topping



1 caramel topping



1 whipped cream
topping



1 cone



1 sundae cup

- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

 
NOTE

Do not place any object into the ice cream maker other than the swirl pieces provided with the **Count & Swirl Ice Cream Maker™**. Wash the sundae cup thoroughly before and after use.

Veillez à ne pas insérer des objets qui ne sont pas déjà inclus dans cet appareil.

Unlock the Packaging Locks


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

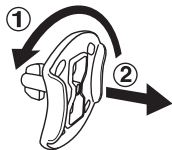

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

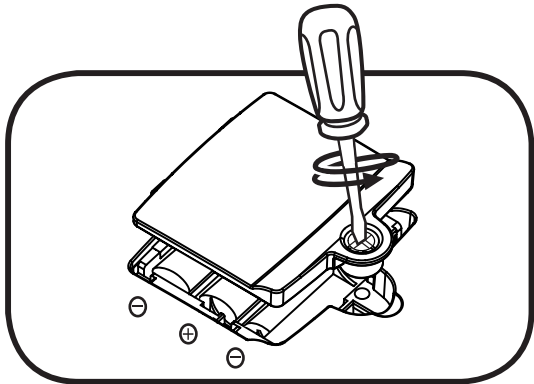



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

 
1. Off/Low/High Volume Switch

To turn the unit **On**, slide the **Off/Low/High Volume Switch** to the Low » or High » position. To turn the unit **Off**, slide the **Off/Low/High Volume Switch** to the Off ● position.



2. Swirl Sorter

Sort ice cream swirls by color or shape to fill the ice cream maker and light up each flavor.

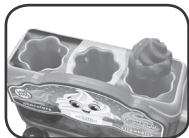

3. Ice Cream Flavor Levers

Pull the **Ice Cream Flavor Levers** to serve ice cream swirls in 3 colorful flavors.



4. Toppings Selector & Toppings Pump

Choose one of 4 toppings by sliding the **Toppings Selector** and hear topping names, colors or count the number of items molded on each topping. Press the **Toppings Pump** down to pretend to add the topping and count along up to 10. Then, place the matching topping piece on top of the ice cream to complete your frozen treat.



5. Order Button

Press the **Order Button** to hear customers' orders, a **Toppings Pump** counting activity, or creative activities.



6. Cone Holder

Place finished treats in the **Cone Holder** to serve customers.



7. Automatic Shut-Off

To preserve battery life, the **Count & Swirl Ice Cream Maker™** will automatically shut off after approximately 100 seconds without input. The unit can be turned on again by pressing the **Order Button**, inserting swirls into the maker, pulling levers, sliding the **Toppings Selector** or pressing the **Toppings Pump**.

SONG LYRICS

Song 1

Ice cream, ice cream,
We're all gonna scream for yummy ice cream.
Stacking flavors,
Chocolate, vanilla and Strawberry. Yeah!

Song 2

Try a topping, it's a sweet sensatoin.
Tart cherry syrup or icy mint.
Caramel and whipped cream too.
That's all we do. This ice cream sundae's for you!

Song 3

Pump, pump it up!
Choose a flavor, pump it up!
How many times should we pump, pump it up?
[Number 3-10]
Ok, here we go PUMP!

Song 4

Oh, ice cream
So dreamy delicious
You're a sweet and tasty treat!

Song 5

Every little taste, (Mmm, so dreamy!)
I can't think of a better treat than this!
Let's serve some today!

Song 6

Soft and swirly,
Such a cool and twirly delight!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **off** and back **on**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®
Model: 6190
Product Name: Count & Swirl Ice Cream Maker™
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell St., Suite 500
Emeryville, CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.



*Visit our website for more
information about our products,
downloads, resources and more.*

leapfrog.com

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.

© 2024 LeapFrog Enterprises, Inc.

All rights reserved.

Printed in China

IM-619000-000

Version:0