



ELECTRIC WALL OVEN


MODELS:

WOED5027LB00 (Black)

WOED5027LW00 (White)

WOED5027LZ00 (Stainless)


CONTROL PANEL PARTS

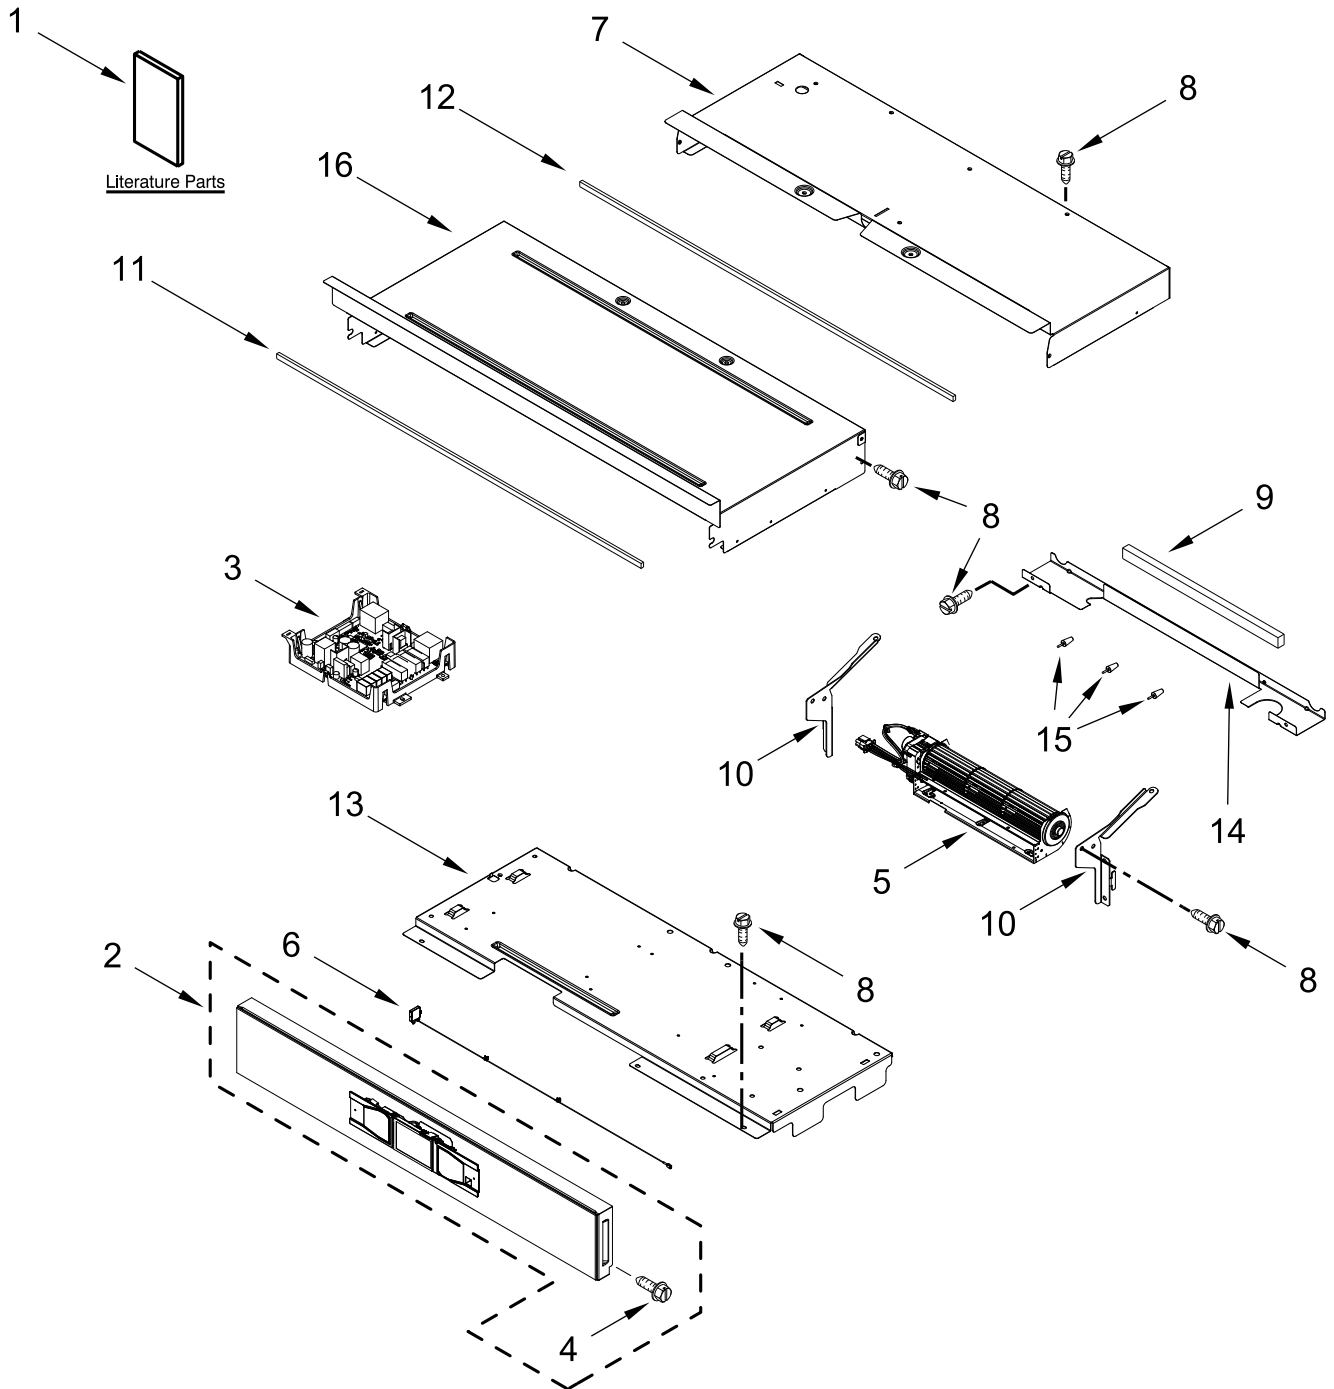

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11397930	Blower	16	W11244469	Cover, Top Front 27 IN Chassis
	W11555306	Owner's Manual	6	W11409842	Antenna			
	W11553919	Quick Start Guide	7	W11244459	Cover, Top Back 27 IN Chassis			FOLLOWING PARTS NOT ILLUSTRATED
	W11601391	Tech Sheet	8	7101P426-60	Screw	W11464640		Harness, Main
2		Assembly, Control Panel (Includes Overlay)	9	4451758	Block, Foam	W11245677		Harness, Signal
	W11467970	Black (Used in Black and Stainless Models)	10	W10655463	Bracket, Blower (Left)	W11264646		Harness, Door Latch
	W11568107	White		W10655462	Bracket, Blower (Right)	W10562910		Harness, EOL
3	W11585754	Control, Copernicus	11	W11162062	Gasket, Rubber (652 MM)	W11132988		Strap, Lead Ground
	W11585756	Control, Copernicus (Without Power Supply)	12	W10728475	Gasket, Rubber	4448664		Clamp, Conduit
4	W11339492	Screw (Black)	13	W11179509	Tray, Electronic	W10655464		Bracket, Harness
			14	W11166802	Divider, Chassis Back	313438		Clip, Harness
			15	W10351295	Bumper	4450800		Screw, Grounding
						W10487999		Clip, Harness
						W11394923		Bag, Hardware


OVEN PARTS

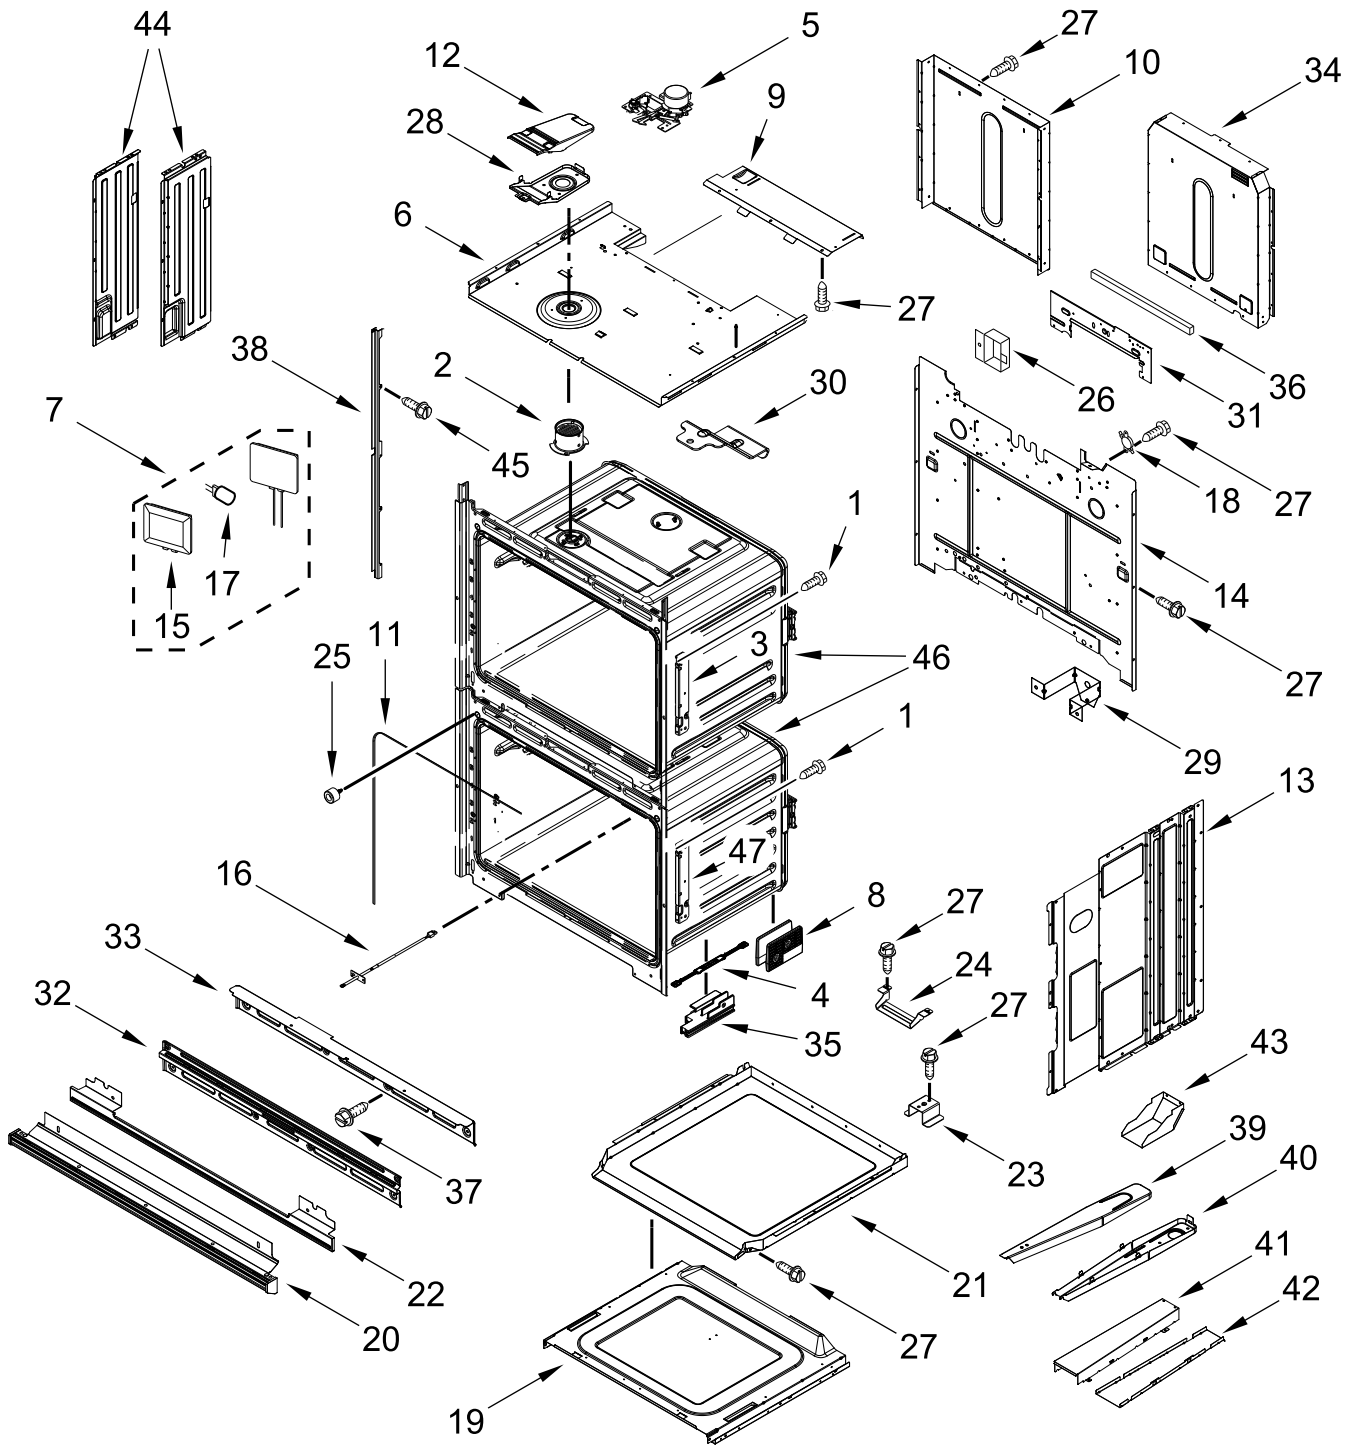

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10254050	Screw	22		Trim, Bottom Vent	40	W11256420	Base, Top Back Exhaust
2	W11085298	Tube, Vent		W11560860	Black			
3	W11100732	Receiver, Hinge (Upper)	23	W11135135	Support, Air Channel	41	W11256431	Cover, Lower Back Exhaust
4	W11558603	Spacer, Base	24	W11390667	Spacer, Chassis Bottom Duct	42	W11256430	Base, Lower Back Exhaust
5	W11132456	Latch, Motorized	25	W11166315	Bumper and Screw	43	W11256432	Deflector, Lower Back Exhaust
6	W11244456	Top, Chassis	26	8285593	Cover, Connector			
7	W11205574	Assembly, Oven Light	27	7101P426-60	Screw	44	W11167419	Cover, Suction (Left)
8	W11245118	Foot, Base	28	W11256423	Base, Vent Exhaust		W11186675	Cover, Suction (Right)
9	W10904163	Deflector, Blower	29	W11344645	Hat Bracket, Vent	45	W11404000	Screw
10	W11134657	Duct, Lower Chassis Back	30	W11342780	Bracket, Top Front	46		Liner, Oven (Not Serviceable)
11	W11608109	Gasket, Cavity	31	W11186652	Bracket, U-Shape	47	W11239070	Receiver, Hinge (Left)
12	W11256424	Cover, Vent Exhaust	32	W11235483	Vent, Center 27"		W11239072	Receiver, Hinge (Right)
13	W11165274	Side, Chassis	33	W11334858	Vent, Top 27 in			(Lower)
14	W11442210	Back, Chassis	34	W11165250	Duct, Chassis Back			FOLLOWING PARTS NOT ILLUSTRATED
15	W10472386	Lens, Light			(Upper)			
16	W11346074	Probe, Sensor	35	W11245114	Foot, Chassis (Left)			
17	W10472384	Bulb, Light		W11245116	Foot, Chassis (Right)		W11244474	Insulation, Wrap
18	4449751	Thermostat (TOD)					W11244475	Insulation, Back
19	W11244454	Base, Chassis	36	W11211345	Foam, U-Bracket			
20		Assembly, Bottom Vent	37	W11249635	Screw			
	W11467807	Black (Used in Black and White Models)	38	W11235460	Cover, Side trim (Left)			
				W11235461	Cover, Side Trim (Right)			
	W11467824	Stainless	39	W11256421	Cover, Top Back Exhaust			
21	W11244446	Duct, Bottom Chassis						


UPPER OVEN DOOR PARTS

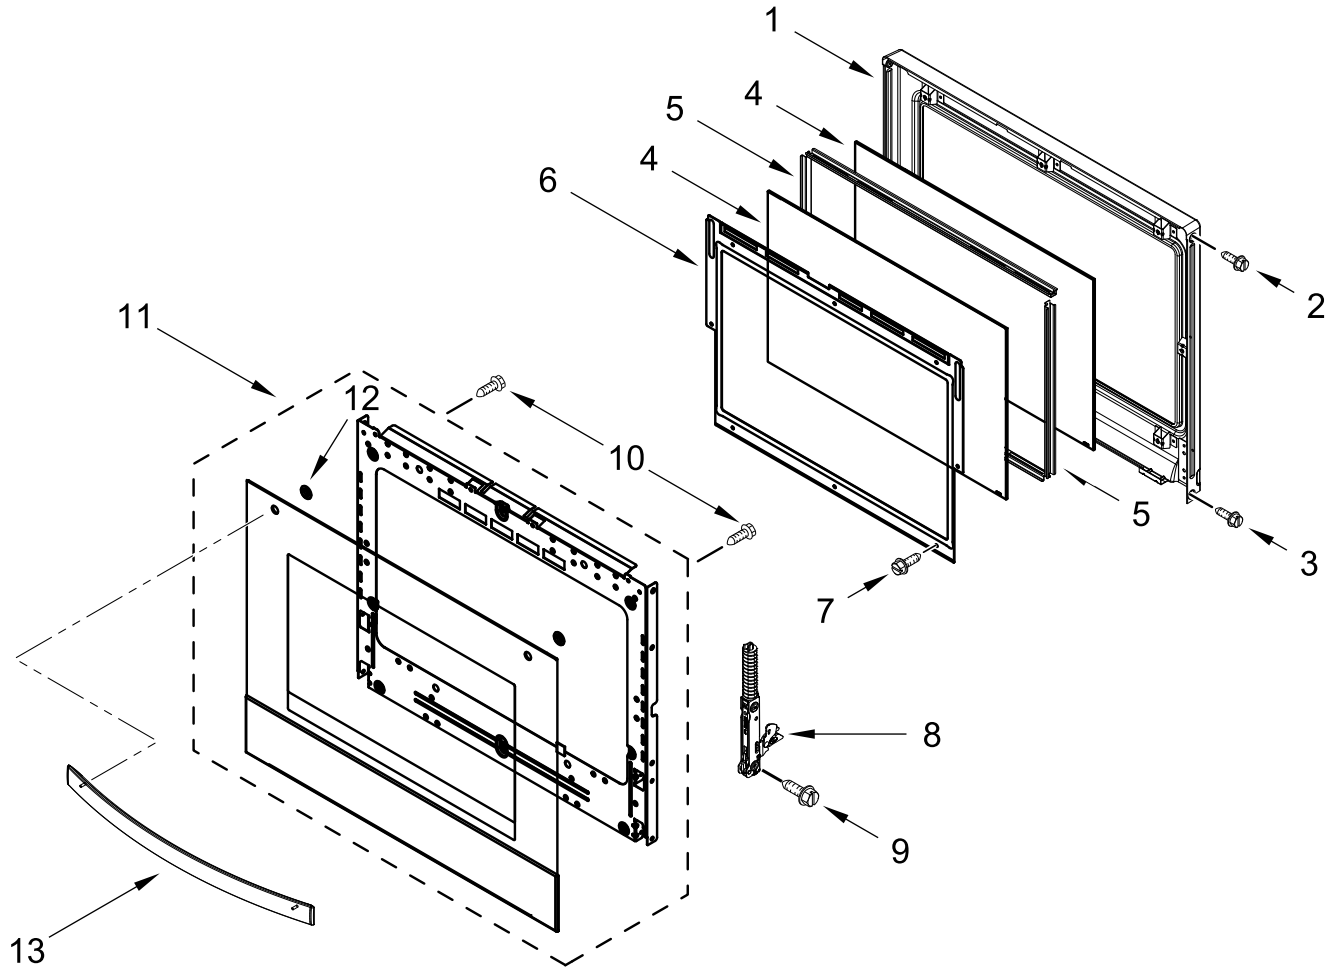

UPPER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302593	Liner Assembly	8	W11470044	Hinge, Door (Left)	12	W10319024	Washer, Door
2	7101P375-60	Screw		W11470045	Hinge, Door (Right)	13		Handle Assembly
3	W11290045	Screw	9	3196183	Screw		W11548016	Black
4	W10618123	Glass, Inner	10	W11317731	Screw (Black)		W11660150	White
5	W11302731	Spacer, Air Divider	11		Door Assembly		W11532601	Stainless
6	W11204277	Retainer, Air Divider Glass		W11499374	Black			
7	7101P426-60	Screw		W11499376	White			
				W11499375	Stainless			


LOWER OVEN DOOR PARTS

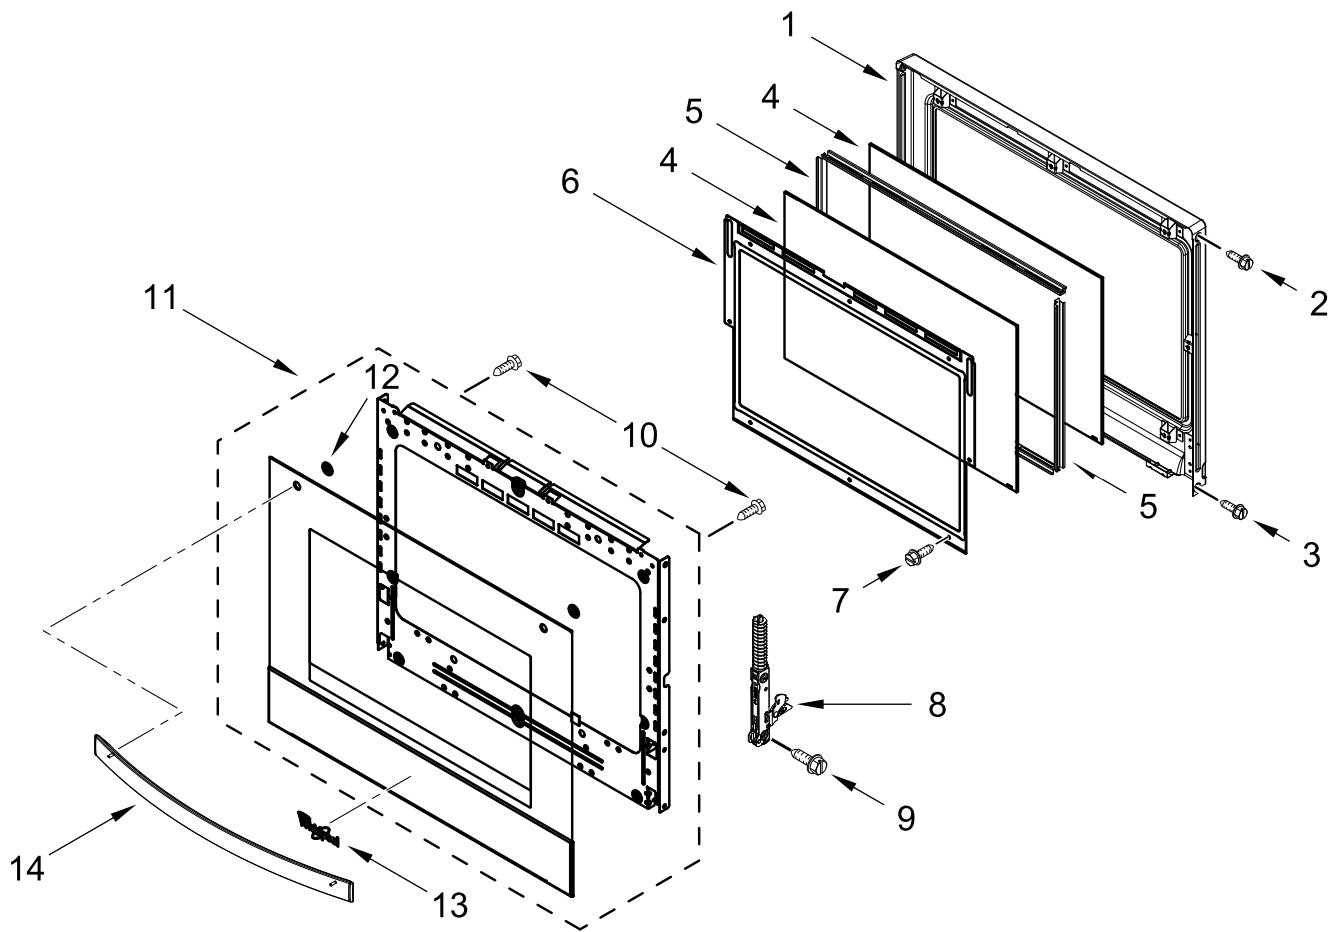

LOWER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302593	Liner Assembly	8	W11470044	Hinge, Door (Left)	12	W10319024	Washer, Door
2	7101P375-60	Screw		W11470045	Hinge, Door (Right)	13	W10884775	Badge
3	W11290045	Screw	9	3196183	Screw	14		Handle Assembly
4	W10618123	Glass, Inner	10	W11317731	Screw (Black)		W11548016	Black
5	W11302731	Spacer, Air Divider	11		Door Assembly		W11660150	White
6	W11204277	Retainer, Air Divider Glass		W11499374	Black		W11532601	Stainless
7	7101P426-60	Screw		W11499376	White			
				W11499375	Stainless			

INTERNAL OVEN PARTS

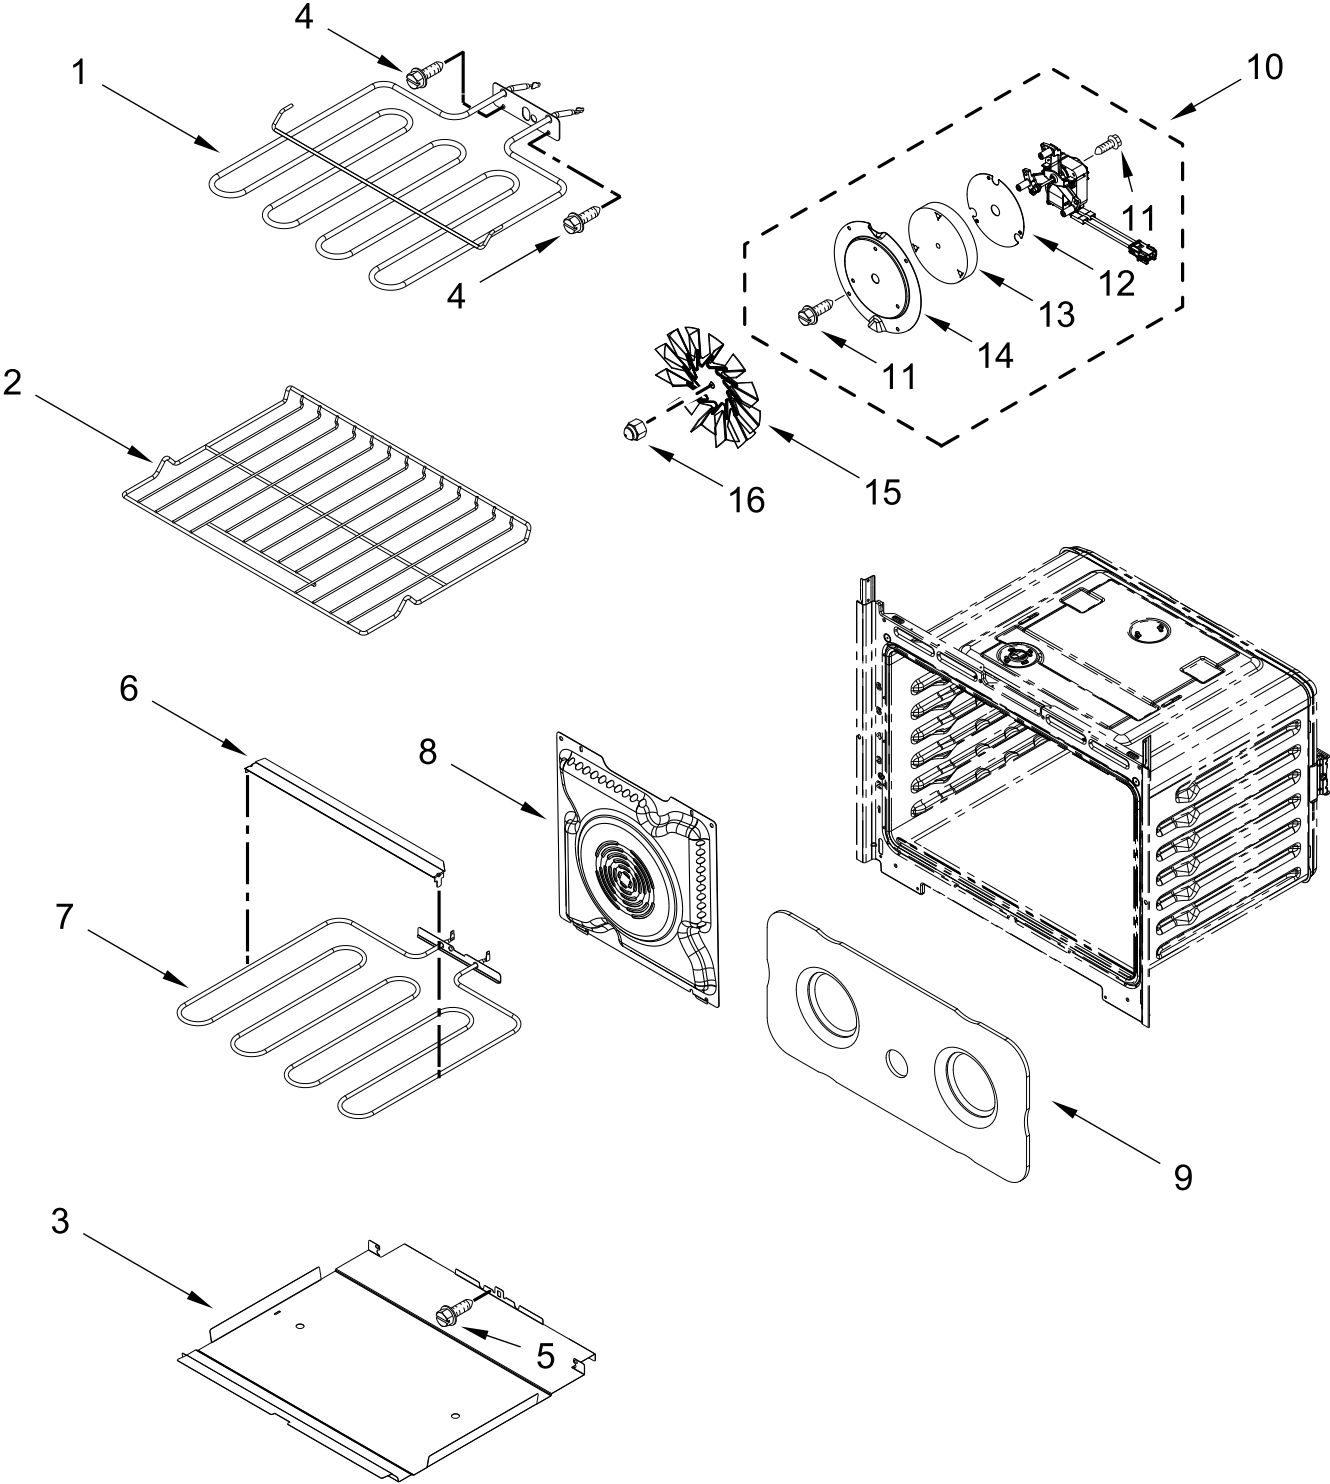

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238160	Element, Broil	8	W10359278	Baffle, Convection	14	W11398057	Cover, Convect Plate
2	W10317431	Rack, Oven	9	W11489860	Plate, Ring Element	15	W11425715	Blade, Fan
3	W10318198	Tray, Hidden Bake	10	W11398058	Convect Motor Assembly	16	W11433702	Nut, Acorn (LH)
4	7101P434-60	Screw	11	W10720084	Screw			
5	7101P426-60	Screw	12	W11251715	Plate, Convect Motor			
6	W10282957	Crossbar, Hidden Bake Tray	13	W11251716	Insulation, Convect Motor			
7	W11292248	Element, Bake						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORY PARTS
		Trim, Tall Vent
	W11570326	Black
	W11570324	Stainless
		Trim, Bottom Vent
	W11570322	Stainless
		Deflector, Heat
	W11594554	Black
	W11551865	Stainless