

### ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

# 953416 <u>Accent Cabinet</u>

### ITEM:953416

### **ASSEMBLY INSTRUCTION**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### Warning!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.





ATTENTION:Anti tipping safeguard, Please install the Anti tipping hardware as shown in the drawing this can help to prevent any tipping issues.

ASSEMBLY TIME PER UNIT	5 MINUTES

#### **Z99 HARDWARE IDENTIFICATION**

NO.	DESCRIPTION	FIGURE	SIZE	QTY
1	PLUG			2PC
2	LARGE SCREW	<del> </del>	Ø8×2"	1PC
3	TIGHTWIRE		280mm	1PC
4	SHORT SCREW	Эзинин	Ø8×3/4"	1PC

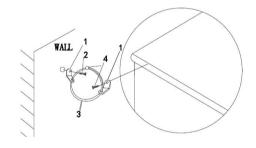

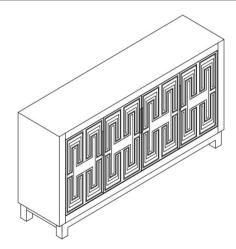

#### FURNITURE TIPPING RESTRAINT

#### **WARNING**

Injury may result from tipping furniture.

This restraint may protection against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.


Failure to detach this restraint before moving the furniture may result in injury and damage.

## ITEM:953416

# **ASSEMBLY INSTRUCTION**



PRODUCT/PART DIMENSIONS:

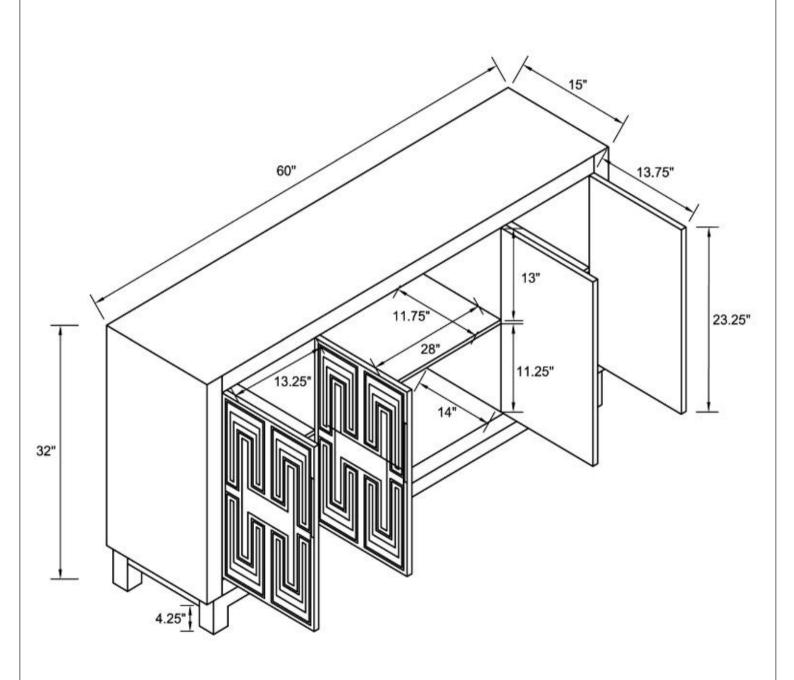

Note:Dimension tolerance±5%