



# Touch & Learn Wooden Activity Cube™

 
 
 


## Instruction Manual

This manual contains important information. Please save it for future reference.

# INTRODUCTION

Thank you for purchasing the **Touch & Learn Wooden Activity Cube™**! Take a trip around the block exploring five fun sides full of activities. Discover shapes, colors, numbers and animals. Explore five musical styles and play with different instrument sounds.

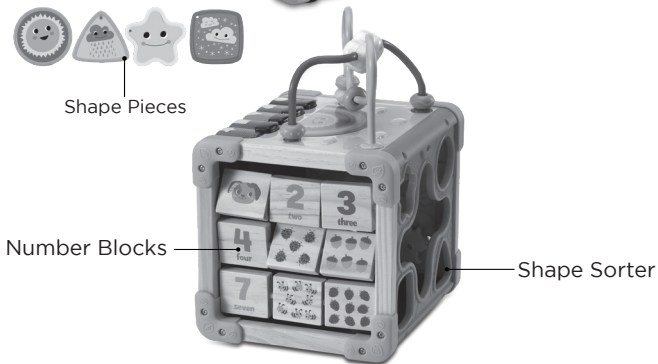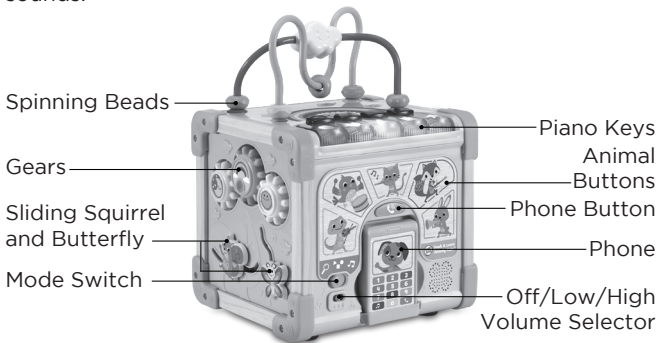

# INCLUDED IN THIS PACKAGE

- Touch & Learn Wooden Activity Cube™
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

## ATTENTION

 
Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

### Unlock the Packaging Locks


- ① Rotate the packaging lock 90 degrees counterclockwise.
- ② Pull out the packaging lock and discard.

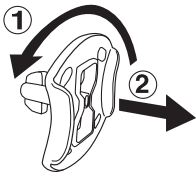

# GETTING STARTED

## BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a coin or screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

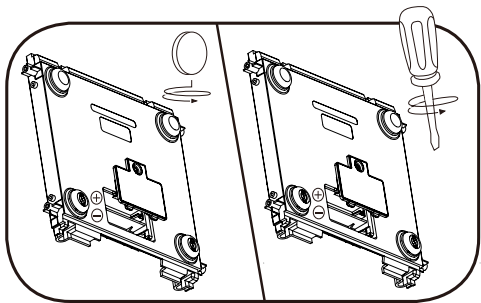

### **⚠ WARNING:**

Adult assembly required for battery installation.

Keep batteries out of reach of children.

### **⚠ ATTENTION:**

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## **NOTE**

If the unit powers down or if the light fades out during play, please install a new set of batteries.

# PRODUCT FEATURES

## 1. Off/Low/High/Volume Selector

To turn the unit On, slide the **Off/Low/High Volume Selector** to the Low or High position. To turn the unit Off, slide the **Off/Low/High Volume Selector** to the Off position.



 
## 2. Mode Switch

Slide the **Mode Switch** and press the **Piano Keys** and **Animal Buttons** to explore colors, shapes and musical instruments.




## 3. Spinning Beads

Spin the cloud and slide the beads around the sky. Press down on the maze to hear learning phrases about the weather.

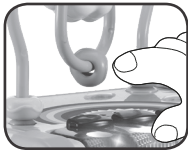


## 4. Spinning Gears

 Spin the three colorful, interlocking **Gears**.

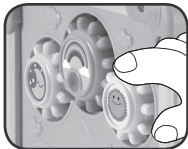

## 5. Sliding Squirrel and Butterfly

 Slide the **Squirrel** and **Butterfly** along their paths.

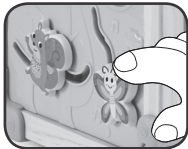


## 6. Spinning Number Blocks

Flip the nine **Number Blocks** to explore numbers and quantities of nature-themed items.




## 7. Shapes and Shape Sorter

 Fit the four **Shape Pieces** through the holes to explore shapes and build motor skills.

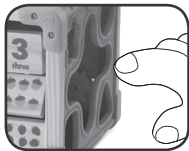


## 8. Piano Keys

 Press the five **Piano Keys** to hear five different notes in a scale. Press the musical **Animal Buttons** in Music mode to choose different instruments for the **Piano Keys** to play.

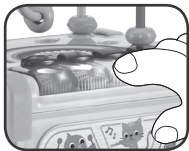

## 9. Musical Animal Buttons

 Press the five colorful **Animal Buttons** to hear five different animal names, musical instruments and music styles.

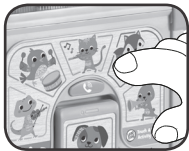

## 10. Portable Phone

Take the **Portable Phone** on the go.



## 11. Phone Button


Press the **Phone Button** to hear learning questions and to chat with Dog.






# ACTIVITIES


## 1. Explore Mode

Slide the **Mode Switch** to Explore mode (  ). Press the **Animal Buttons** to hear phrases about colors and animal names. Press the **Piano Keys** to hear songs about color names. Press the **Phone Button** to hear Dog ask search-and-find questions about items on the cube.

## 2. Learn Mode

Slide the **Mode Switch** to Learn mode (  ). Press the **Animal Buttons** to hear phrases about musical instruments and styles of music. Press the **Piano Keys** to hear shape names. Press the **Phone Button** to hear Dog ask search-and-find questions about numbered sets of items on the cube.

## 2. Music Mode

Slide the **Mode Switch** to Music mode (  ). Press the **Animal Buttons** to hear musical phrases featuring five instruments. Press the **Piano Keys** to hear five musical notes. The **Piano Keys** will play the instrument pictured on the **Animal Button** that was most recently pressed. Choose from violin, drum, flute, guitar or trumpet. Press the **Phone Button** to hear fun greetings from Dog.

# Song Lyrics

## Song 1

Let's play outside,

What do you see?

A flower, a fox and a bumble bee!

Come along and play with me!

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit is still not working properly, install a brand new set of batteries.

## Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **off** and back **on**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

## Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

### **IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## **CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Supplier's Declaration of Conformity

### 47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®  
Model: 6171  
Product Name: Touch & Learn Wooden Activity Cube™  
Responsible Party: LeapFrog Enterprises, Inc.  
Address: 2200 Powell St., Suite 500  
Emeryville, CA 94608  
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) L'appareil ne doit pas produire de brouillage;

(2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



***Visit our website for more  
information about our products,  
downloads, resources and more.***

***leapfrog.com  
leapfrog.ca***

**Read our complete warranty policy online at  
[leapfrog.com/warranty](http://leapfrog.com/warranty)  
[leapfrog.ca/warranty](http://leapfrog.ca/warranty)**

LeapFrog Enterprises, Inc.  
A subsidiary of VTech Holdings Limited.  
TM & © 2023 LeapFrog Enterprises, Inc.  
All rights reserved.  
IM-617100-000  
Version:0