

ontrac

User manual

SV12 JN.00000 PN.000000-00-00
00.00.00 VERSION NO.01



Contents

In the box

Download the MyDyson™ app

Get to know your headphones

Turning on and pairing
your headphones

Battery and LED behavior

Controlling audio

Active noise cancellation

In-flight adaptor

Configuring your headphones

Cleaning your Dyson OnTrac™
headphones

dyson

In the box

 
Some accessories may not be included.
You can buy additional accessories at
www.dyson.com



Dyson OnTrac™ noise-cancelling headphones



OnTrac™ Slimline case

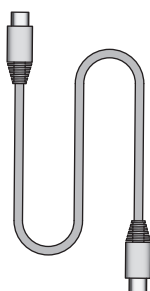

USB-C cable

Download the MyDyson™ app


An essential part of your experience, the MyDyson™ app lets you control your Dyson OnTrac™ noise-cancelling headphones – wherever you are. If you haven't already, download the app now for extra features and the latest updates.

Download the MyDyson™ app from the App Store or Google Play. Open the app and follow the on-screen instructions to create a new account.



Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google Inc.

 Get to know your headphones

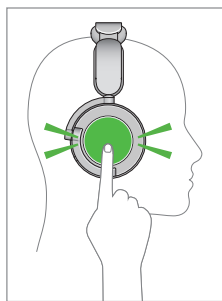

Active noise cancellation
To switch between modes, double tap either ear cup.

 


Download the MyDyson™ app
See sound and air quality reports for your location, in real time. And adjust EQ modes to optimize your listening.


Adjust your headphones
Put your headphones on.
Adjust the headband, sliding both sides until you have a comfortable fit.

Power button
Turn your headphones on and off, and connect to a Bluetooth® wireless technology device. Hold for two seconds to turn on or off, and five seconds to pair.

Autopause/Play
Your headphones will automatically pause your audio when you take them off, and automatically play your audio when you put them back on.

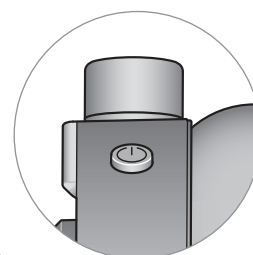


 Battery-saving head detect
After 30 minutes of inactivity your headphones will automatically turn off to save battery. To turn them back on, hold the power button down for 2 seconds.

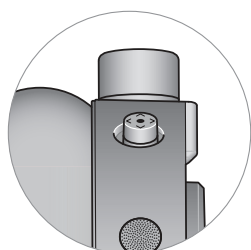

Joystick
Lets you control music, adjust volume and access your voice assistant – on the back of your right ear cup.

 Ergonomic ear cup
Angled at minus 13° and oval-shaped to sit over the ear.

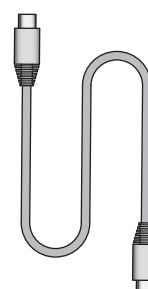

USB-C charger
Charge your headphones using the USB-C Cable.

Turning on and pairing your headphones

Pairing your headphones is easiest with the MyDyson™ app.

Connecting to the MyDyson™ app

Download the MyDyson™ app from the App Store or Google Play. Open the app and follow the on-screen instructions to create a new account.


If you already have an account, select 'Add machine' and follow the instructions.



Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google Inc.

Press and hold the Power button

 After two seconds, the LED light will turn white to show that your headphones are on.

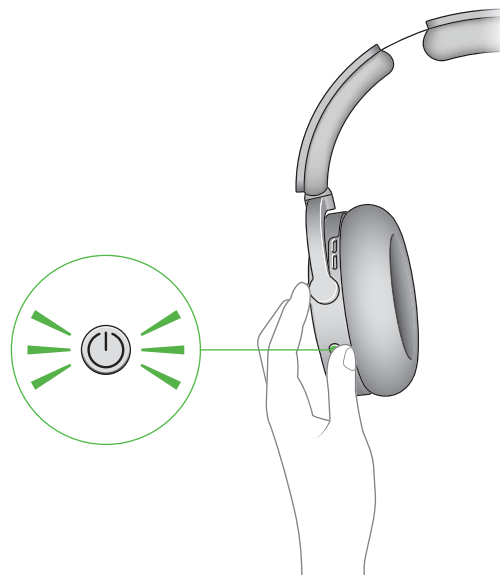


Connect using Bluetooth® wireless technology¹

Press and hold the Power button for five seconds. The LED will flash blue when in pairing mode.

Note: Before flashing blue, the LED will flash white and you will hear an off tone, continue holding the Power button through this.

Open Bluetooth® in your mobile device's settings menu. Check that Bluetooth® is turned on and select 'Audio OnTrac' to connect to your headphones.

 Your MyDyson™ app will alert you when pairing is complete.

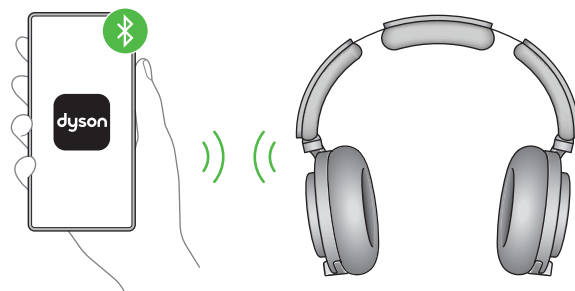

1. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Dyson is under license.

 
Battery and LED behavior

Battery life

Up to 55 hours of listening, even with ANC switched on. And if you're running low, a 10-minute charge delivers 2.5 hours of battery, and a 30-minute charge delivers 9 hours.

LED

Locate the charge indicator at the front center of the left ear cup.

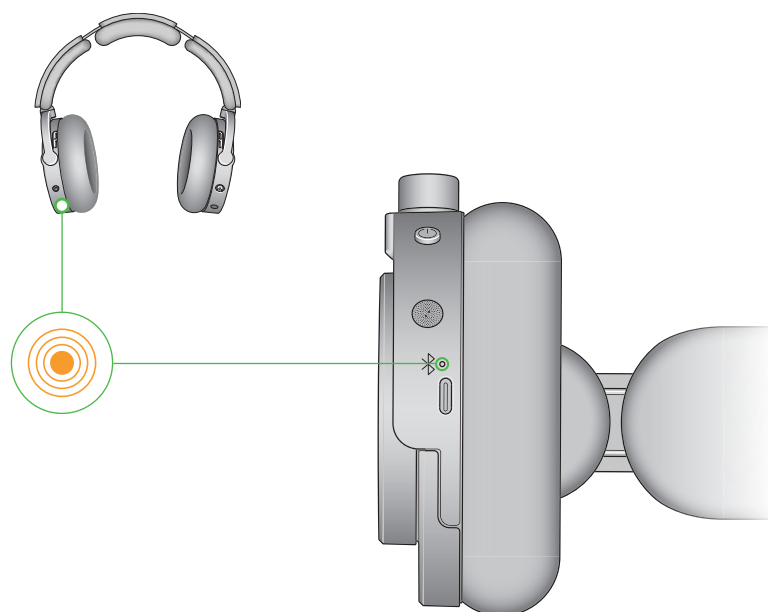

Battery

Battery is more than 10% charged

The LED will turn green.



Low battery

If the battery is under 10% charged, the LED will flash amber for 5 seconds.



Auto power off

When the product turns off after 30 minutes of inactivity, you will see a white LED.



Charging

When connected to a power supply and charging, the LED will pulse amber. When fully charged the LED will turn green and then fade to off.



Bluetooth® wireless technology¹

Bluetooth® in discoverable mode¹

Blue LED – continuous pulse.



Bluetooth® successfully connected¹

Blue LED – continuous pulse ends. Audio – welcome tone.



Alerts

Seek Dyson support

Red LED – flash for 5 seconds



Update installing

White LED – pulsed flashing



1. The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Dyson is under license.

Controlling audio

 
To play audio through your headphones, you'll need to either connect them using Bluetooth® or the in-flight adaptor cable.

Use the intuitive joystick

Control your audio using the MyDyson™ app or the joystick on the back of your right ear cup.

Play and pause

Press the middle of the joystick to play.
Press it again to pause.

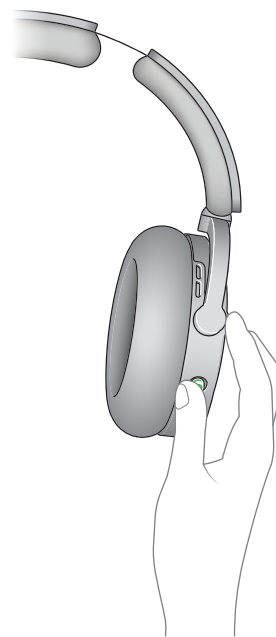

Intuitive joystick

Skip and seek

Tap the joystick on the left or right to skip tracks.
Press and hold to fast forward or rewind.



Volume

Push the joystick up or down to adjust the volume.



 
Activating voice assistant

Press and hold the middle of the joystick for two seconds to activate the voice control on your mobile device.



Answering phone calls

To accept an incoming call, press the joystick.
To decline a call, press and hold the joystick.
To end a call, press the joystick.

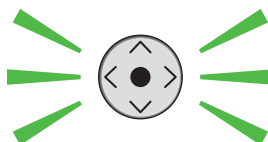


Active noise cancellation

Use Active noise cancellation (ANC) to reduce the background noise around you.

You can double tap either outer cap to switch between noise cancelling modes.


Isolation mode

 The maximum level of ANC, reducing surrounding background noise. This is the default setting for your headphones.

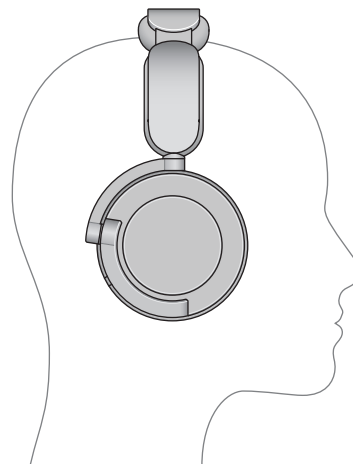

Transparency mode

 To hear the environment around you.

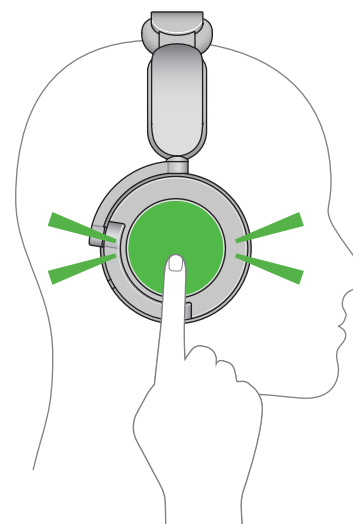

In-flight adaptor

(available separately)

Connect the In-flight cable to the 2-pin adaptor, then plug into the plane's entertainment system via the audio port.

The In-flight adaptor will only charge your Dyson OnTrac™ noise-cancelling headphones when the USB-C cable is also used.

Please note that the audio controls on your Dyson OnTrac™ noise-cancelling headphones will not function when the In-flight adaptor is in use.



Warning

The In-flight 2-pin adaptor is for connection to an audio outlet only. Plugging in to a mains socket outlet may result in a fire or pose a risk of an electric shock.



Configuring your headphones

 
Adjusting the headband

To adjust the headband, grip and slide it into place for a comfortable fit.



Replacing the outer caps

To remove an outer cap, twist the outermost circular part counter-clockwise. Align the replacement outer cap on the headphones and twist clockwise until it clicks.

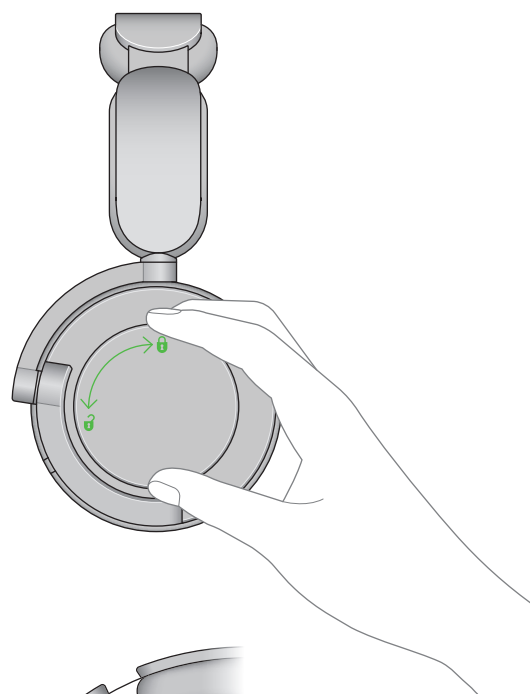


Replacing the ear cushions

To remove an ear cushion, twist it counter-clockwise. Select the correct replacement for the left or right ear. These are marked with an L and an R on both the headset and the ear cushions themselves.

Line up the long and short slots on the ear cushions with the matching ridges on the headset. Push down and twist clockwise, until it clicks into place. Make sure the ear cushion is flush to the headphones to ensure proper functionality.

 
When you replace the ear cushions, we recommend you go to the Product settings section of the MyDyson™ app and recalibrate your headphones. You'll find this under Replacing accessories.

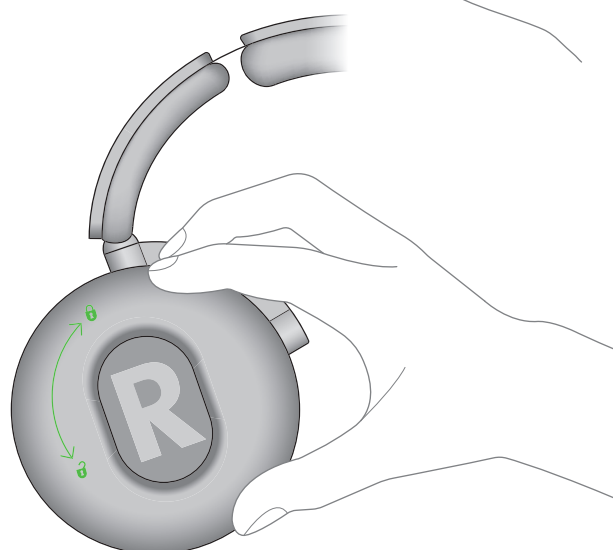

Cleaning your Dyson OnTrac™ headphones

Outer caps

 Wipe away dust or debris from the perforations in the ear cup covers with a soft, damp, lint-free cloth.

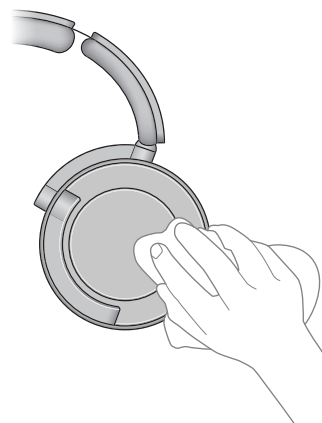

Ear cushions and headband

Wipe away dust or debris with a soft, damp, lint-free cloth.

