


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



 REVISION 0 : 12/11/2019



ITEM: 222633 ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.





ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A	DRESSER		1PC
в	LEG	°	4PCS
HARDWARE IDENTIFICATION			
1	BOLT (M6 x 50mm - BLK)		4PCS
2	LOCK WASHER (1/4" - BLK)	Q	4PCS
3	FLAT WASHER (1/4"ID x 13mm - BLK)	\bigcirc	4PCS
4	ALLEN WRENCH (M4 x 110mm - BLK)		1PC
		PAGE 2 OF 3	COASTERFURNITURE.COM

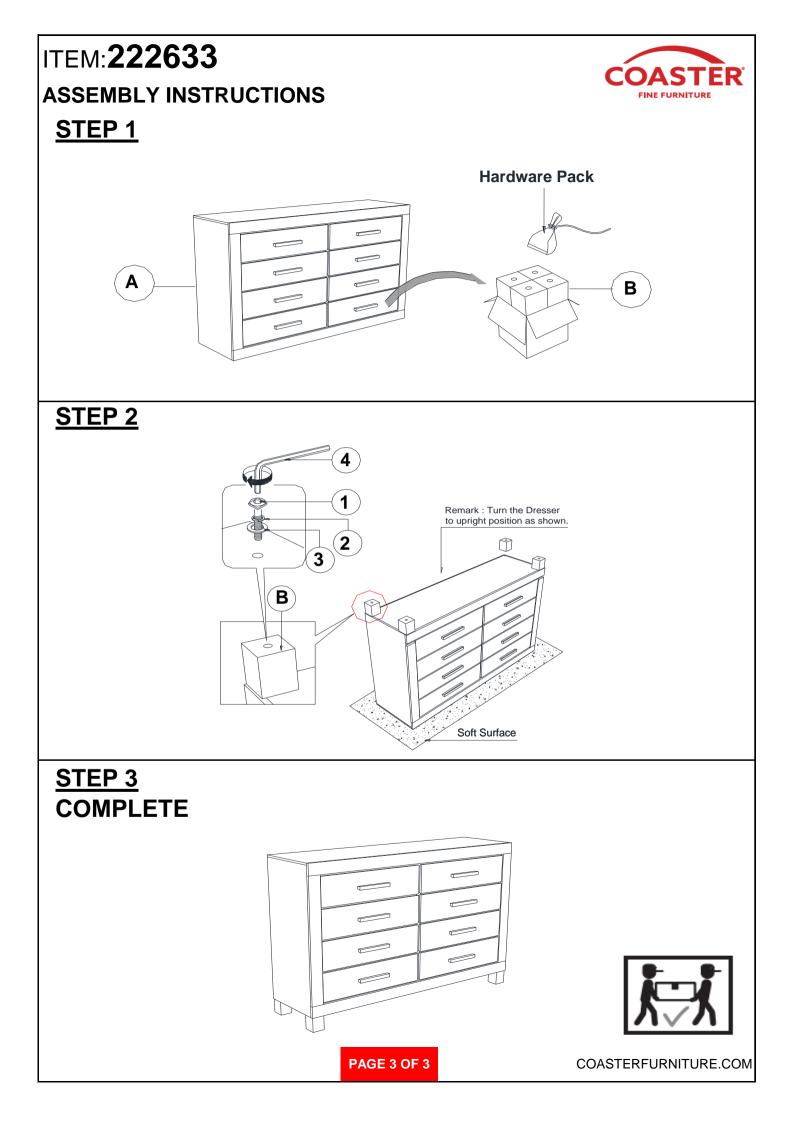

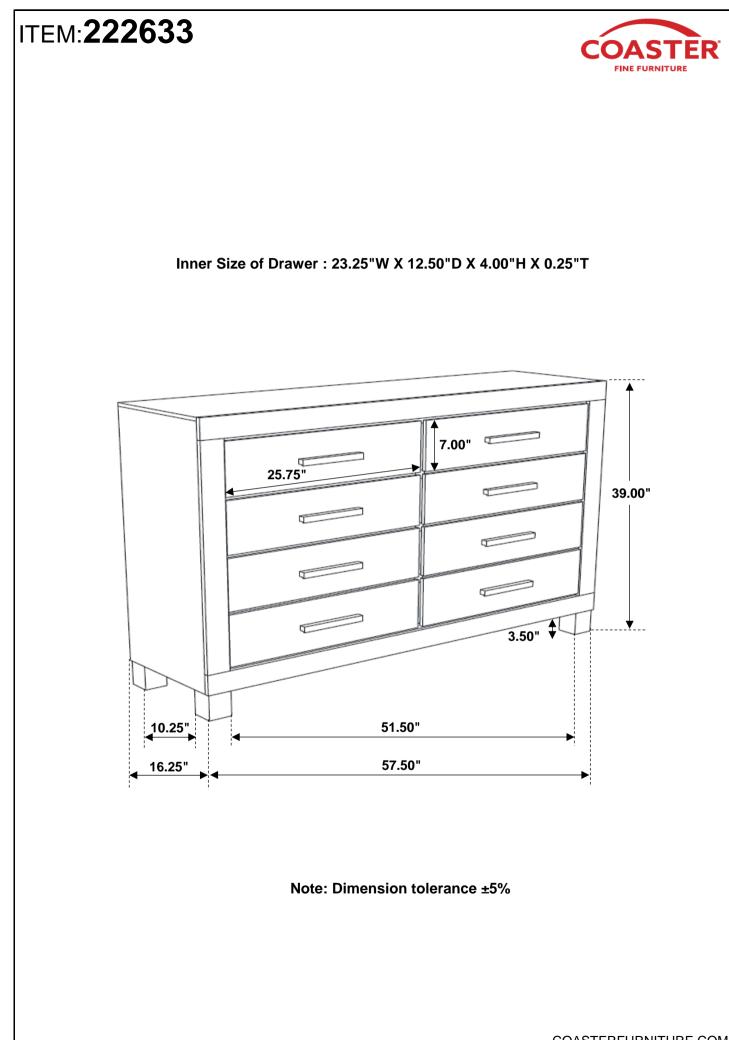



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life



REVISION 0 : 12/11/2019 REVISION 1 : 08/25/2023



ITEM: 222634 ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:


- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.

2. This product is for home use only and not intended for commercial establishments.

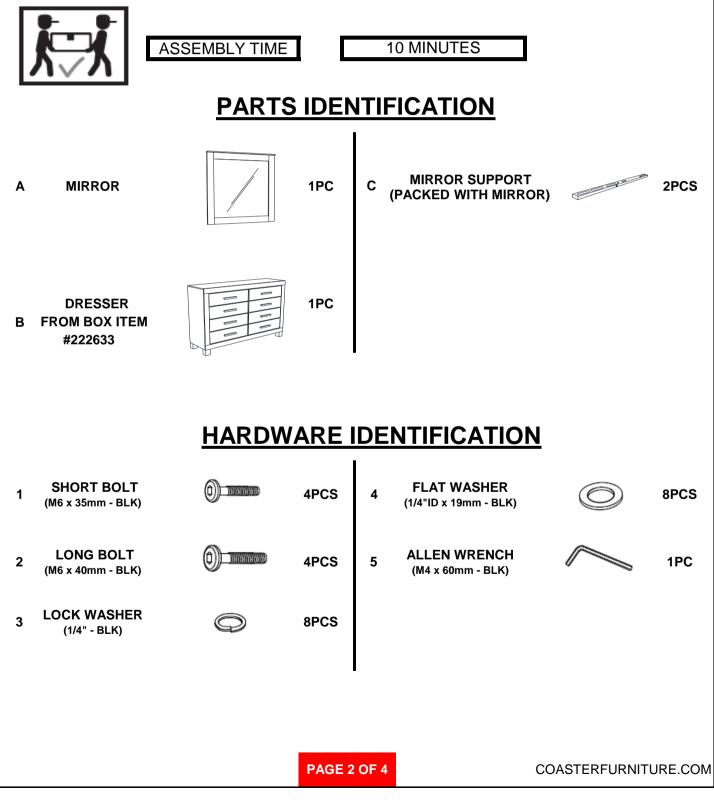

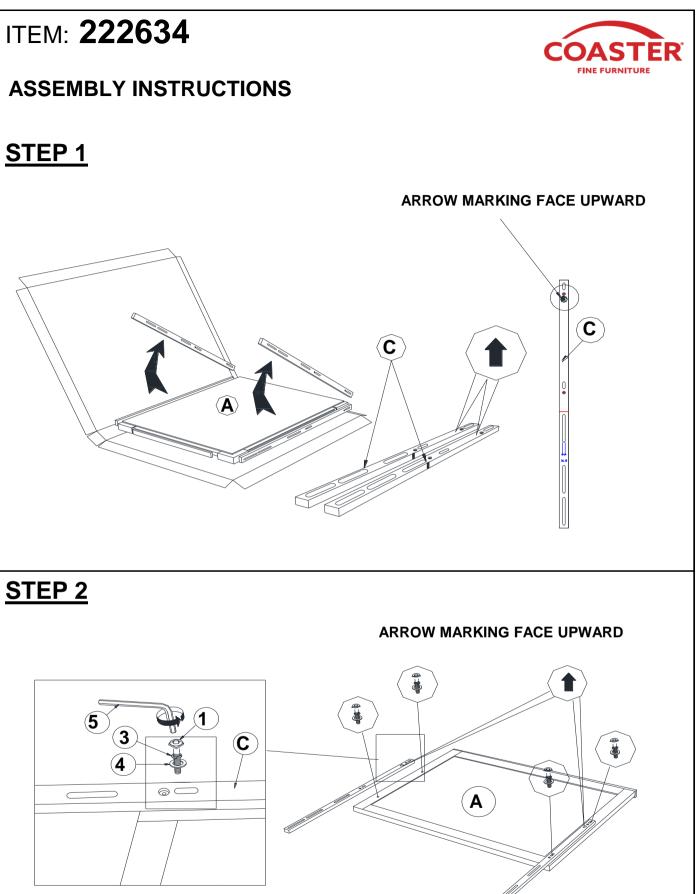

BACK VIEW


PAGE 3 OF 4

ITEM: 222634



ASSEMBLY INSTRUCTIONS

STEP 3

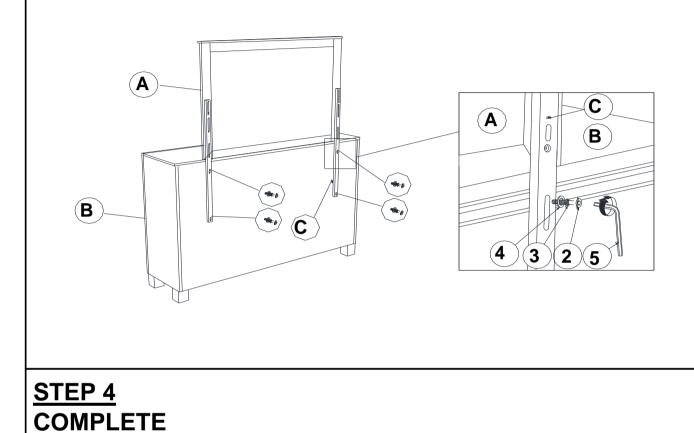





PAGE 4 OF 4

