

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

609451 Youth Rocking Chair

REVISION 0: 06/20/2020 REVISION 1: 05/24/2021

PAGE 1 OF 6

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

n - n

20 MINUTES

PARTS IDENTIFICATION

AN	BACK FRAME		1PCE	EN	ROCKER		2PCS
BN	UPPER SIDE STRETCHER	00000	2PCS	FN	SEAT 1		1PC
CN	LOWER SIDE STRETCHER		2PCS	GN	LEFT ARMREST		1PC
DN	FRONT LEG FRAME		1PCE	HN	RIGHT ARMRES	т	1PC

HARDWARE IDENTIFICATION


1	PAN HEAD SCREW 3 (5x50mm - RBW)		2PCS	3	PAN HEAD SCREW 1 (4x35mm - RBW)	Cumum	14PCS
2	PAN HEAD SCREW 2 (4x50mm - RBW)	Community	4PCS	4	GLUE	(I) GLUE	1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.



ASSEMBLY INSTRUCTIONS STEP 1

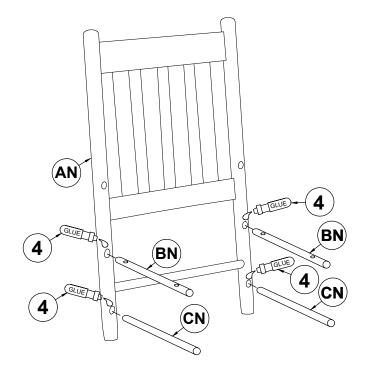


STEP 2

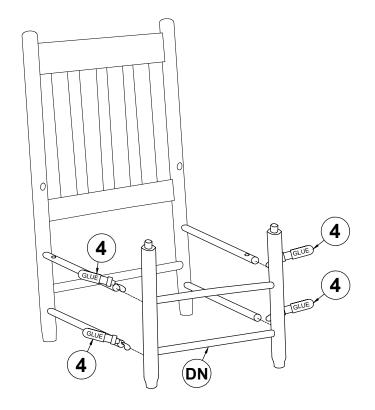


PAGE 3 OF 6



ASSEMBLY INSTRUCTIONS STEP 3

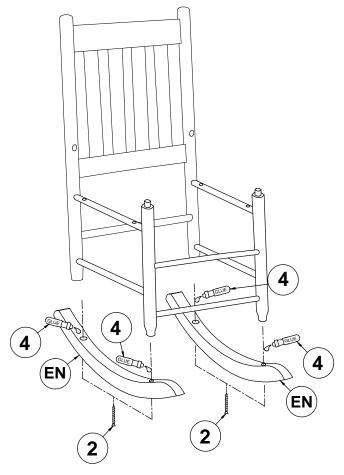

STEP 4

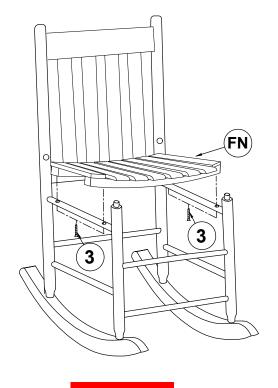


PAGE 4 OF 6




ASSEMBLY INSTRUCTIONS

STEP 5

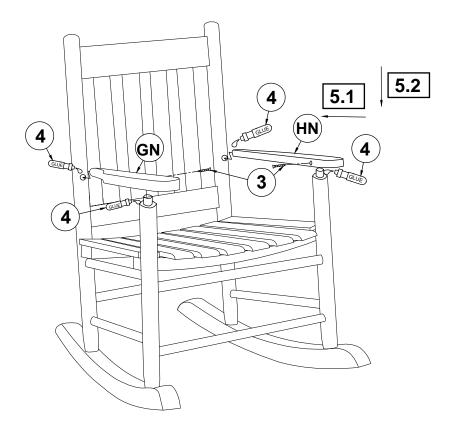

STEP 6

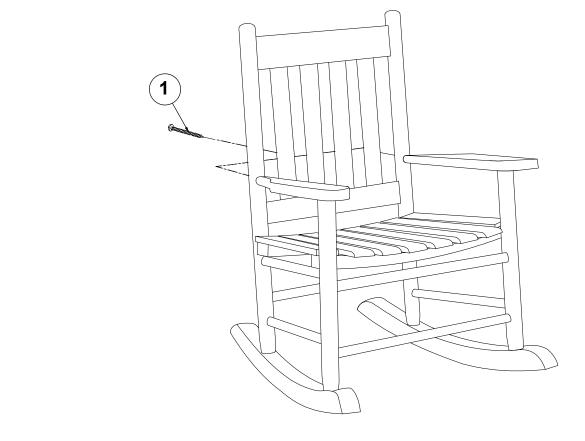

PAGE 5 OF 6



ASSEMBLY INSTRUCTIONS

STEP 7 COMPLETE

