


AMANA®

30" ELECTRIC FREESTANDING SELF CLEAN RANGE

MODELS:

ACR4303MFB4 (Black)
ACR4303MFW4 (White)


COOKTOP PARTS

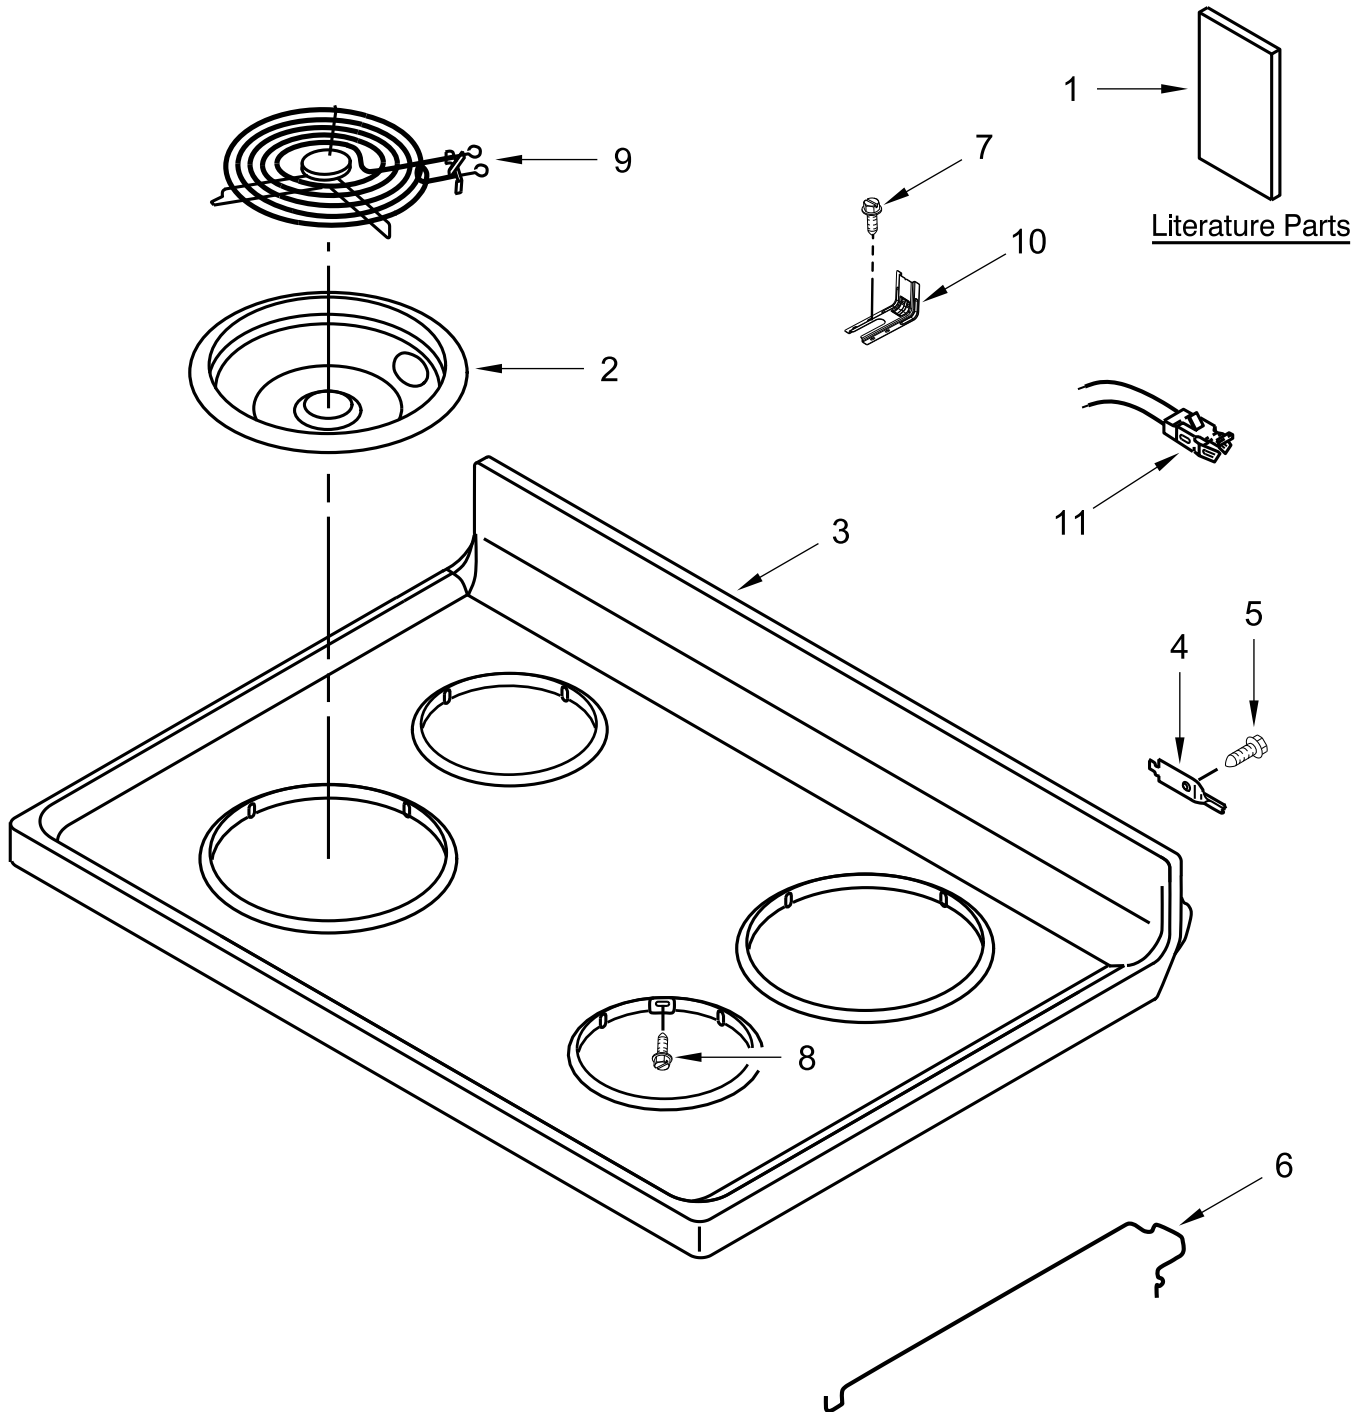

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	3195060	Hinge, Cooktop	11	814399	Receptacle, Element
	W11235898	User Instructions	5	3196178	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W11335893	Wiring Diagram	6	3195812	Rod, Support			
	W11047681	Instructions, Installation	7	7101P485-60	Screw, Anti-Tip Kit		W11134841	Harness, Main
2	W10196406	Bowl, Drip (6") (Right Front and Left Rear)	8	3196154	Screw		W11134595	Harness, Cooktop
	W10196405	Bowl, Drip (8") (Left Front and Right Rear)	9	W11364019	Element, Coil Heating (2400W) (Left Front and Right Rear)		W10281322	Kit, Bare Wire Adapter Block
				W11364018	Element, Coil Heating (1500W) (Right Front and Left Rear)			
3		Cooktop						
	3186233	Black						
	3186231	White	10	W11379945	Anti-Tip Bracket			


CONTROL PANEL PARTS

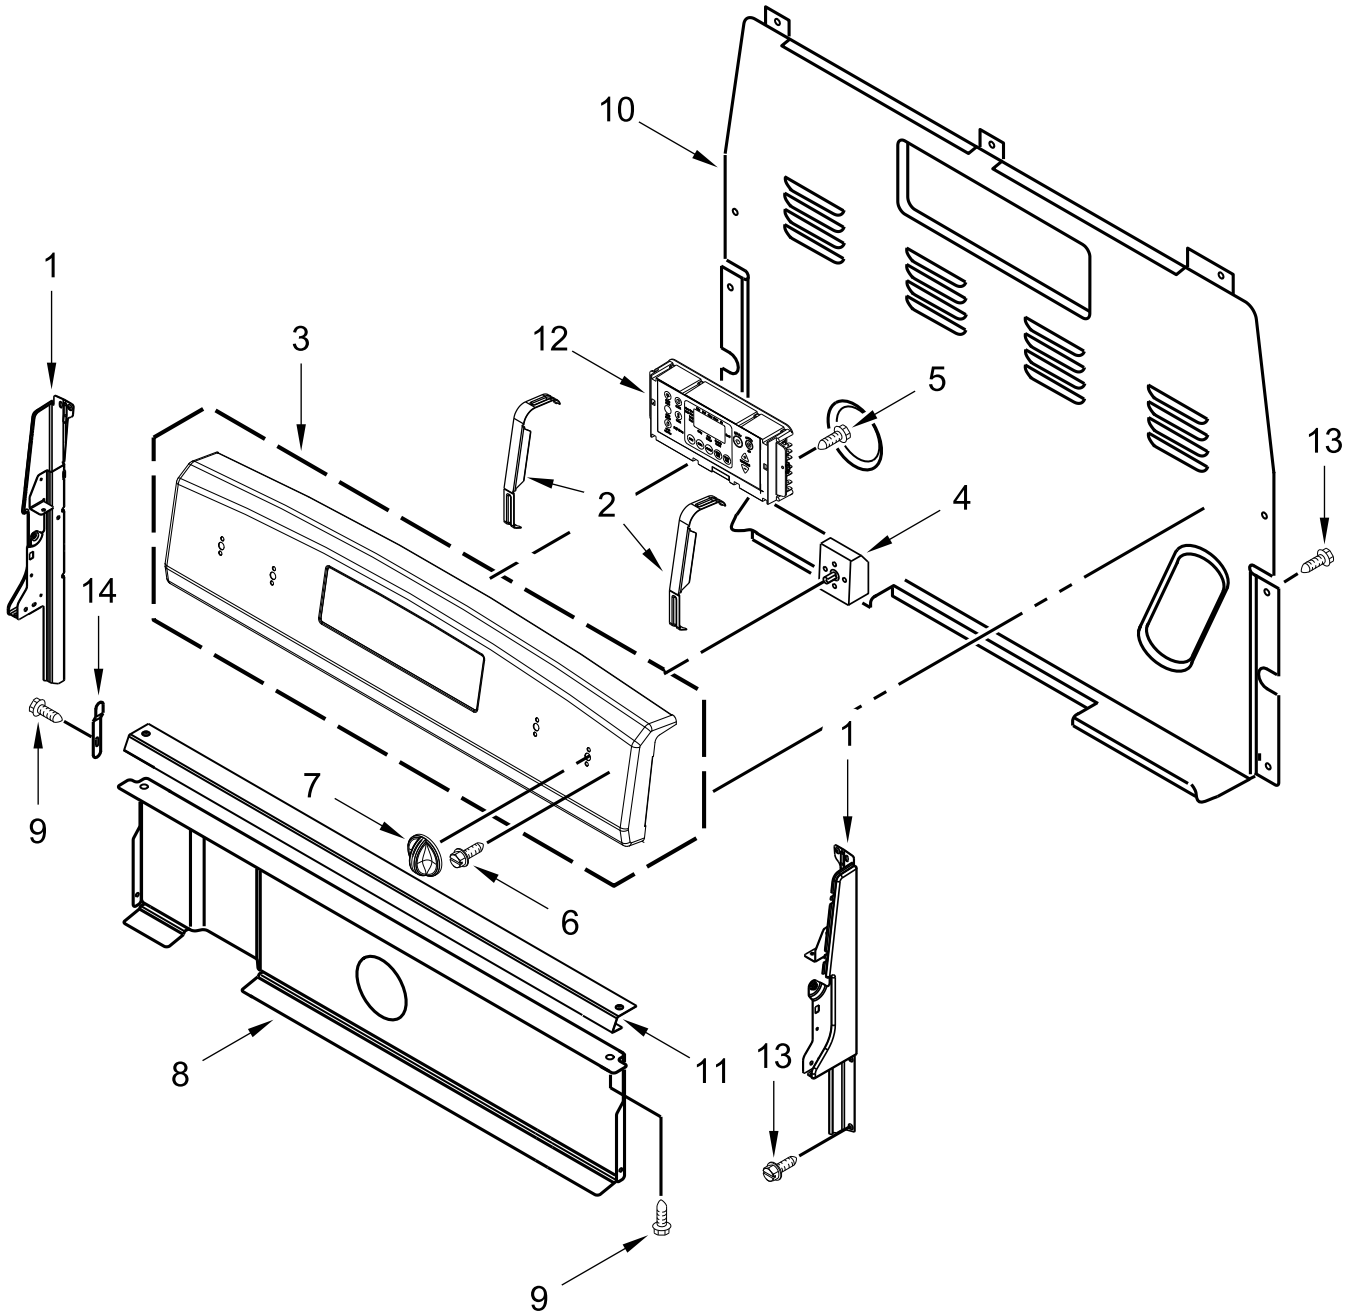

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	3148952	Switch, Infinite (Yellow)	9	3196165	Screw
	W11130372	Black (Left)			(Right Front and Left Rear)	10	8272473	Cover, Upper Rear
	W11130379	Black (Right)				11	W10525121	Bracket, Console Mounting
	W11130371	White (Left)				12		Control, Electronic (LCX)
	W11130378	White (Right)		3148954	Switch, Infinite (Orange)			
2	W10695491	Bracket, Control			(Left Front and Right Rear)		W11204487	Black
3		Panel, Control					W11204488	White
	W11157010	Black	5	3196169	Screw	13	3196178	Screw
	W11157009	White	6	3400882	Screw	14	3196200	Clip, Spring
			7		Knob, Infinite			
				W10844801	Black			
				W10844800	White			
			8	W10134247	Shield, Heat			


CHASSIS PARTS

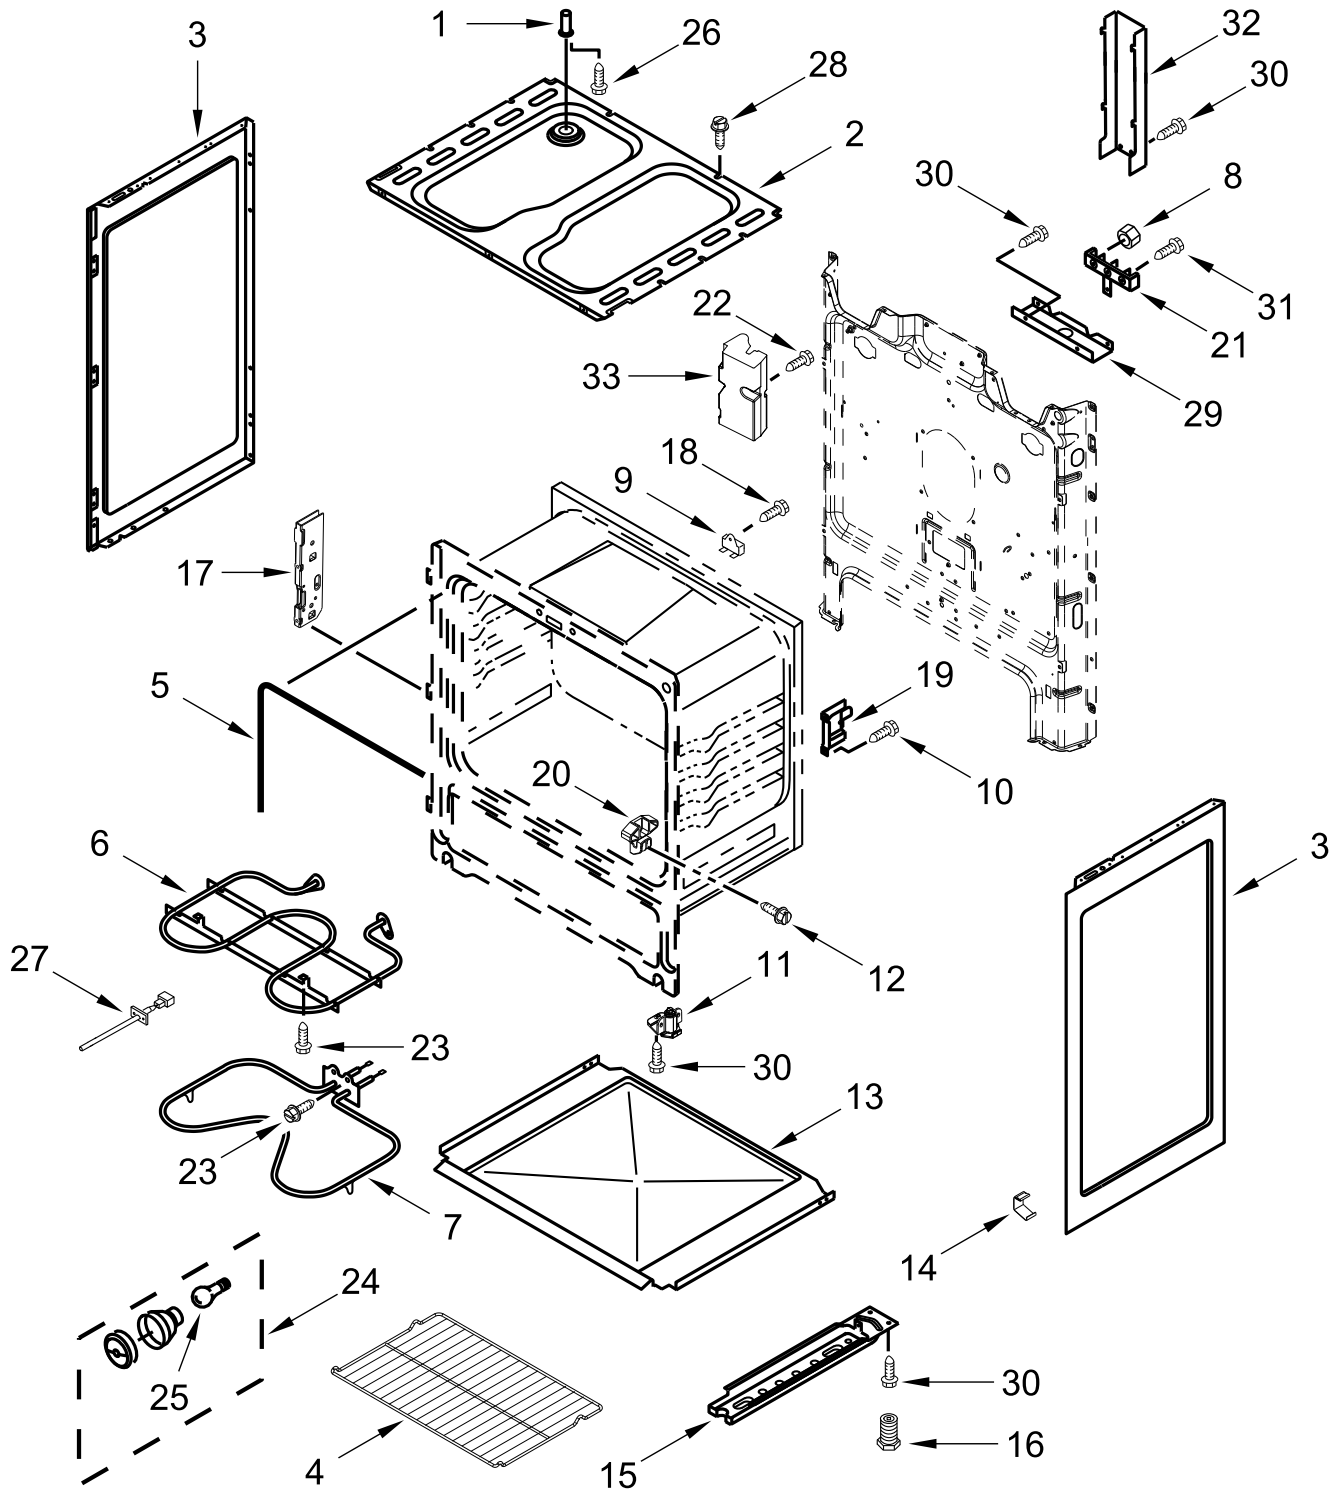

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222267	Tube, Vent	14	W10137382	Clip, Panel	25	W10571723	Bulb, Halogen 40 Watts
2	W10209613	Box, Burner	15	W10390008	Assembly, Base Rail (Left)	26	3196567	Screw
3		Panel, Side		W10390007	Assembly, Base Rail (Right)	27	W10181986	Sensor, Oven
	W10162245	Black				28	3196165	Screw
	W10575396	White				29	3186034	Bracket, Service
4	W10268578	Rack, Oven	16	W10058460	Foot, Leveling	30	3196178	Screw
5	W10129032	Seal, Door	17	W10289077	Receiver, Hinge	31	3400016	Screw
6	W10308476	Element, Broil	18	3196172	Screw	32	W10326122	Cover, Terminal Block
7	W11022836	Element, Bake	19	W10404688	Clip, Oven Support	33	W10910404	Counterweight
8	3400029	Nut	20	W10674705	Glide, Drawer Front			FOLLOWING PARTS NOT ILLUSTRATED
9	3196548	Fuse, Thermal	21	W10245259	Block, Terminal		8273263	Insulation, Wrap
10	3196169	Screw	22	W11034869	Screw		8272611	Insulation, Back
11	W10341186	Assembly, Front Foot	23	3196174	Screw			
12	W10067840	Screw	24	W11175594	Assembly, Light			
13	8054068	Retainer, Insulation						


DOOR PARTS

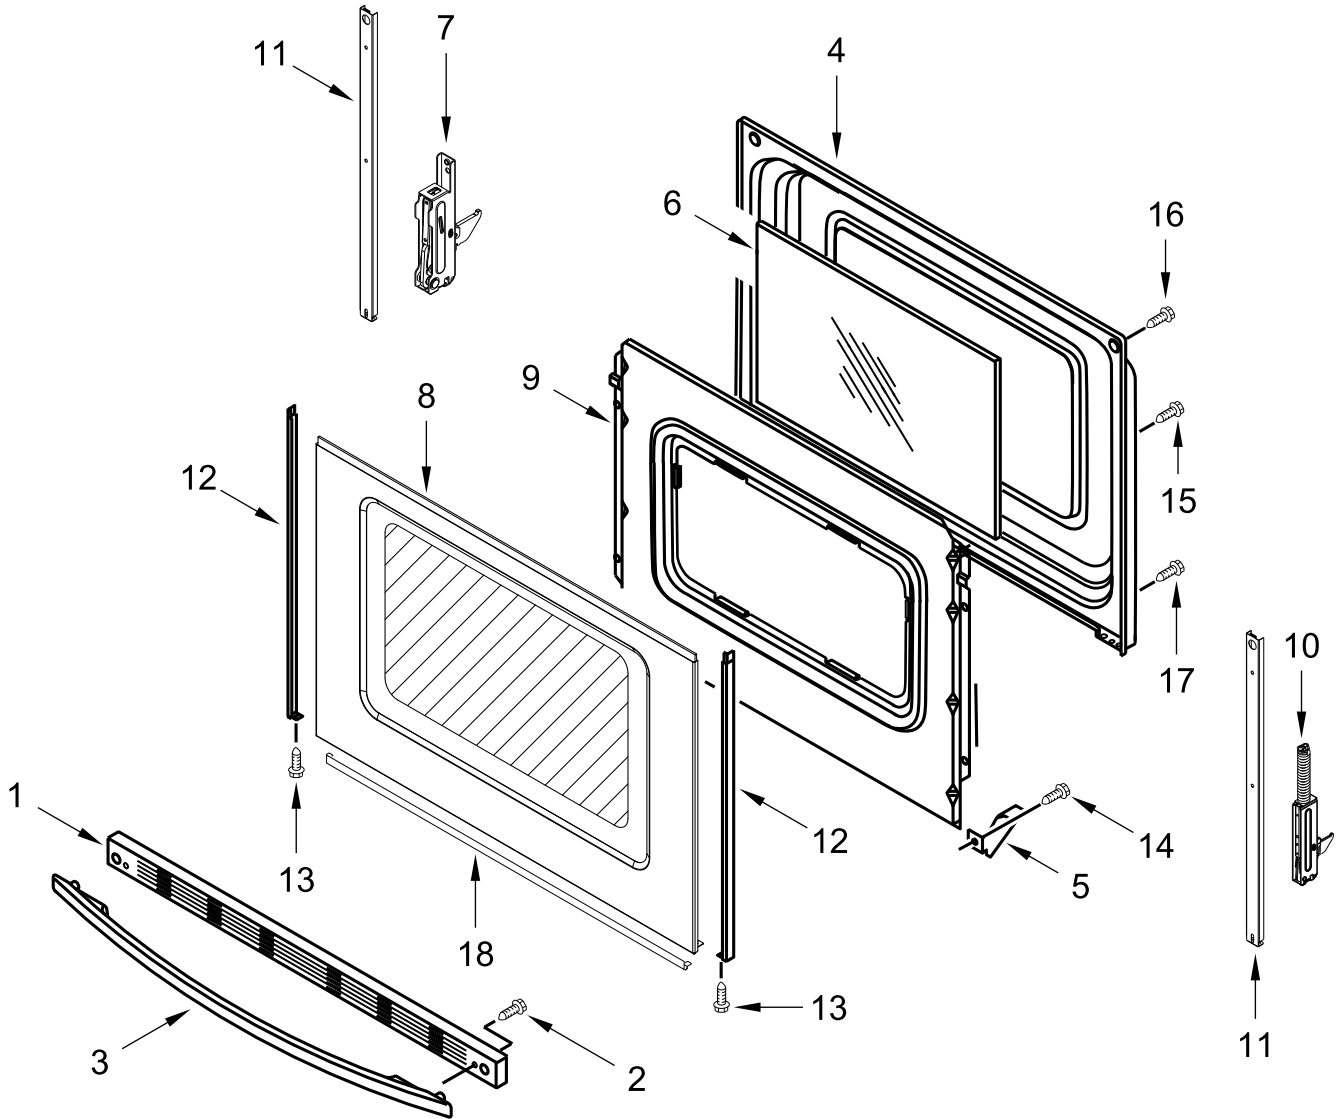

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top	9	9761505	Retainer, Insulation	18		Trim, Lower Door
	W10310922	Black	10	W10299225	Hinge, Active		8523177	Black
	W10310920	White	11	W11379944	Door Strap		8523175	White
2	W10168559	Screw	12		Trim, Side			
3		Handle, Door		W10746436	Black (Left)			
	W10323589	Black		W10746435	Black (Right)			
	W10323588	White		8523172	White (Left)			
4	9761344	Liner, Door		8523166	White (Right)			
5	W10137382	Clip, Panel	13	W10327235	Screw			
6	W11367326	Glass, Inner	14	3196165	Screw			
7	W10299227	Hinge, Door (Passive)	15	W10031790	Screw			
8		Glass Assembly, Outer Door	16	W10200660	Screw			
	W10831686	Black	17	W10031780	Screw			
	W10851723	White						

DRAWER PARTS

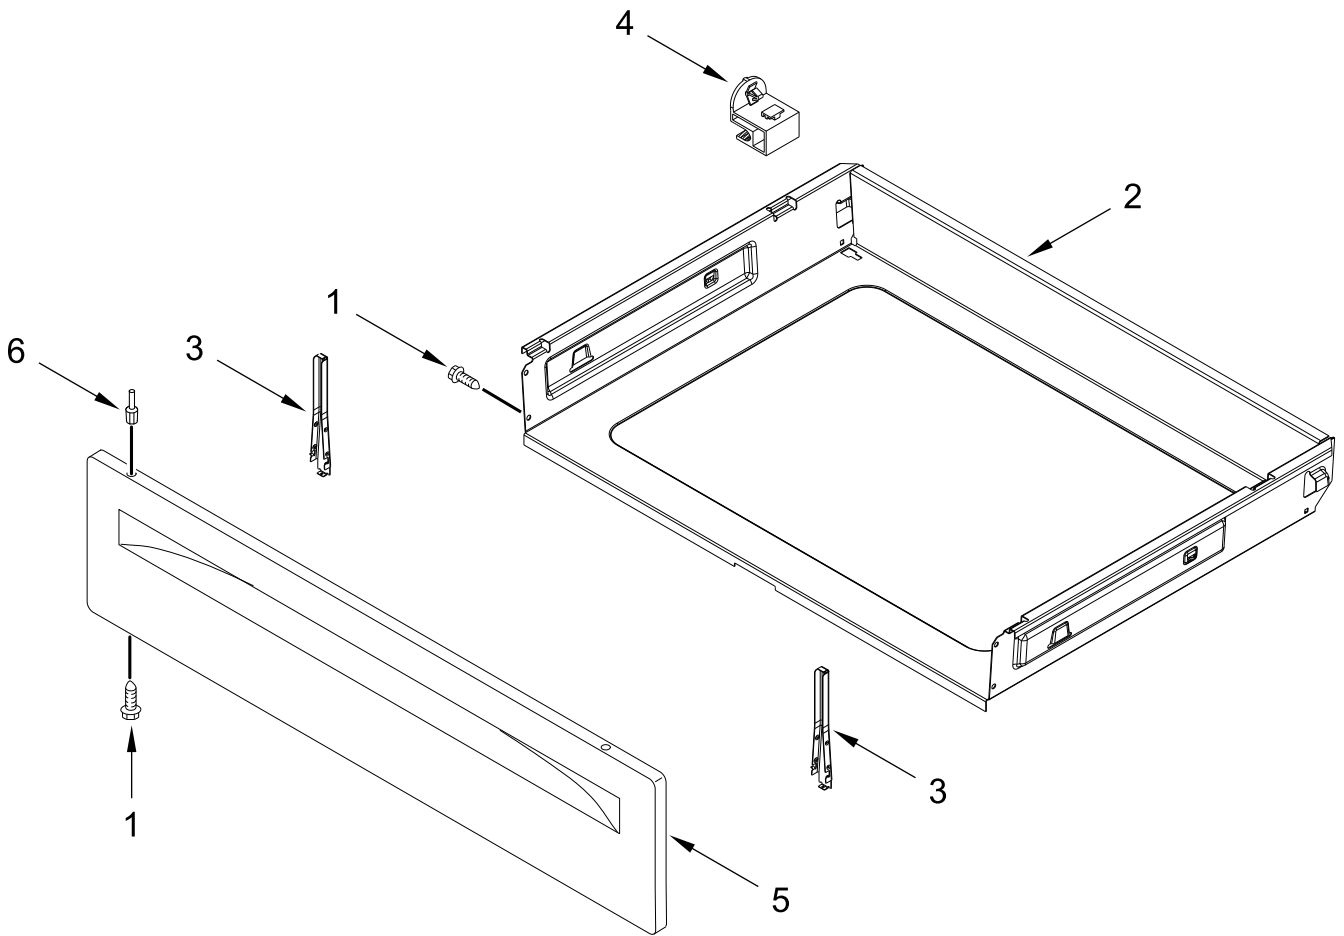

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw	5		Panel, Front	6		Rivet, Push
2	W10688022	Drawer, Storage		W11123900	Black		3196813	Black
3	W10462912	Bracket, Mounting Drawer		W11123901	White		3196814	White
4	W10674708	Glide, Drawer Rear						

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	3184478	Cleaner, Glass
	4396923	Grid, Broiler Pan and