

 


**ELECTRIC COMBO WALL OVEN**

**MODELS:**

WOEC7027PZ00 (Stainless)


# CONTROL PANEL PARTS

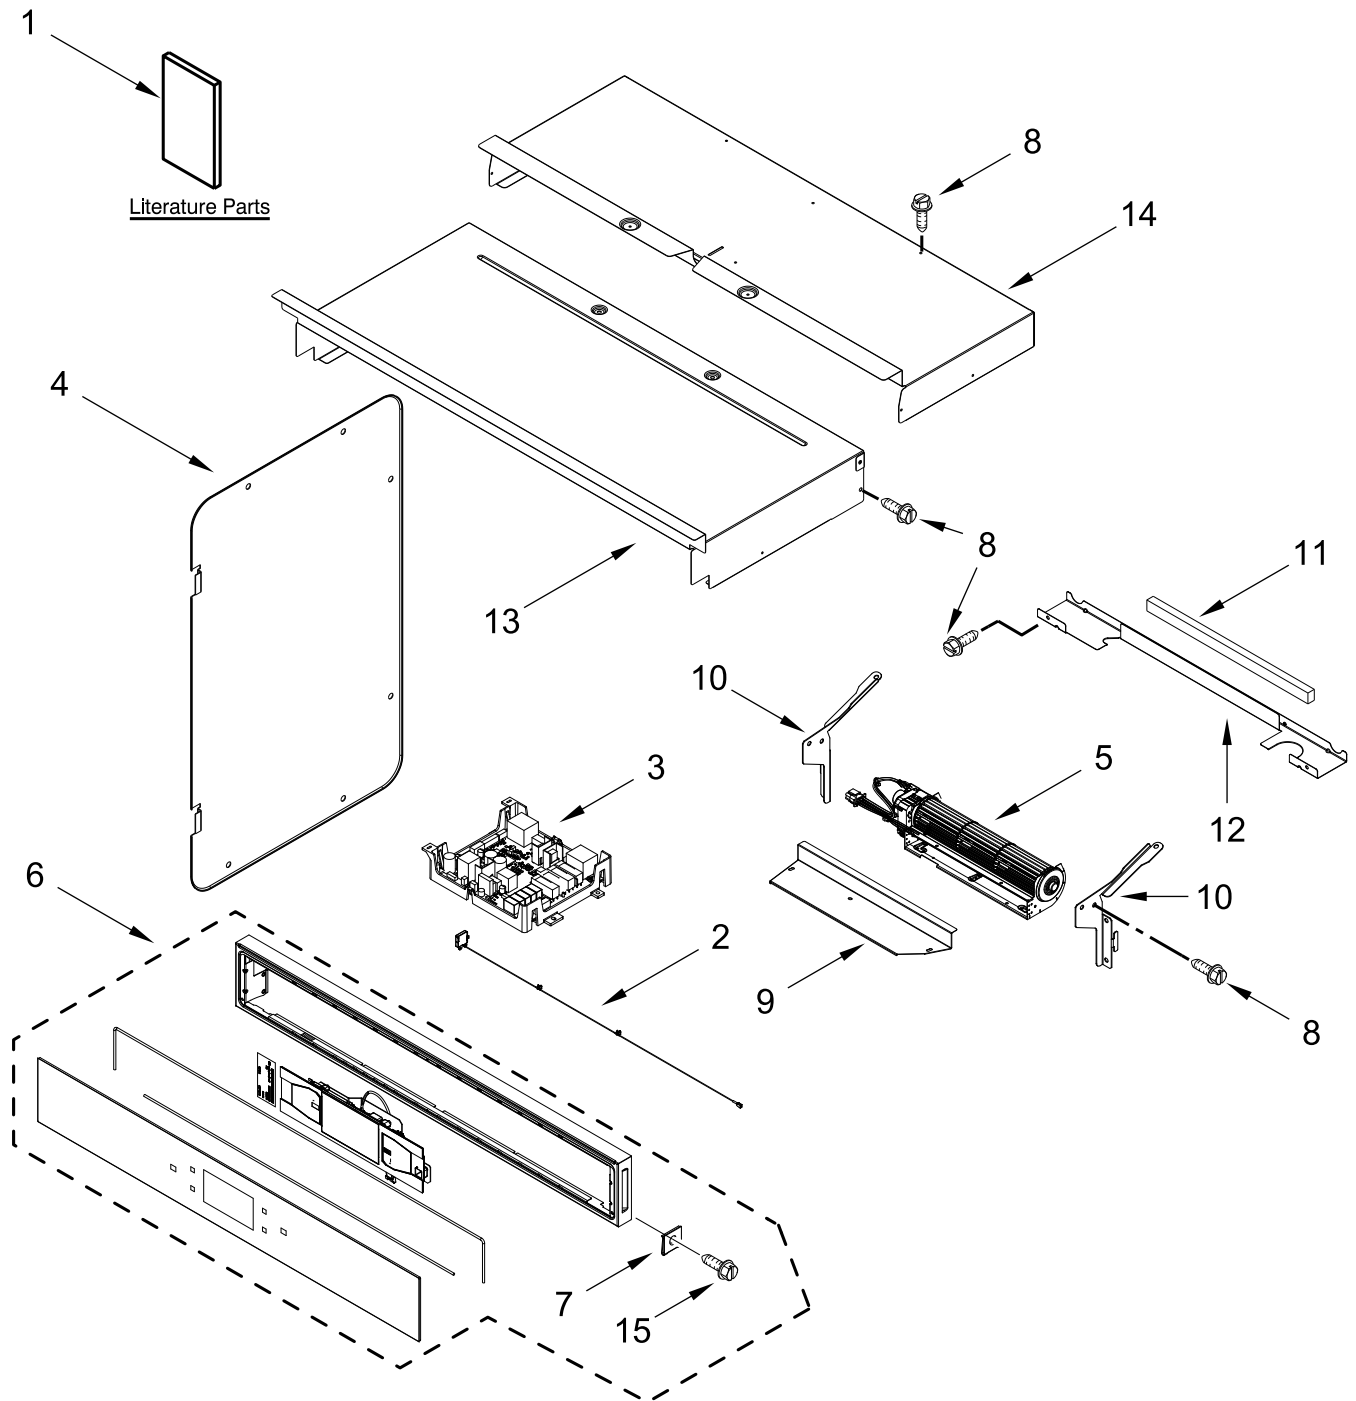

# CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	12	W11166802	Divider, Chassis Back	15	W11339492	Screw (Black)
	W11555307	Owner's Manual	13	W10318159	Chassis, Cover Top Front 27 In			FOLLOWING PARTS NOT ILLUSTRATED
	W11553919	Quick Start Guide	14	W11037652	Chassis, Cover Top Back 27 In WIFI	W11659368		Harness, Main
	W11623559	Tech Sheet				W11256629		Harness, Signal
2	W11409842	Antenna				W11264646		Harness, Door Latch
3	W11253186	Appliance Manager, Copernicus (With Power Supply)				W11356991		Harness, Ground Console Combo
4	W10655467	Chassis, Combo Side				W11356990		Harness, Communication
5	W11397930	Blower				W11539494		Harness, Inverter
6		Assembly, Control Panel (Includes Overlay)				W11555169		Harness, Interlock
	W11639725	Stainless				W11539527		Jumper Harness, Communication
7	4450118	Nut				W11555848		Harness, Input
8	7101P426-60	Screw				W11454022		Harness, Fan and Turntable
9	W10681157	Cover, Combo Blower				4450800		Screw, Grounding
10	W10655463	Bracket, Blower (Left)				4448664		Clamp, Conduit
	W10655462	Bracket, Blower (Right)				313438		Clip, Harness
11	4451758	Block, Foam				W11394923		Bag, Hardware

 
# OVEN PARTS

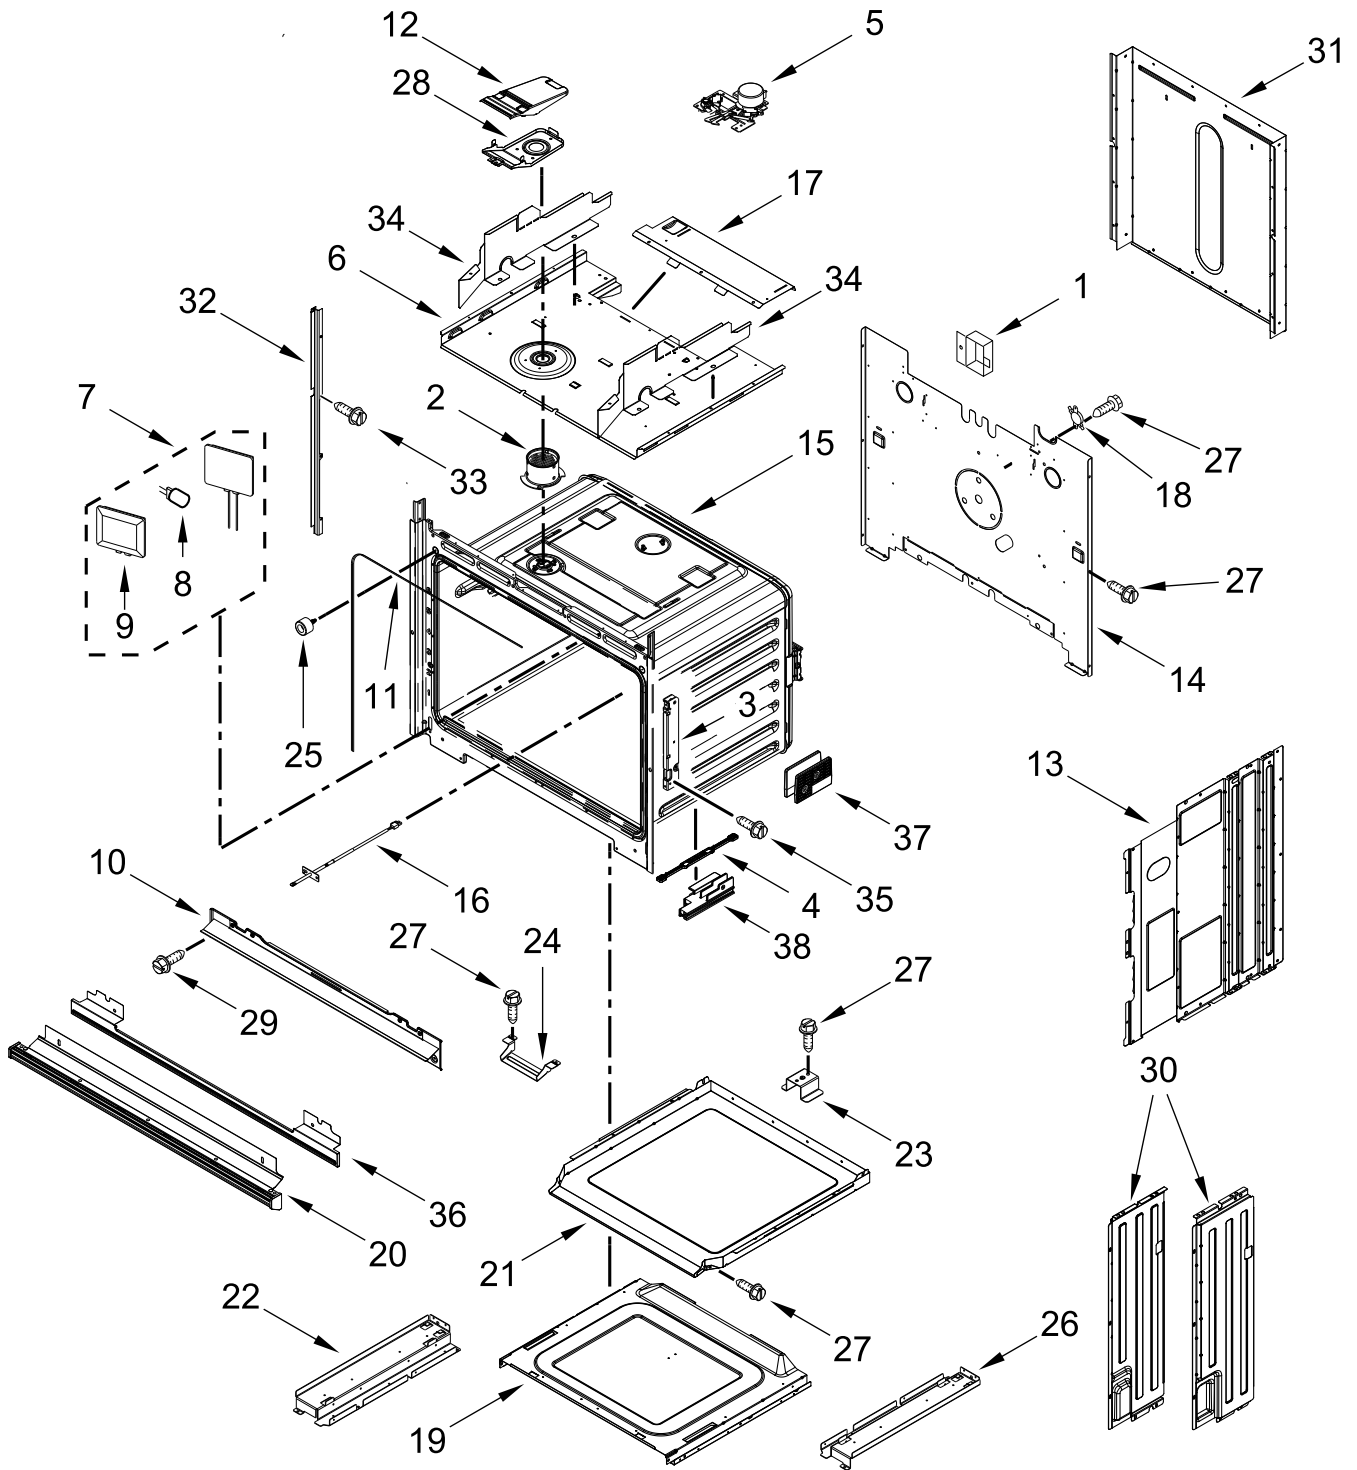

# OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	8285593	Cover, Connector	17	W10904163	Deflector, Blower	32		Sidetrिम, Bended
2	W11085298	Tube, Vent	18	4449751	Thermostat (TOD)		W11235457	Black (Left)
3	W11239070	Receiver, Hinge (Left)	19	W11244454	Base, Chassis		W11235458	Black (Right)
	W11239072	Receiver, Hinge (Right)	20		Assembly, Bottom Vent	33	W11404000	Screw
4	W11558603	Spacer, Base		W11467824	Stainless	34	W11186391	Deflector, Chassis (Left)
5	W11132456	Latch, Motorized	21	W11244446	Duct, Bottom Chassis		W11186398	Deflector, Chassis (Right)
6	W11244456	Top, Chassis	22	W10283020	Support, Base (Left)	35	W10254050	Screw
7	W11205574	Assembly, Oven Light	23	W11135135	Support, Air Channel	36		Trim, Bottom Vent
8	W10472384	Bulb, Light	24	W11390667	Spacer, Chassis Bottom Duct		W11560860	Black
9	W10472386	Lens, Light	25	W11166315	Bumper and Screw	37	W11245118	Foot, Base
10	W11518348	Vent, 27 In Combo Center	26	W10283021	Support, Base (Right)	38	W11245114	Foot, Chassis (Left)
11	W11608109	Gasket, Cavity	27	7101P426-60	Screw		W11245116	Foot, Chassis (Right)
12	W11256424	Cover, Vent Exhaust	28	W11256423	Base, Vent Exhaust			FOLLOWING PARTS NOT ILLUSTRATED
13	W11165274	Side, Chassis	29	W11249635	Screw		W11244474	Insulation, Wrap
14		Back, Chassis (Not Serviced)	30	W11167419	Cover, Suction (Left)		W11244475	Insulation, Back
15		Liner, Oven (Not Serviceable)		W11186675	Cover, Suction (Right)			
16	W11346074	Probe, Sensor	31	W11134657	Duct, Lower Chassis Back			

 
# OVEN DOOR PARTS

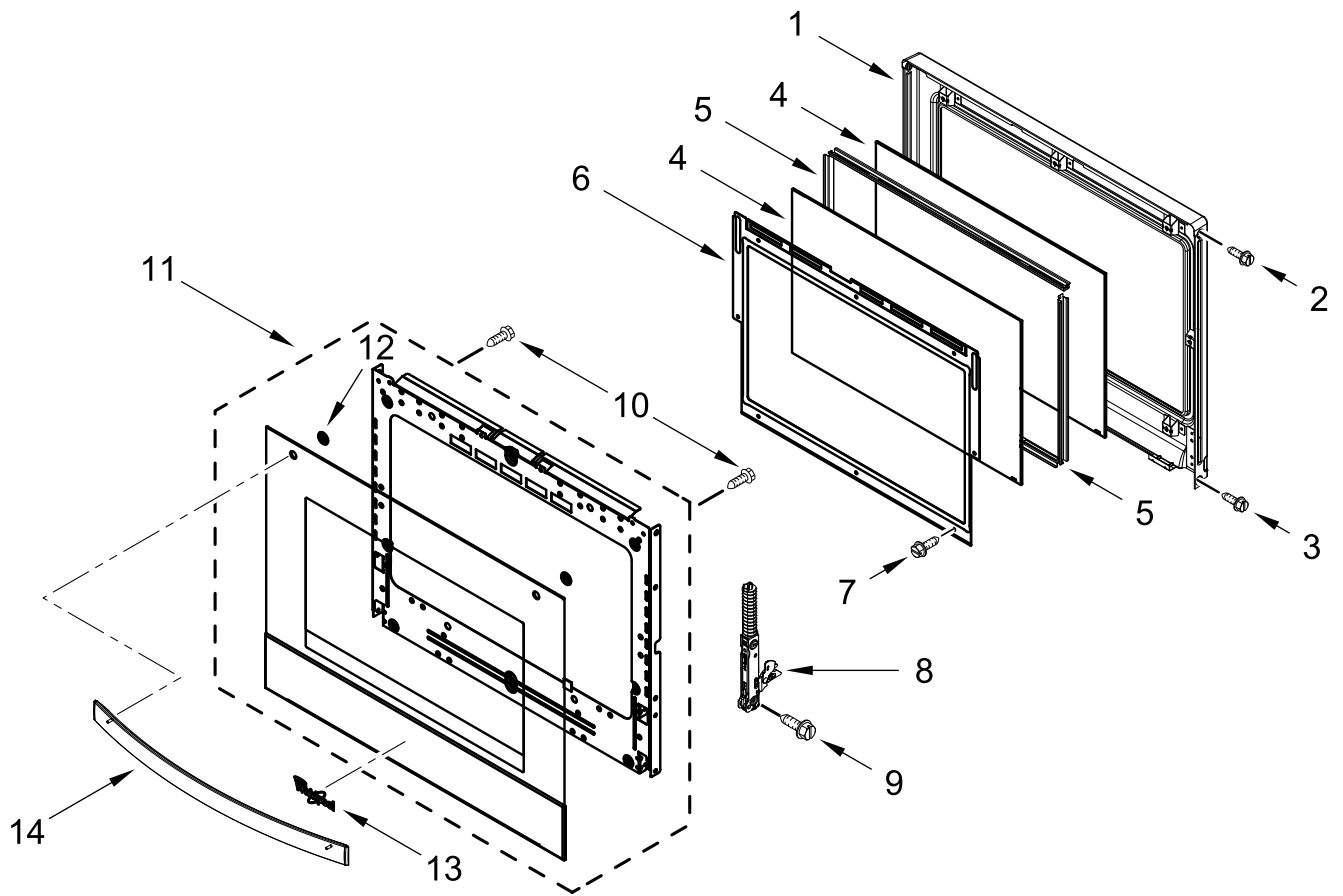

# OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302593	Liner Assembly	7	7101P426-60	Screw	11		Door Assembly
2	7101P375-60	Screw	8	W11634520	Hinge, Door (Left)		W11499375	Stainless
3	W11249635	Screw		W11634521	Hinge, Door (Right)	12	W10319024	Washer, Door
4	W10618123	Glass, Inner				13	W10884775	Badge
5	W11302731	Spacer, Air Divider	9	3196183	Screw	14		Handle Assembly
6	W11204277	Retainer, Air Divider Glass	10	W11317731	Screw (Black)		W11532601	Stainless
 
# INTERNAL OVEN PARTS

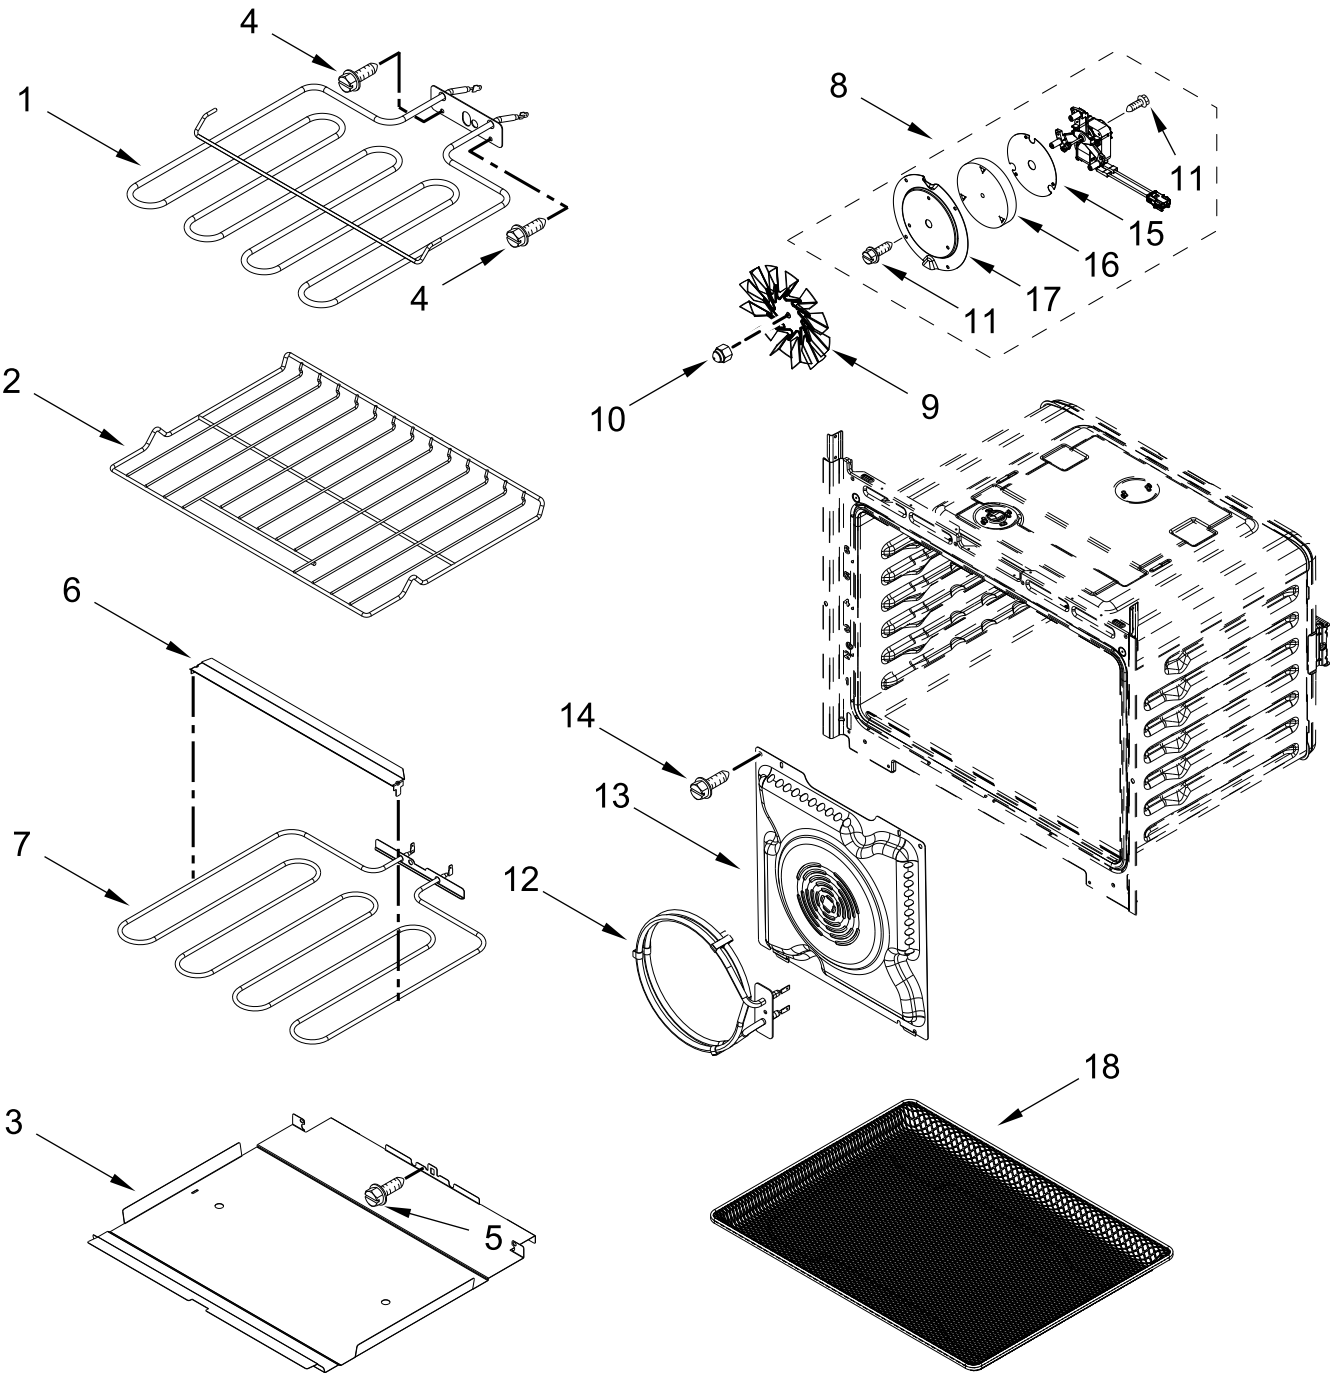




# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238160	Element, Broil	7	W11292248	Element, Bake	13	W10359278	Baffle, Convection
2	W10317431	Rack, Oven	8	W11398058	Convect Motor Assembly	14	W10906658	Screw
3	W10318198	Tray, Hidden Bake	9	W11425715	Blade, Fan	15	W11251715	Plate, Convect Motor
4	7101P434-60	Screw	10	W11433702	Nut, Acorn (LH)	16	W11251716	Insulation, Convect Motor
5	7101P426-60	Screw	11	W10720084	Screw	17	W11398057	Cover, Convect Plate
6	W10282957	Crossbar, Hidden Bake Tray	12	W10260248	Ring, Element	18	W11629505	Airfry Basket Kit

 
# CABINET AND STIRRER PARTS

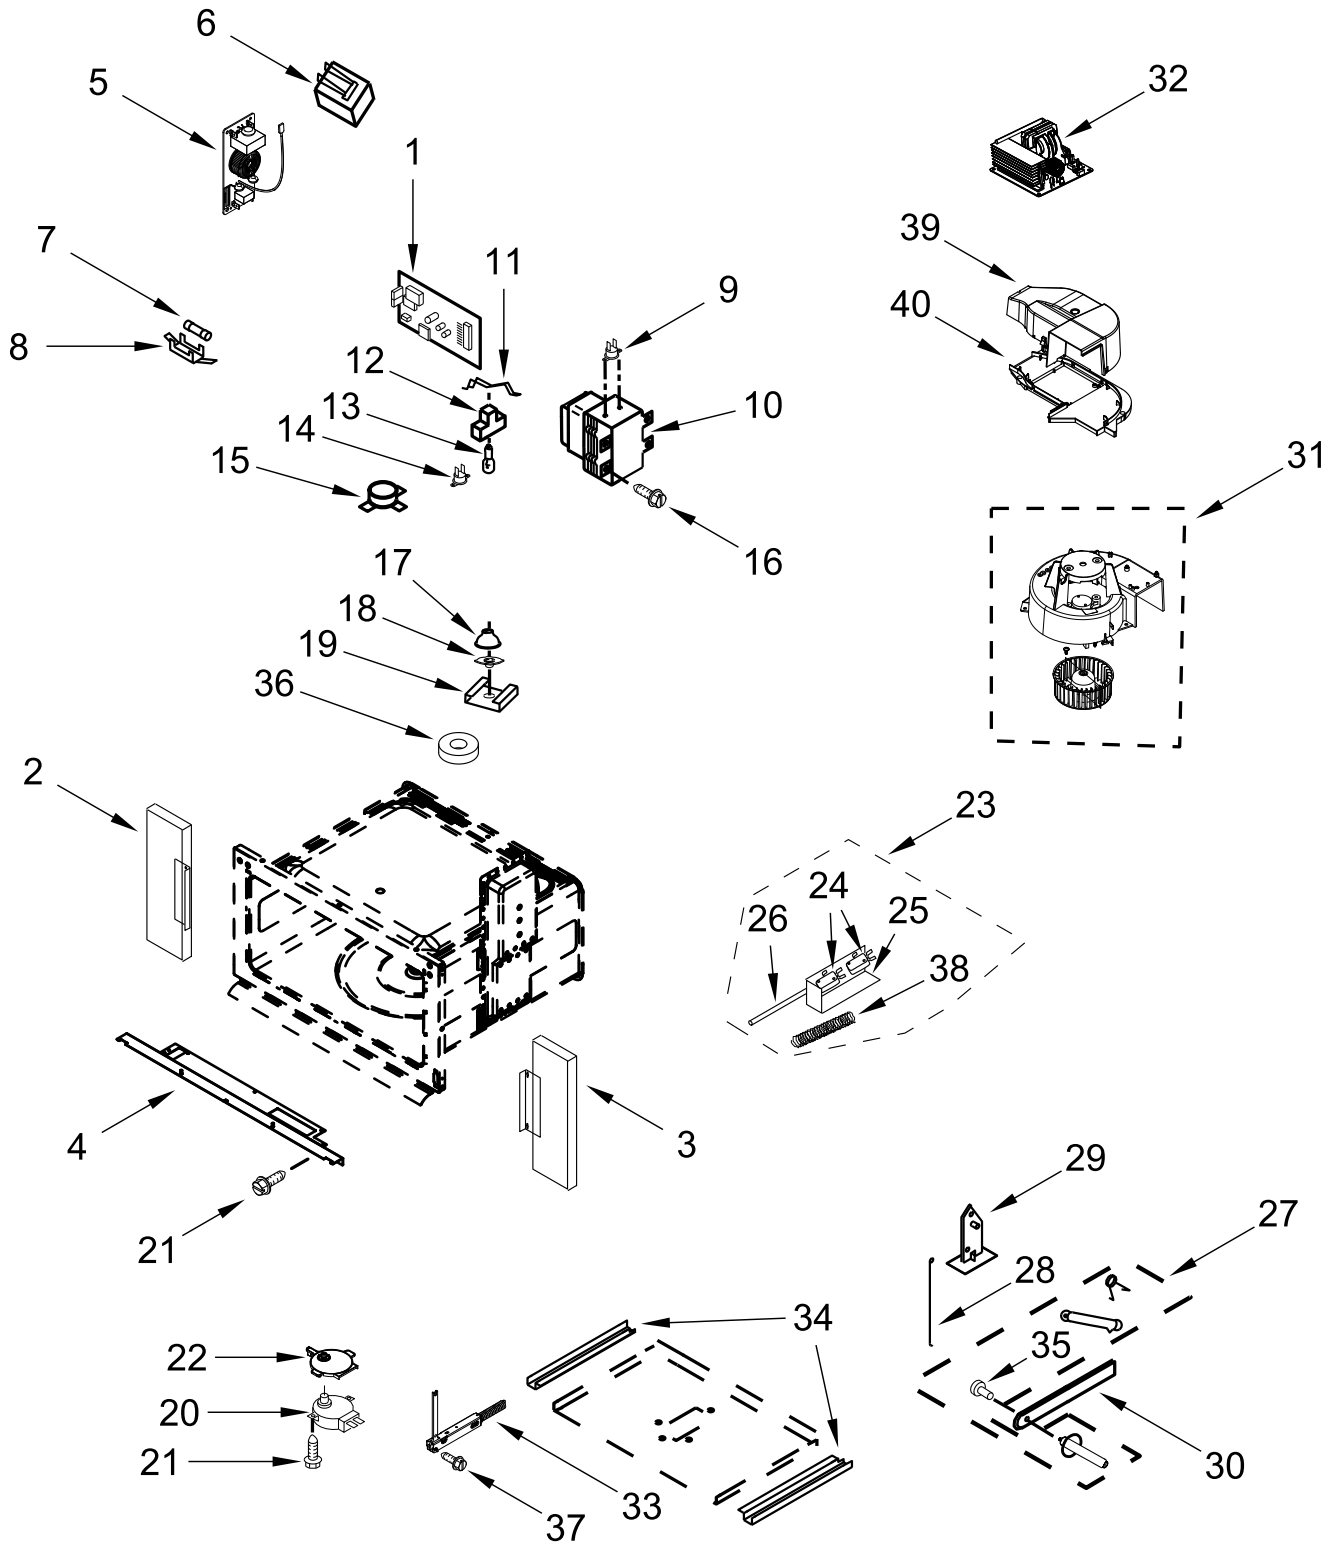

# CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11290002	Control, Electric	14	W10389447	Thermostat	28	461967570351	Spring, Torsion
2	461967017511	Trim, Side (Left)	15	W10460457	Sensor, Humidity	29	461967750494	Support
3	W11044584	Trim, Side (Right)	16	461967825971	Screw	30	W11213889	Arm, Sliding
4	W11334717	Vent, Top	17	423107022541	Reflector	31	W11131760	Cooling Fan Assembly
5	W11505129	Filter, Noise	18	423107720491	Lens, Lamp	32	W11504539	Inverter
6	461967848621	Transformer, Light (20V)	19	W11440819	Clip, Spring	33	W11474392	Hinge, Door
7	241908600053	Fuse	20	461967848971	Motor, Turntable	34	461967008461	Support, Bottom
8	4375231	Block, Fuse	21	461967825321	Screw	35	461967510191	Bushing
9	461967846741	Thermostat, Magnetron	22	461967753742	Adapter, Turntable Motor	36	W10769147	Sealing, Lamp
10	W11504545	Magnetron	23	W10358241	Assembly, Interlock Switch	37	461967825781	Screw (Shoulder)
11	W10465869	Spring, Lamp	24	461967848881	Switch	38	423107570871	Spring, Release Rod
12	W10490593	Holder, Lamp	25	W10876593	Holder, Switch	39	W11591019	Housing, Upper Inverter
13	W10795595	Lamp, Halogen	26	461967750464	Rod, Push	40	W11591018	Housing, Lower Inverter
			27	251968600013	Pin, Damper			






 
# INTERNAL MICROWAVE PARTS

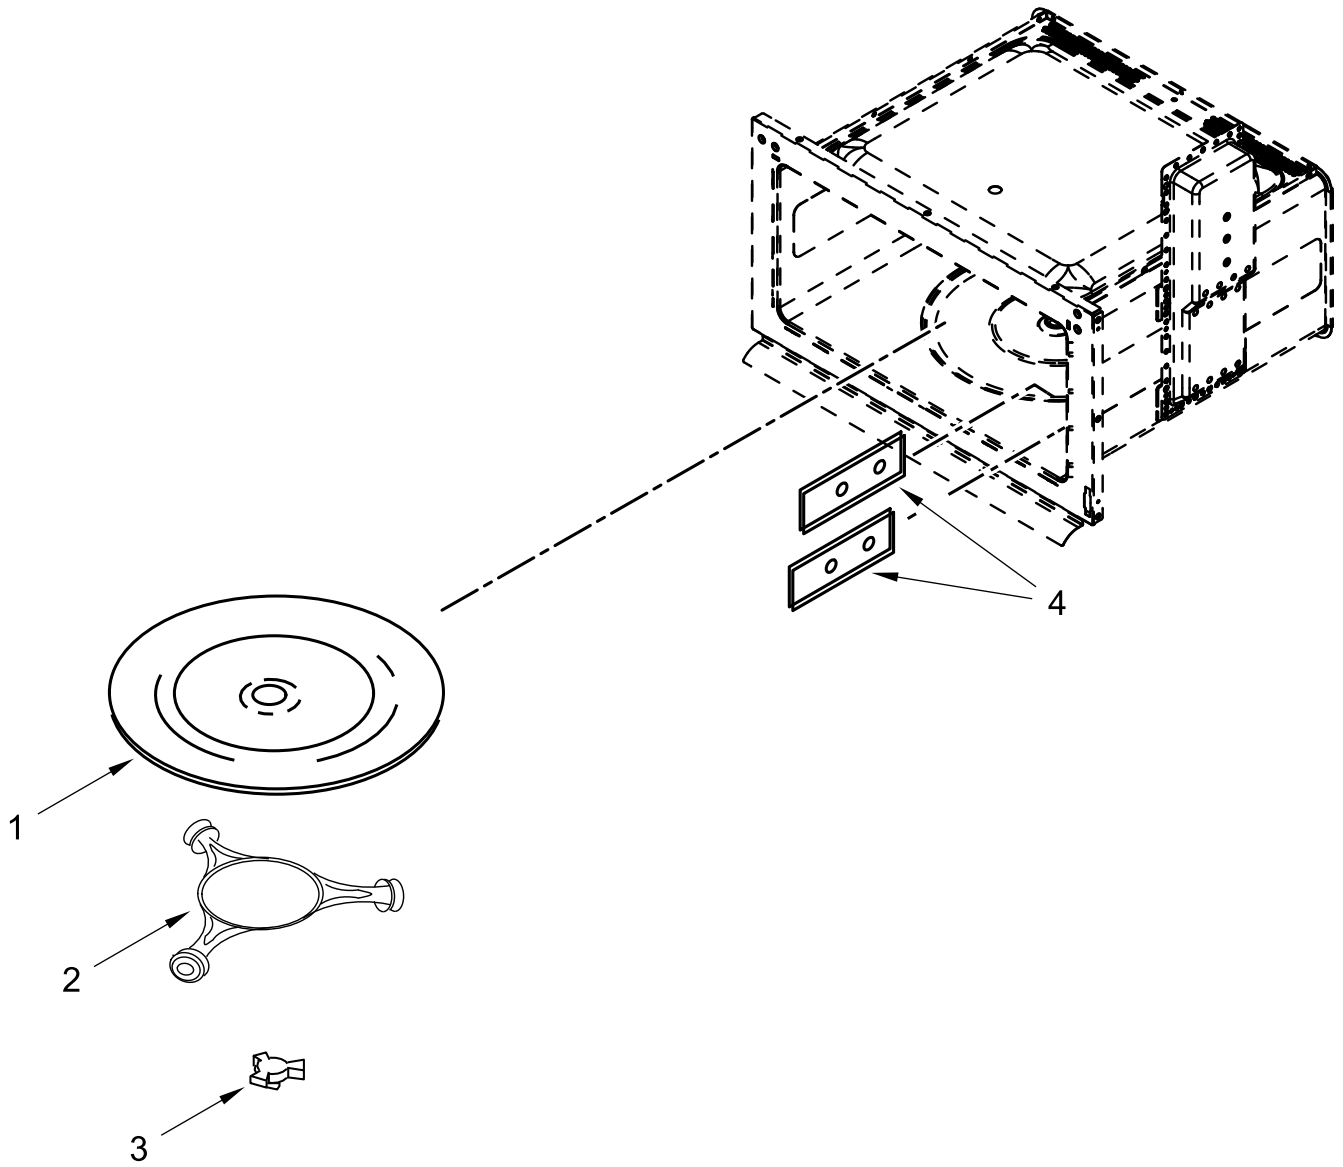

# INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11340342	Turntable, Glass	3	W10545578	Drive, Turntable
2	W10367316	Ring, Turntable	4	461967451001	Plate, Cover

      
# TOP VENTING PARTS

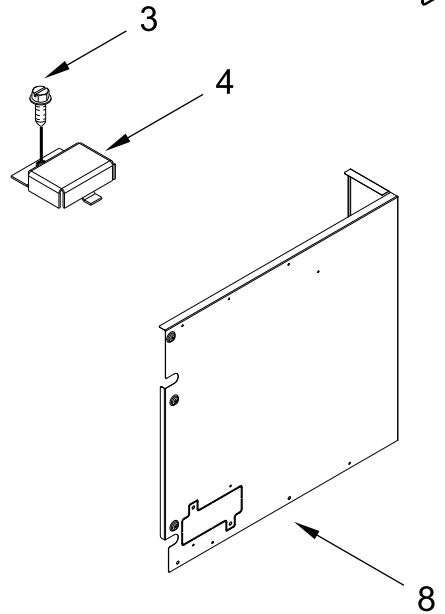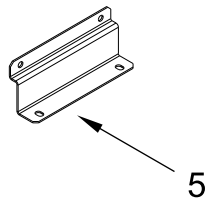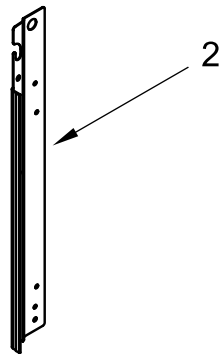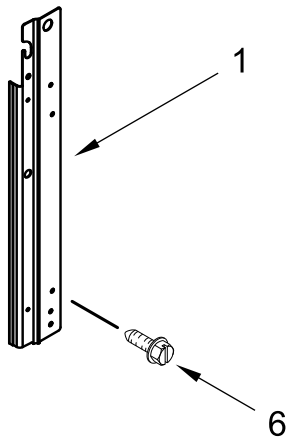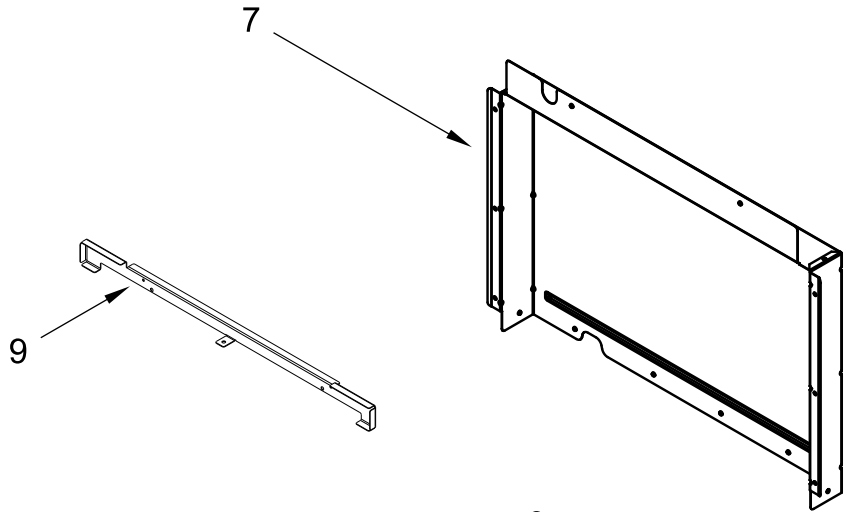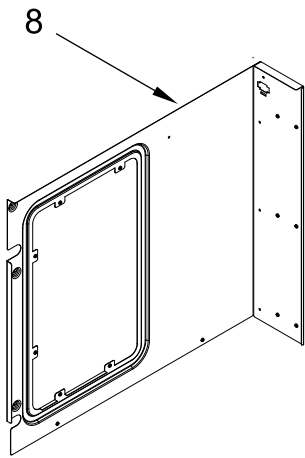

# TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11627410	Siderail, Combo (Left)	4	8285593	Cover, Connector	8	W11171909	Side, Combo Chassis (Left)
2	W11627411	Siderail, Combo (Right)	5	W10283025	Side, Bracket		W11171919	Side, Combo Chassis (Right)
3	7101P426-60	Screw	6	7101P633-60	Screw (Black)	9	W10283023	Support, Crossbar
			7	W11171004	Cover, Combo Chassis Back Duct			
 
# MICROWAVE DOOR PARTS

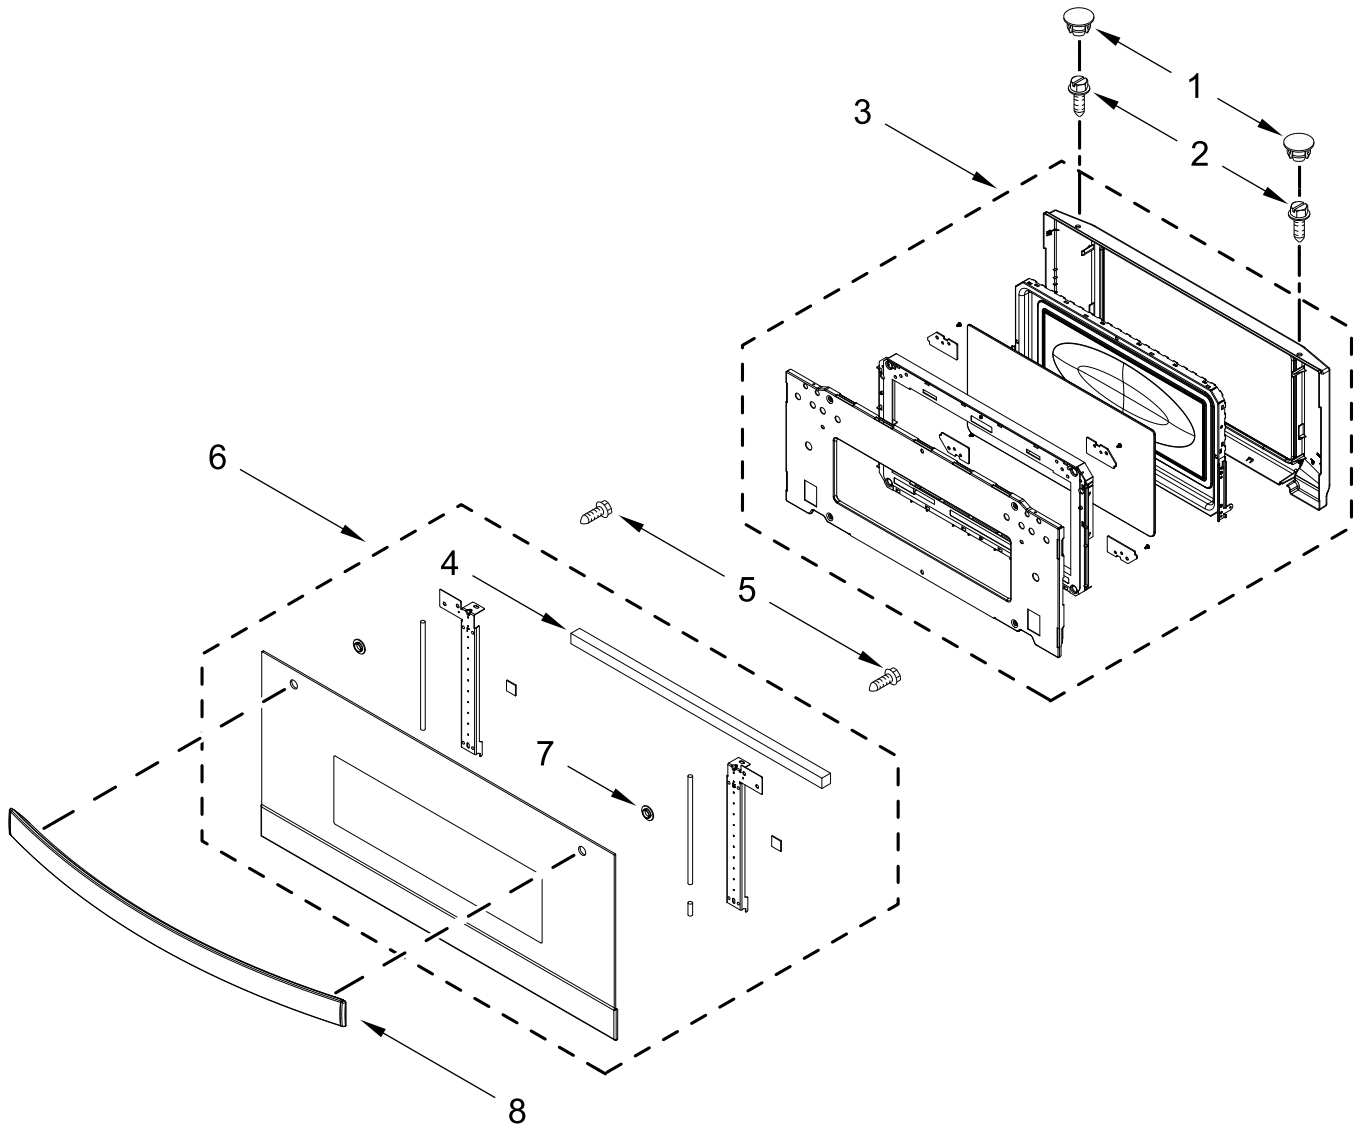



# MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	5	W11317731	Screw (Black)	8		Handle Assembly
2	7101P338-60	Screw	6		Door Assembly	W11532601		Stainless
3	W11639552	Inner Door Assembly		W11500266	Stainless			
4	W10359769	Foam, Door Handle	7	W10319024	Washer, Door			

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
		Trim, Tall Vent
	W11406624	Stainless Assembly, Bottom Vent
	W11369893	Black
	W11369891	Stainless