



ROKU[®]

Pro Series TV


Quick Start Guide

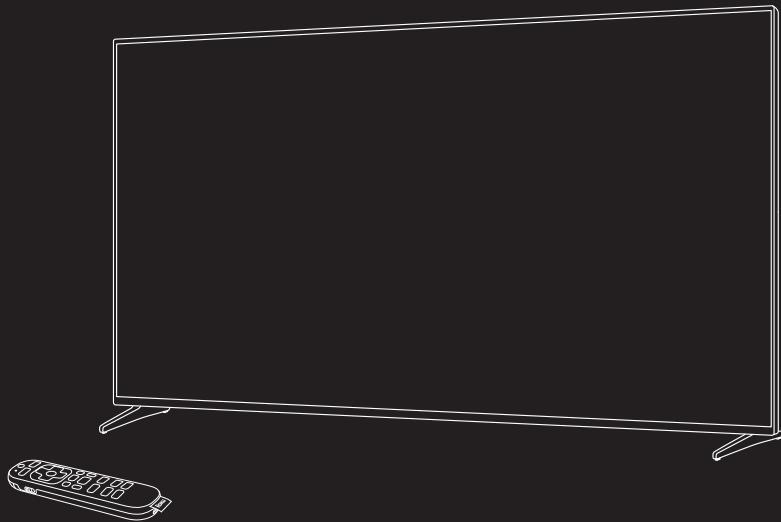


What's included

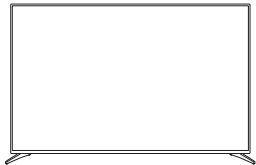

Roku Pro Series
4K QLED TV

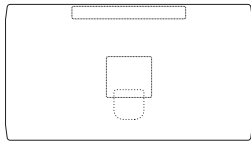

Cardboard
TV placement guide

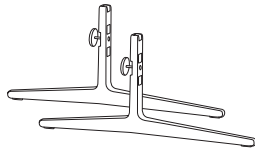

TV
stands



Power
cable



Remote
charging cable



Roku Voice
Remote Pro

Need help?

For setup help or support, visit or call


[go.roku.com/TV](https://www.go.roku.com/TV)

1-816-272-8106

4:00 am - 8:00 pm PT



STEP 1: Attach stands

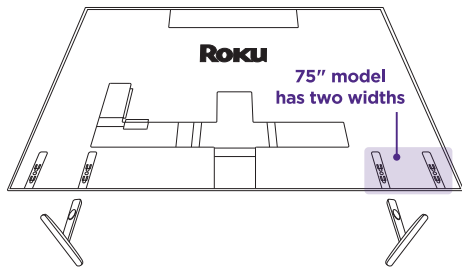


Slide stands into slots and secure with included thumbscrews


Note: Stands are adjustable.
Choose from two different heights.

For mounting instructions,
visit [go.roku.com/TVmount](https://www.roku.com/TVmount)

STEP 2: Turn on & pair remote

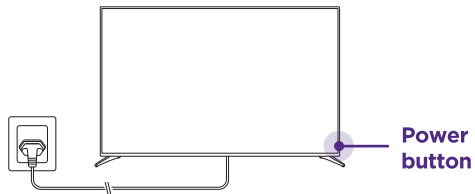

Plug it in

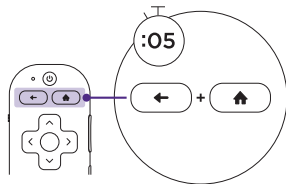

Press and hold for 5 seconds to pair


STEP 3: Activate your TV



Follow on-screen setup

Note: You'll need a internet connection to activate your TV.

Get to know your remote

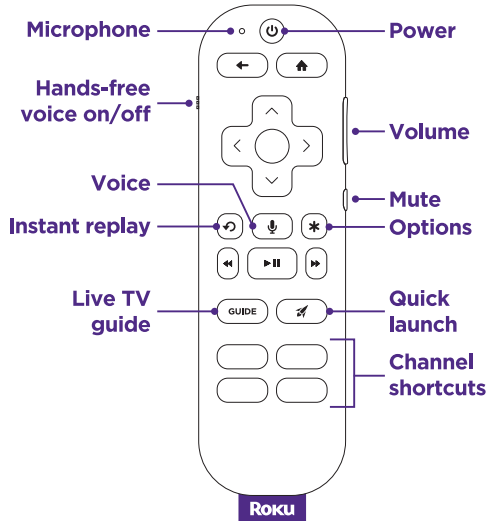

Get to know your TV

Video connections

HDMI® 1 & 2

Game consoles

HDMI 3

General video input

Antenna/Cable

Digital antenna, cable connection

Audio connections

HDMI 4 eARC (recommended)

AV receivers, soundbars

Optical

AV receivers, soundbars

Other connections


USB

Flash drive, charge your voice remote

LAN

Wired internet connection

Lost remote
finder button

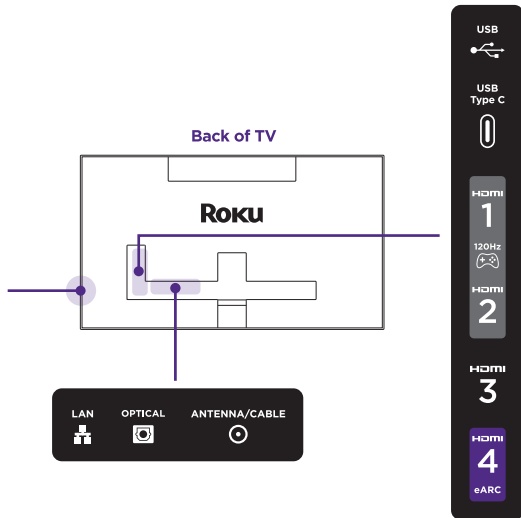

Let's get started

Roku

© 2024 Roku, Inc. All Rights Reserved. Roku, the Roku logo, and the purple d-pad and purple fabric tag designs are trademarks or registered trademarks of Roku, Inc.

4100001069_02