




ELECTRIC COMBO WALL OVEN

MODELS:

MOEC6030LZ00 (Stainless)


OVEN PARTS

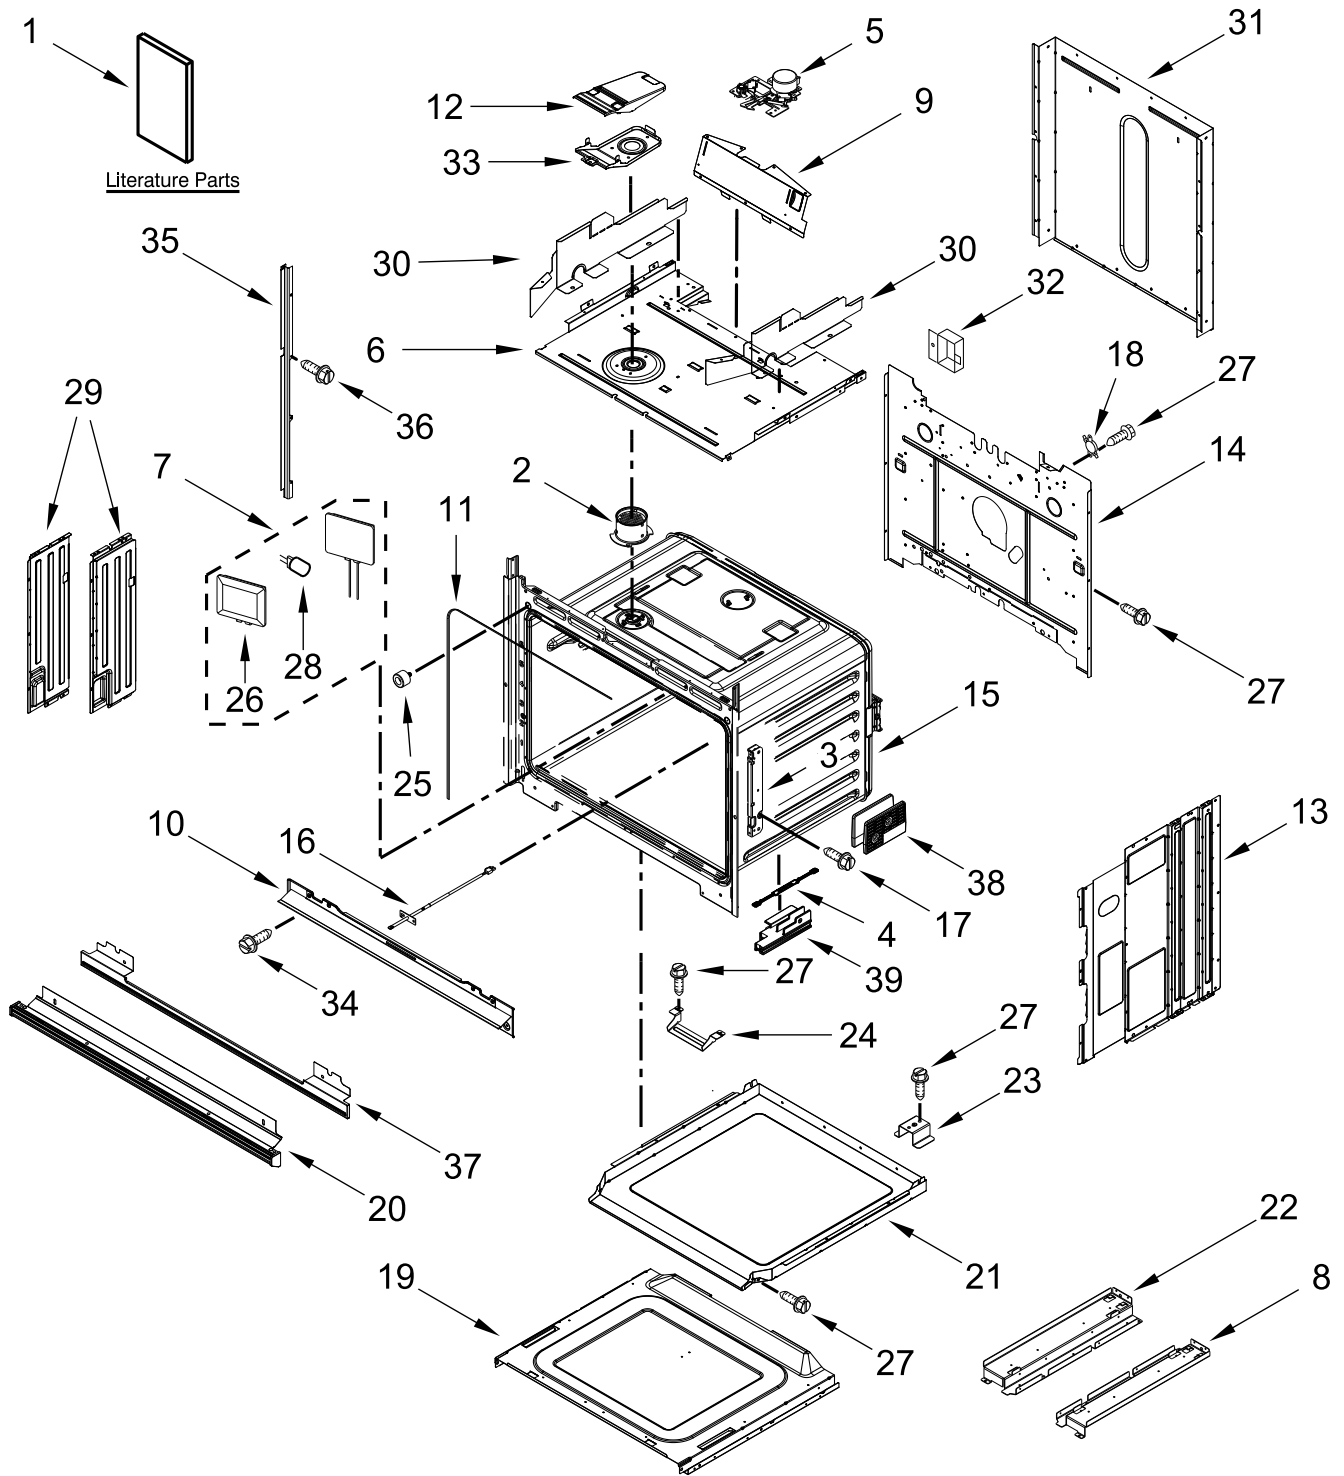

OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	18	4449751	Thermostat (TOD)	34	W11249635	Screw
	W11555307	Owner's Manual	19	W11135103	Base, Chassis	35		Trim, Side
	W11553924	Quick Start Guide	20		Assembly, Bottom Vent		W11235457	Black (Left)
	W11604694	Tech Sheet		W11467754	Stainless		W11235458	Black (Right)
2	W11085298	Tube, Vent	21	W11244446	Duct, Bottom Chassis	36	W11404000	Screw
3	W11239070	Receiver, Hinge (Left)	22	W10283020	Support, Base (Left)	37		Trim, Bottom Vent
	W11239072	Receiver, Hinge (Right)	23	W11135135	Support, Air Channel		W11560859	Black
4	W11558603	Spacer, Base	24	W11390667	Spacer, Chassis Bottom Duct	38	W11245118	Foot, Base
5	W11132456	Latch, Motorized	25	W11166315	Bumper and Screw	39	W11245114	Foot, Chassis (Left)
6	W11168071	Top, Chassis	26	W10472386	Lens, Light		W11245116	Foot, Chassis (Right)
7	W11205574	Assembly, Oven Light	27	7101P426-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
8	W10283021	Support, Base (Right)	28	W10472384	Bulb, Light		W11188284	Insulation, Wrap
9	W10904163	Deflector, Blower	29	W11167419	Cover, Suction (Left)		W11234758	Insulation, Cavity
10	W11518347	Vent, Combo Center		W11186675	Cover, Suction (Right)		W11659373	Harness, Main
11	W11262567	Gasket	30	W11186391	Deflector, Chassis (Left)		W11264646	Harness, Door Latch
12	W11256424	Cover, Vent Exhaust		W11186398	Deflector, Chassis (Right)		W11249930	Harness, Communication
13	W11165274	Side, Chassis	31	W11134657	Duct, Lower Chassis Back		W11356991	Harness, Ground Console Combo
14	W11223327	Back, Chassis					313438	Clip, Harness
15		Liner, Oven (Not Serviceable)					4448664	Clamp, Conduit
16	W11346074	Probe, Sensor	32	8285593	Cover, Connector		W11394923	Bag, Hardware
17	W10254050	Screw	33	W11256423	Base, Vent Exhaust			


CONTROL PANEL PARTS

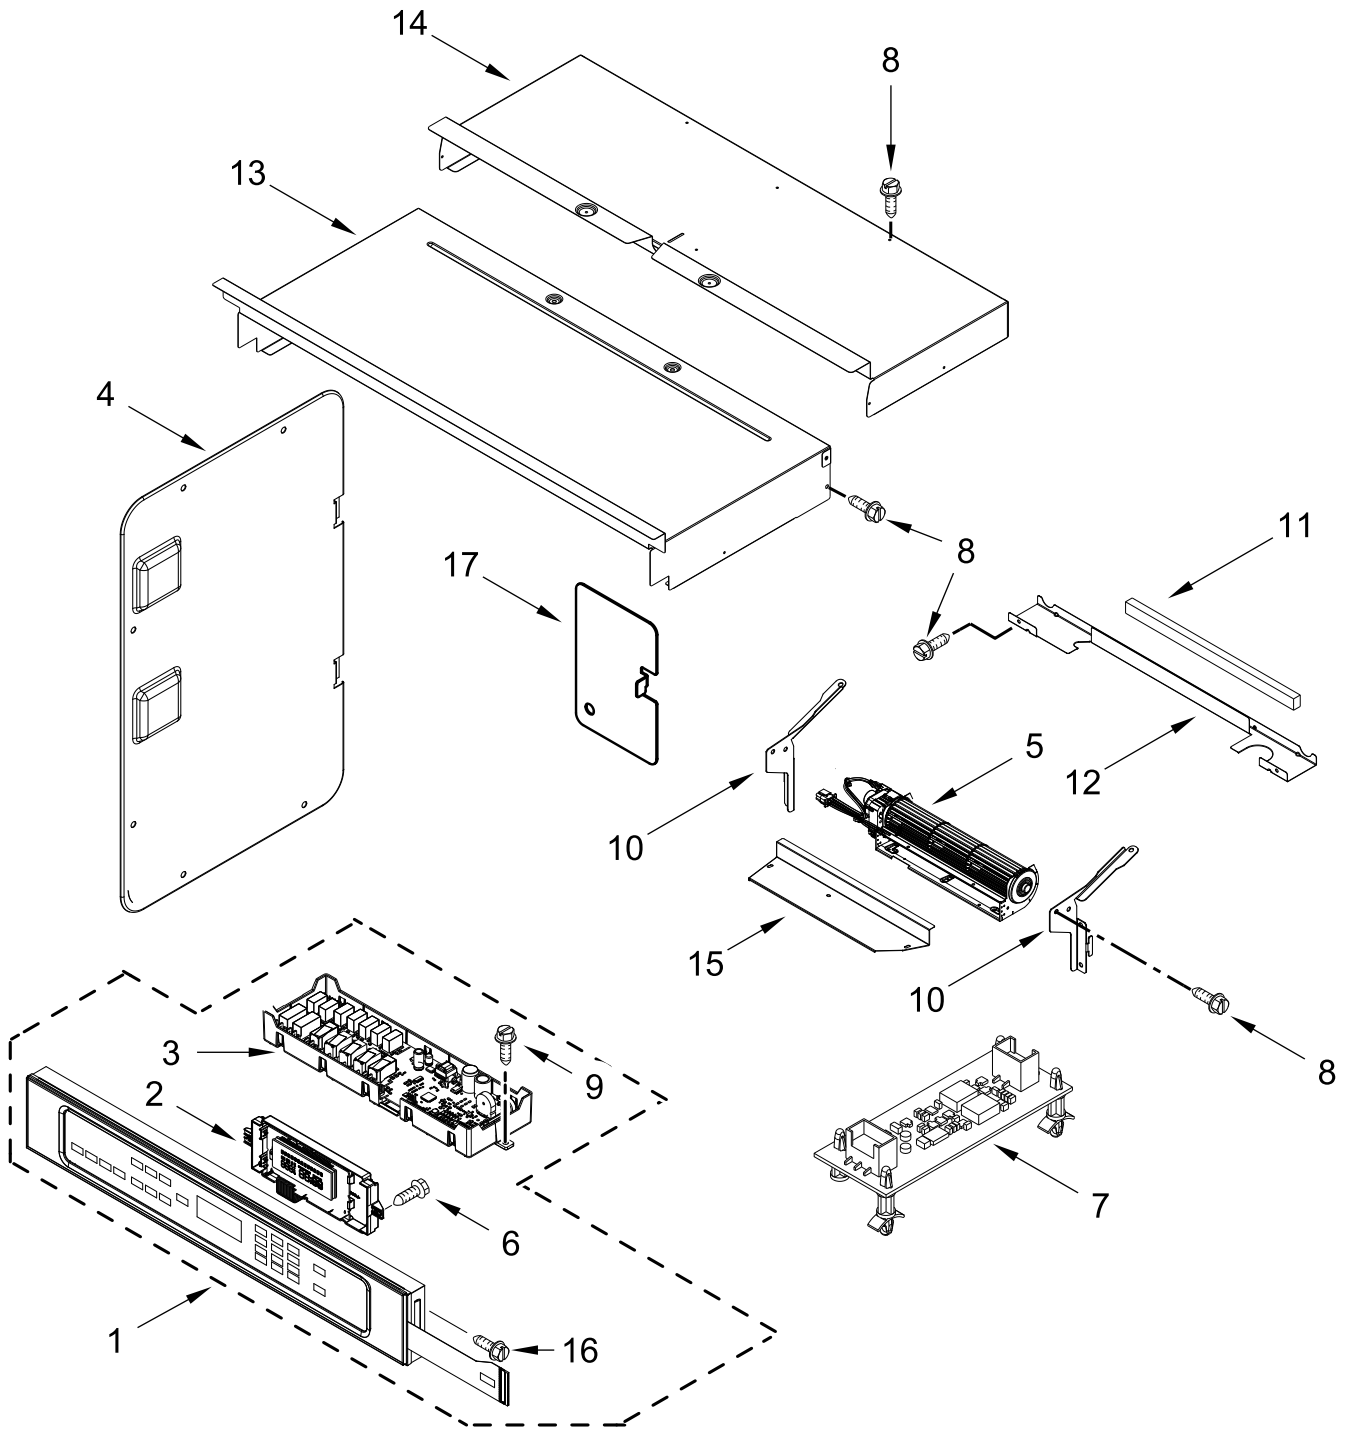

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Control Panel (Includes Overlay)	6	7101P403-60	Screw	12	W11166802	Divider, Chassis Back
	W11467611	Stainless	7	W10412514	Board, Wide Interface	13	W10318158	Chassis, Cover Top Front 30 IN
2	W10752316	Interface (Maxwell), User Board	8	7101P426-60	Screw	14	W10588732	Chassis, Cover Top Back 30 IN
			9	7101P427-60	Screw	15	W10681157	Cover, Combo Blower
3	W11556519	Control, Maxwell	10	W10655463	Bracket, Blower (Left)	16	W11339492	Screw (Black)
4	W10655467	Chassis, Combo Side		W10655462	Bracket, Blower (Right)	17	W11533682	Cover, WIFI
5	W11397930	Blower	11	4451758	Block, Foam			


OVEN DOOR PARTS

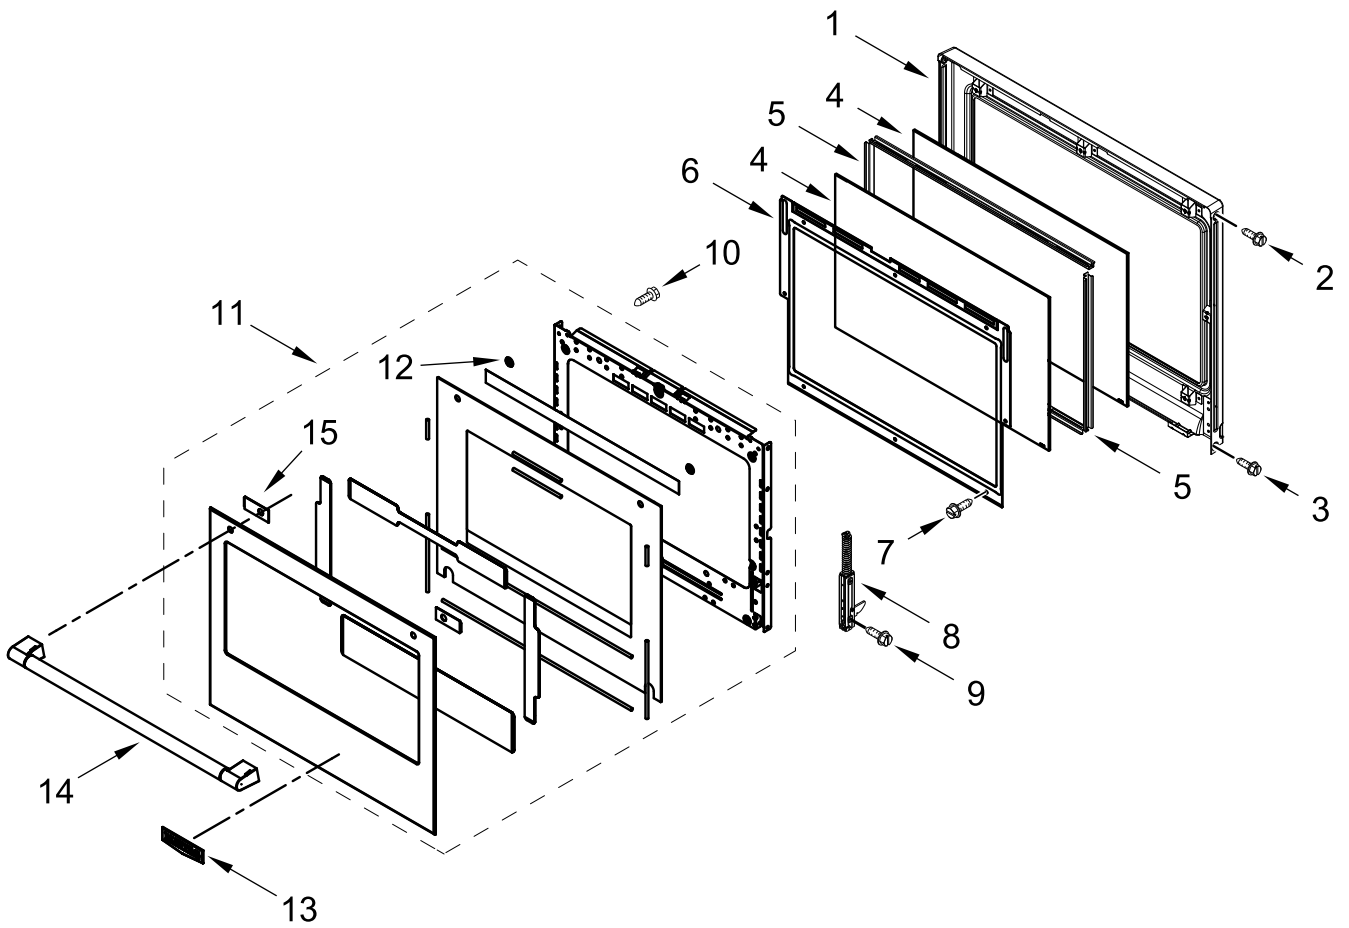

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11302587	Liner Assembly	8	W11296036	Hinge, Door (Left)	14		Handle Assembly
2	7101P375-60	Screw		W11296037	Hinge, Door (Right)		W11495825	Stainless
3	W11290045	Screw	9	3196183	Screw	15	W10650497	Spacer, Handle
4	W10618107	Glass, Inner	10	W11317731	Screw (Black)			
5	W11302730	Spacer, Air Divider	11		Door Assembly			
6	W11174095	Retainer, Air Divider Glass		W11470057	Stainless			
7	7101P426-60	Screw	12	W10319024	Washer, Door			
			13	W11628148	Badge			


INTERNAL OVEN PARTS

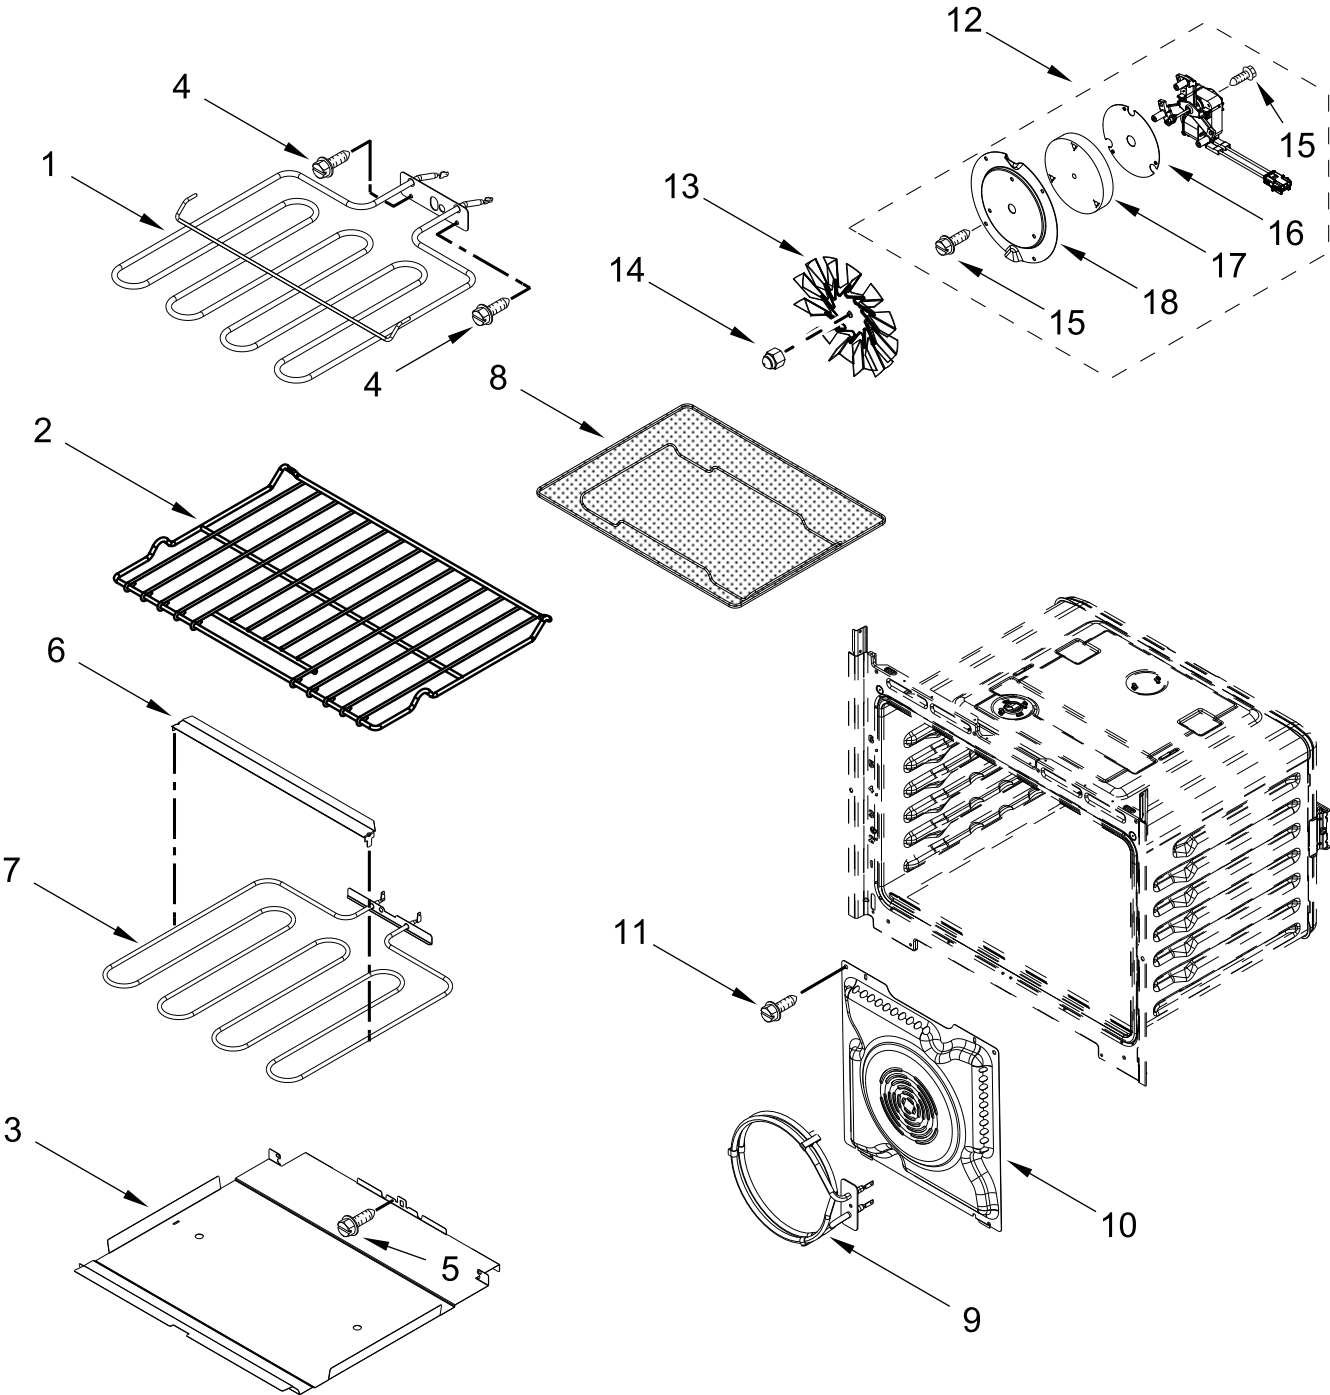

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11238160	Element, Broil	8	W11629505	Airfry Basket Kit	15	W10720084	Screw
2	W10554526	Rack, Oven	9	W10260248	Ring, Element	16	W11251715	Plate, Convect Motor
3	W10318198	Tray, Hidden Bake	10	W10359278	Baffle, Convection	17	W11251716	Insulation, Convect Motor
4	7101P434-60	Screw	11	W10906658	Screw	18	W11398057	Cover, Convect Plate
5	7101P426-60	Screw	12	W11398058	Convect Motor Assembly			
6	W10282957	Crossbar, Hidden Bake Tray	13	W11425715	Blade, Fan			
7	W11292248	Element, Bake	14	W11433702	Nut, Acorn (LH)			


CABINET AND STIRRER PARTS

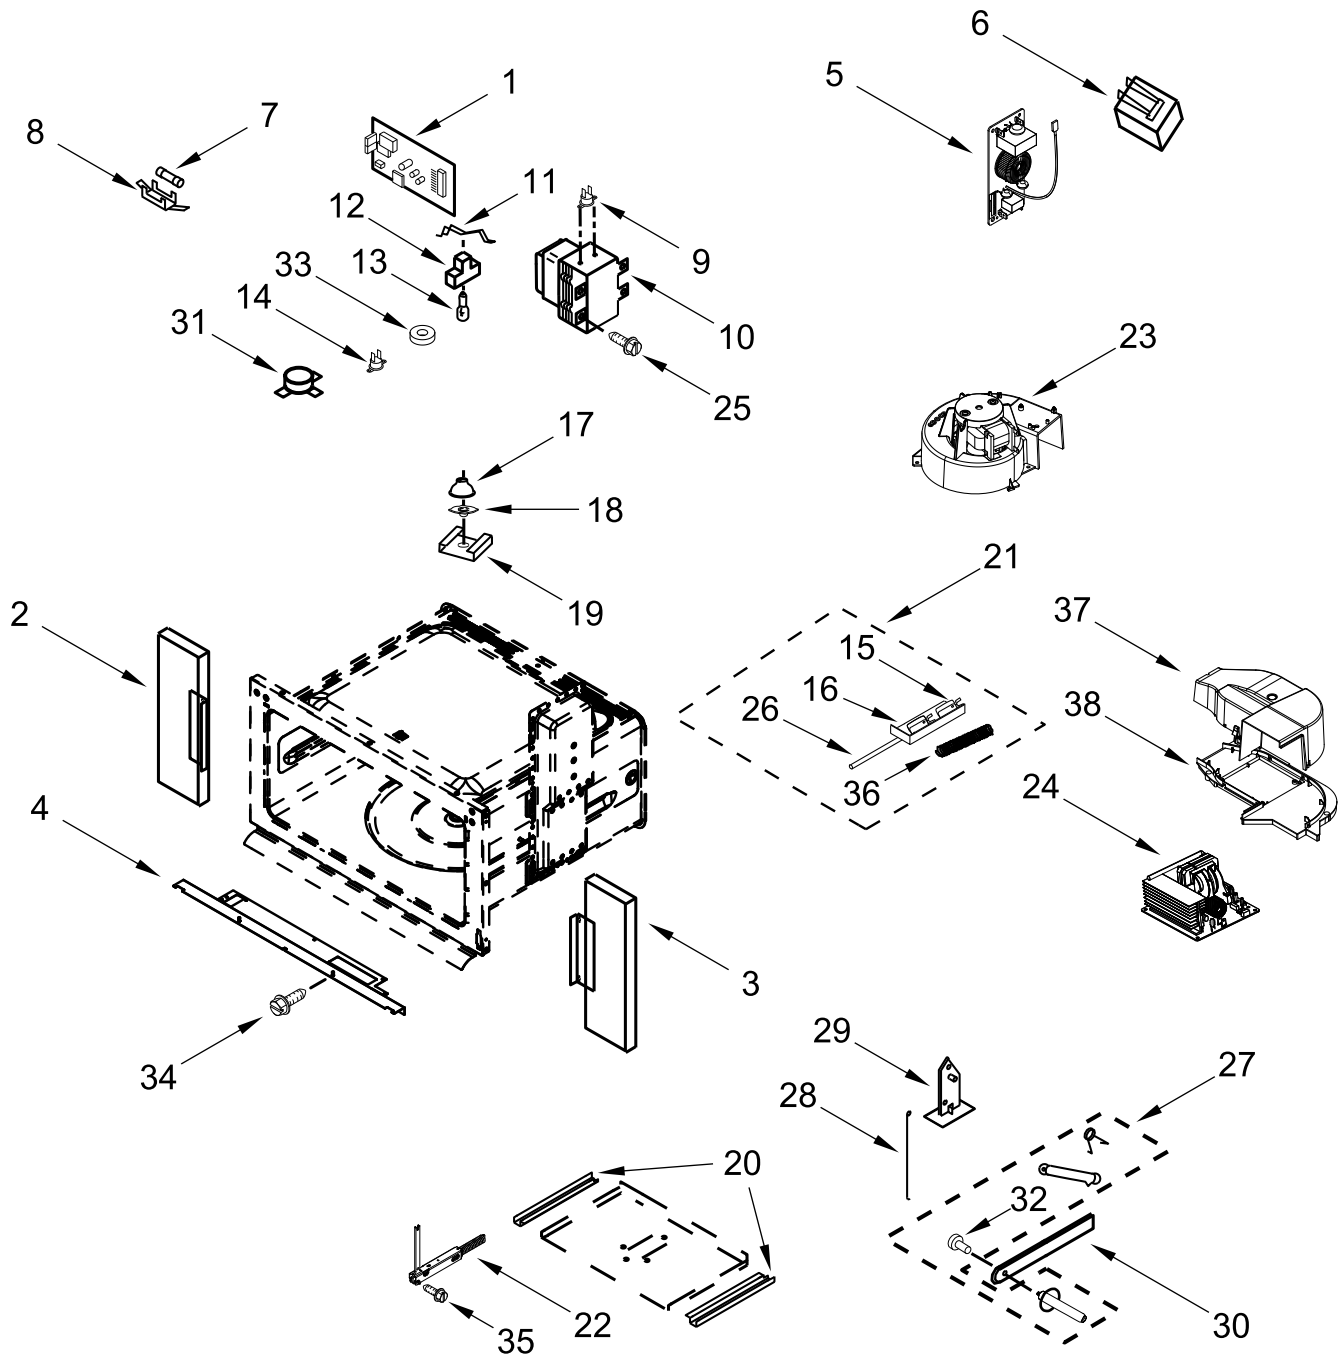

CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11290000	Control Board, Microwave	16	W10876593	Holder, Switch	33	W10769147	Sealing, Lamp
2	461967017491	Trim, Side (Left)	17	423107022541	Reflector	34	461967825321	Screw
3	461967017481	Trim, Side (Right)	18	423107720491	Lens, Lamp	35	461967825781	Screw (Shoulder)
4	W11334716	Vent, Top Microwave	19	W11440819	Clip, Spring	36	423107570871	Spring, Release Rod
5	W11505129	Filter, Noise	20	461967008461	Support, Bottom	37	W11591019	Housing, Upper Inverter
6	461967848621	Transformer, Light (20V)	21	W10358241	Assembly, Interlock Switch	38	W11591018	Housing, Lower Inverter
7	241908600053	Fuse	22	W11474403	Hinge, Door			FOLLOWING PARTS NOT ILLUSTRATED
8	4375231	Block, Fuse	23	W11131760	Cooling Fan Assembly	W11454022		Harness, Fan and Turntable
9	461967846741	Thermostat, Magnetron	24	W11504539	Inverter	W11539494		Harness, Inverter
10	W11504545	Magnetron	25	461967825971	Screw	W11539527		Jumper Harness, Communication
11	W10465869	Spring, Lamp	26	461967750464	Rod, Push	W11555169		Harness, Interlock
12	W10490593	Holder, Lamp	27	W10128850	Assembly, Sliding Arm	W11555848		Harness, Input
13	W10795595	Lamp, Halogen	28	461967570351	Spring, Torsion			
14	W10389447	Thermostat	29	461967750494	Support			
15	461967848881	Switch	30	W11213889	Arm, Sliding			
			31	W10460457	Sensor, Humidity			
			32	461967510191	Bushing			


INTERNAL MICROWAVE PARTS

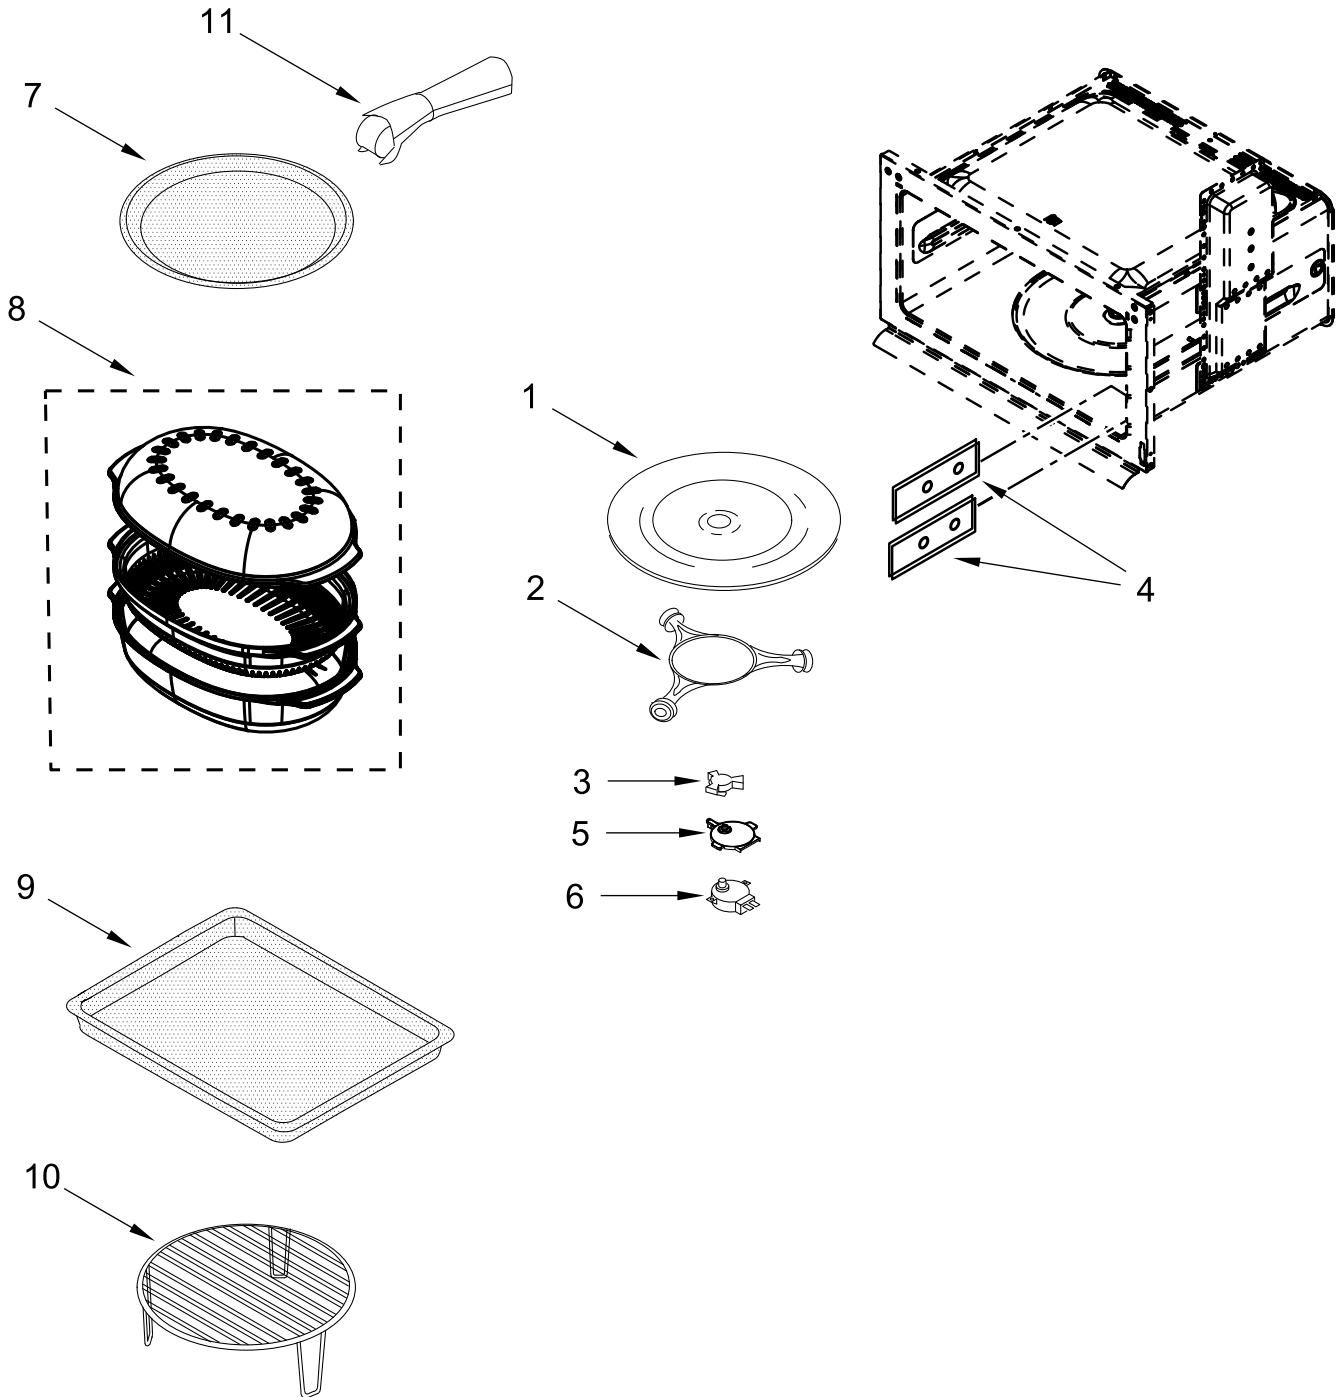

INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11340342	Turntable, Glass	5	461967753742	Adapter, Turntable Motor	7	W10120480	Plate, Crisp
2	W10367316	Ring, Turntable				8	8205262RB	Steamer, Microwave
3	W10545578	Drive, Turntable	6	461967848971	Motor, Turntable	9	W10120486	Plate, Baking
4	461967451001	Plate, Cover			FOLLOWING ACCESSORIES NOT INCLUDED	10	W10120483	Rack
						11	W10120481	Handle, Pan


TOP VENTING PARTS

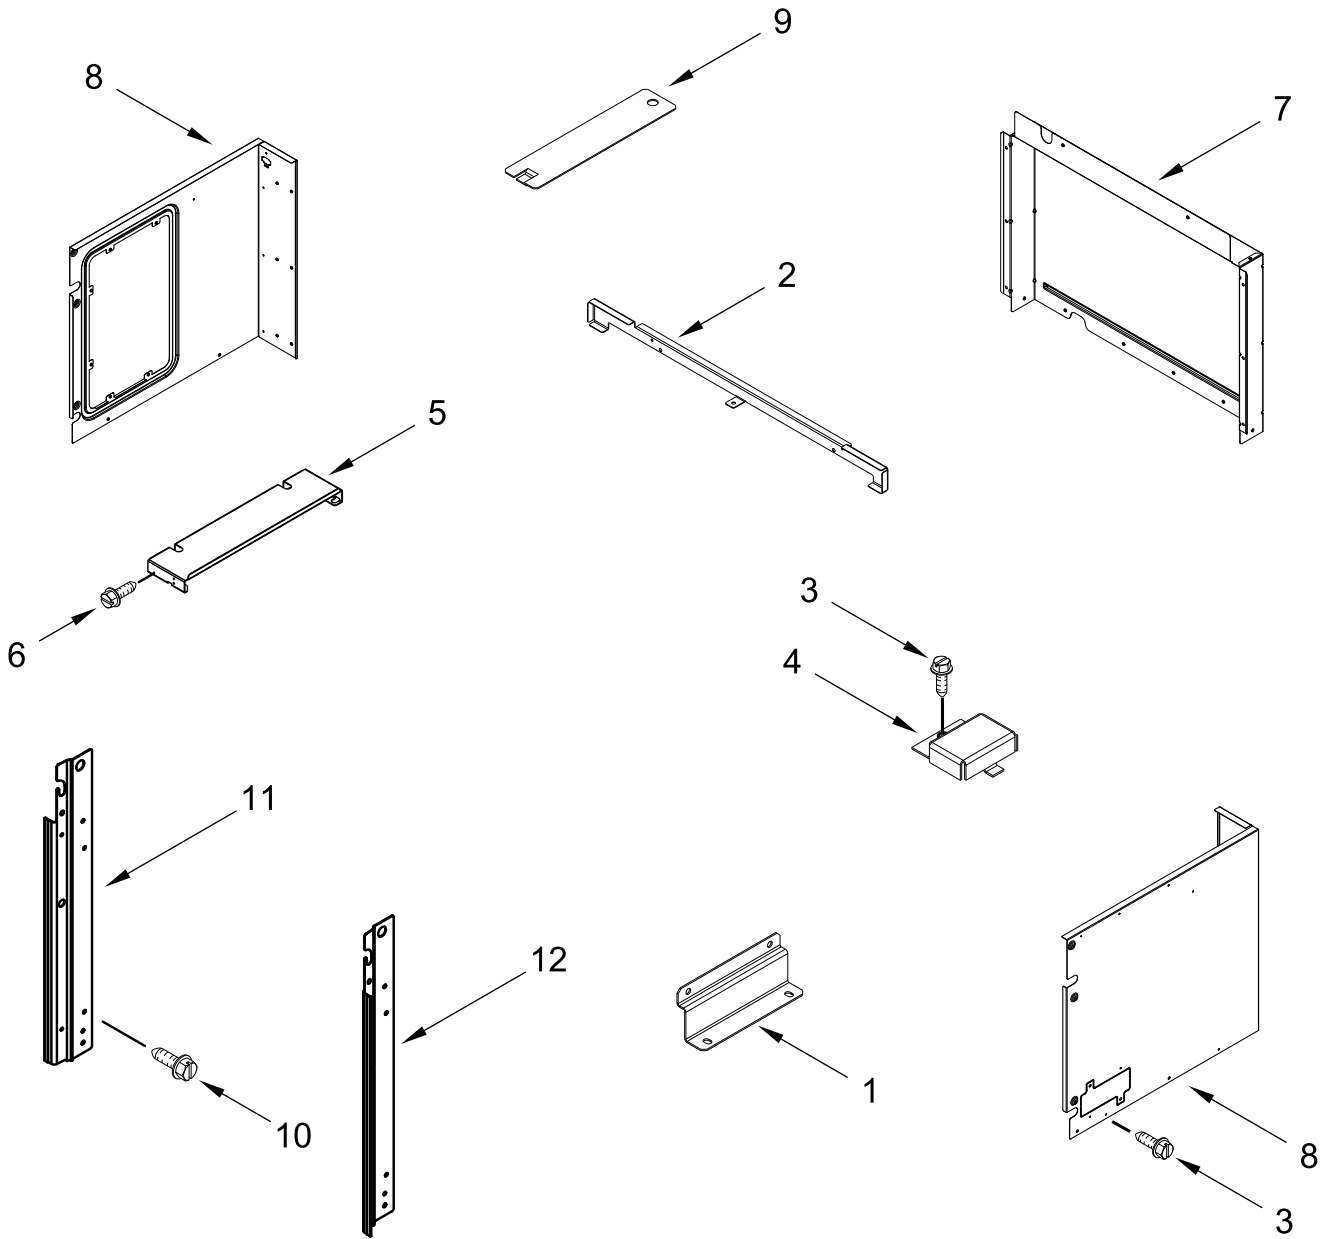

TOP VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10283024	Side, Bracket	7	W11171004	Cover, Combo Chassis Back Duct	10	7101P633-60	Screw (Black)
2	W10283022	Support, Crossbar	8	W11171909	Side, Combo Chassis (Left)	11	W11627410	Siderail, Combo (Left)
3	7101P426-60	Screw		W11171919	Side, Combo Chassis (Right)	12	W11627411	Siderail, Combo (Right)
4	8285593	Cover, Connector		W11171919	Side, Combo Chassis (Right)			
5	W10356644	Support, Microwave Module	9	W10356437	Cover, Slot Module			
6	4449745	Screw						

MICROWAVE DOOR PARTS

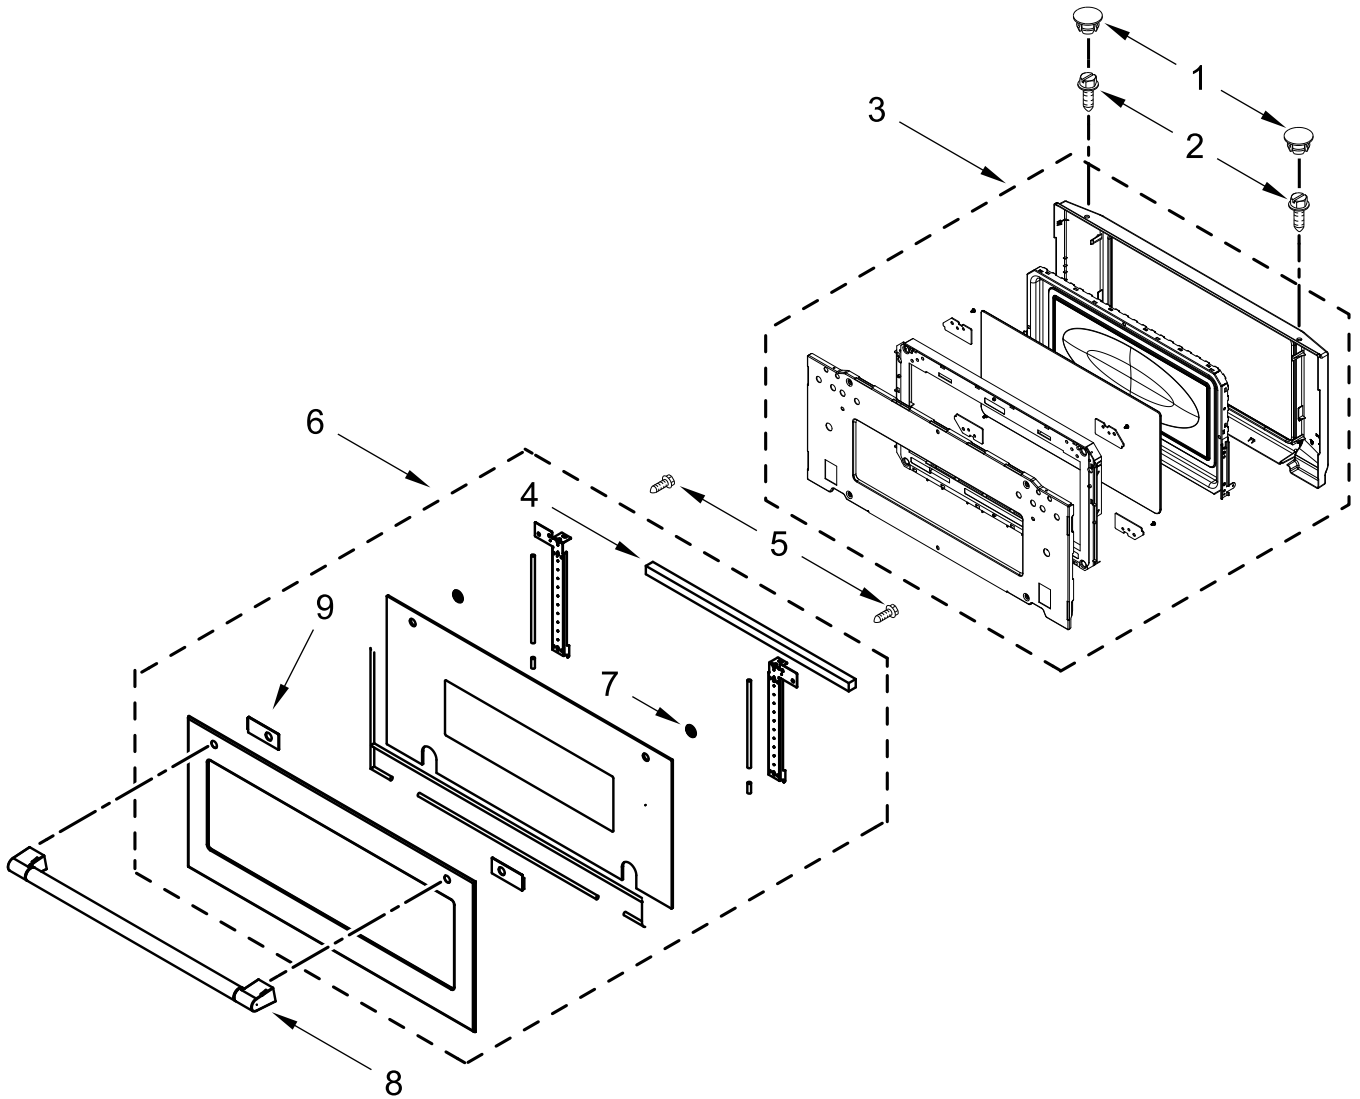

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8304588BL	Cap, Screw	6		Door Assembly	8		Handle Assembly
2	7101P338-60	Screw		W11474393	Stainless		W11495825	Stainless
3	W11328745	Inner Door Assembly	7	W10319024	Washer, Door	9	W10650497	Spacer, Handle
4	W10359769	Foam, Door Handle						
5	W11317731	Screw (Black)						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
	4392899	Biscuit and Bisque
	511873	White Porcelain (2 oz.)
		PAINT, SPRAY
	350930	White
	285006	Black
	4392901	Biscuit and Bisque
	350956	Almond
	350938	Gray Primer
	350942	White Primer
		ADHESIVE
	482338	Sealer, Silastic
		ACCESSORIES
		Trim, Tall Vent
	W11570325	Black
	W11570323	Stainless
		Vent, Deflector
	W11551866	Stainless
		Trim, Bottom Vent
	W11570321	Stainless