

ASSEMBLY INSTRUCTIONS


B677-050 ANDOVER DRESSER
 B677-052 ANDOVER DRESSER 6 DRAWER
 B677-060 ANDOVER MIRROR

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.


STEP 1

PARTS LIST			
ITEM	DRAWING	DESCRIPTION	QTY
1		DOOR DRESSER	1 PC
		DRESSER 6 DRAWER	1 PC
2		MIRROR	1 PC
3		MIRROR SUPPORT	2 PCS


HARDWARE LIST			
ITEM	DRAWING	DESCRIPTION	QTY
A		JCBB (M6) 6 x 35MM	8 PCS
B		Spring Washer M6 x 12mm	8 PCS
C		Flat Washer M6 x 12mm	8 PCS
D		ALLEN KEY M4 4 x 35 x 65MM	1 PC

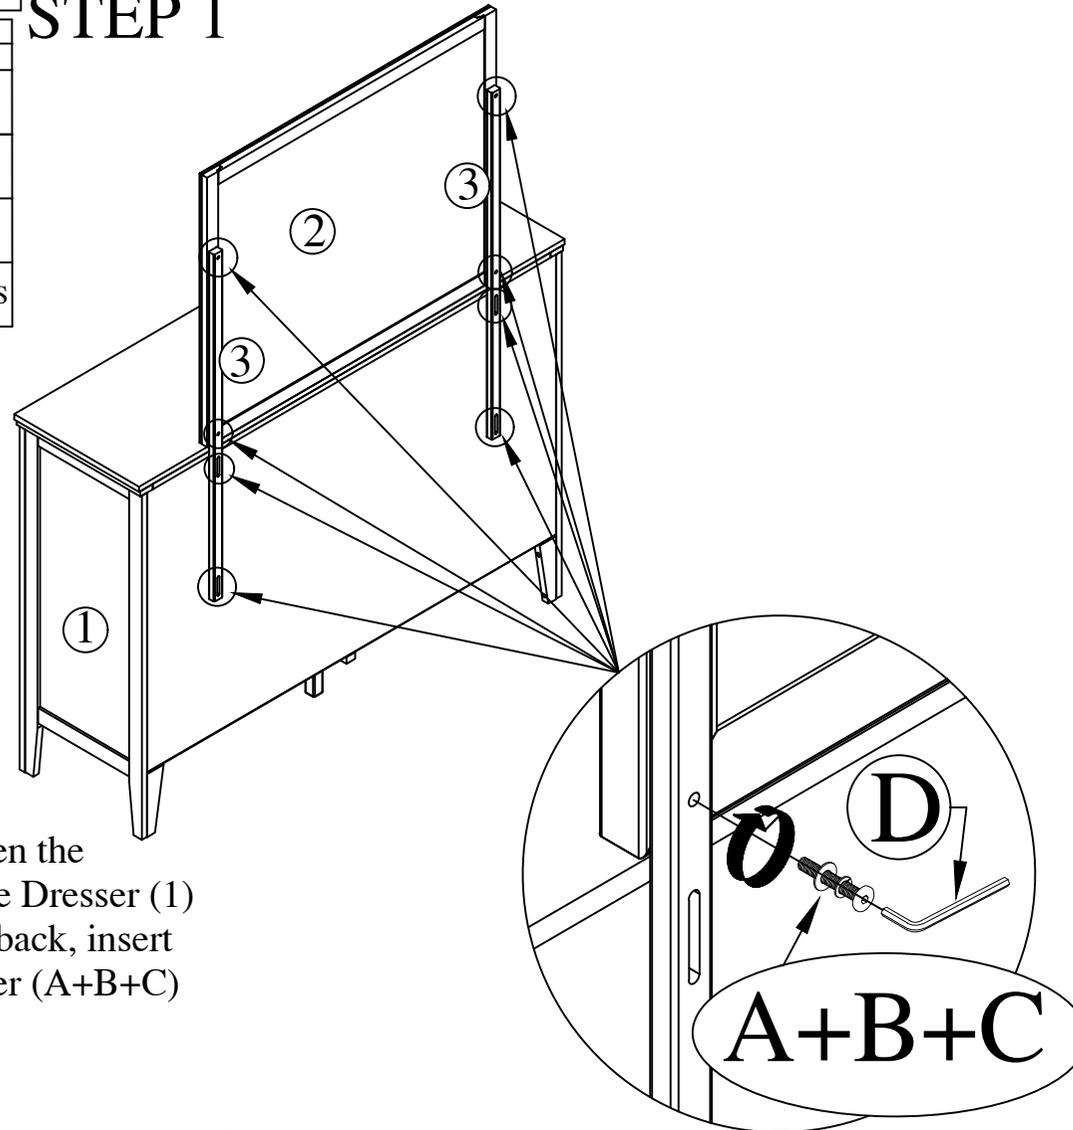

Step 1 :Attach and tighten the Mirror Support (3) to the Dresser (1) and Mirror frame (2) at back, insert JCBC (M6) With Washer (A+B+C) as shown.

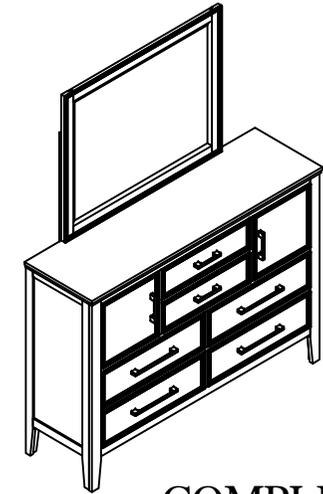

COMPLETED ASSEMBLY

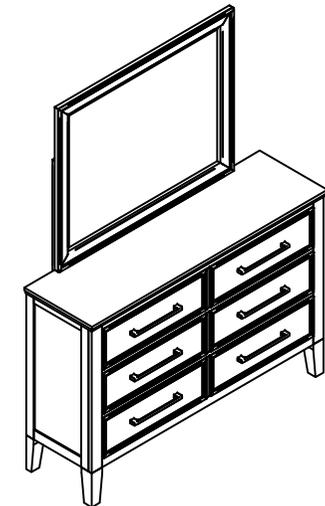

COMPLETED ASSEMBLY

NOTE: MUST TIGHTEN SCREW PERIODICALLY. WITH USE SCREWS WILL BECOME LOOSE CHECK TIGHT OF ALL SREWS EVERY 6-8 WEEKS.

MADE IN MALAYSIA