


KitchenAid®

GAS RANGE

MODELS:

JGS1450ML0 (Stainless)


COOKTOP PARTS

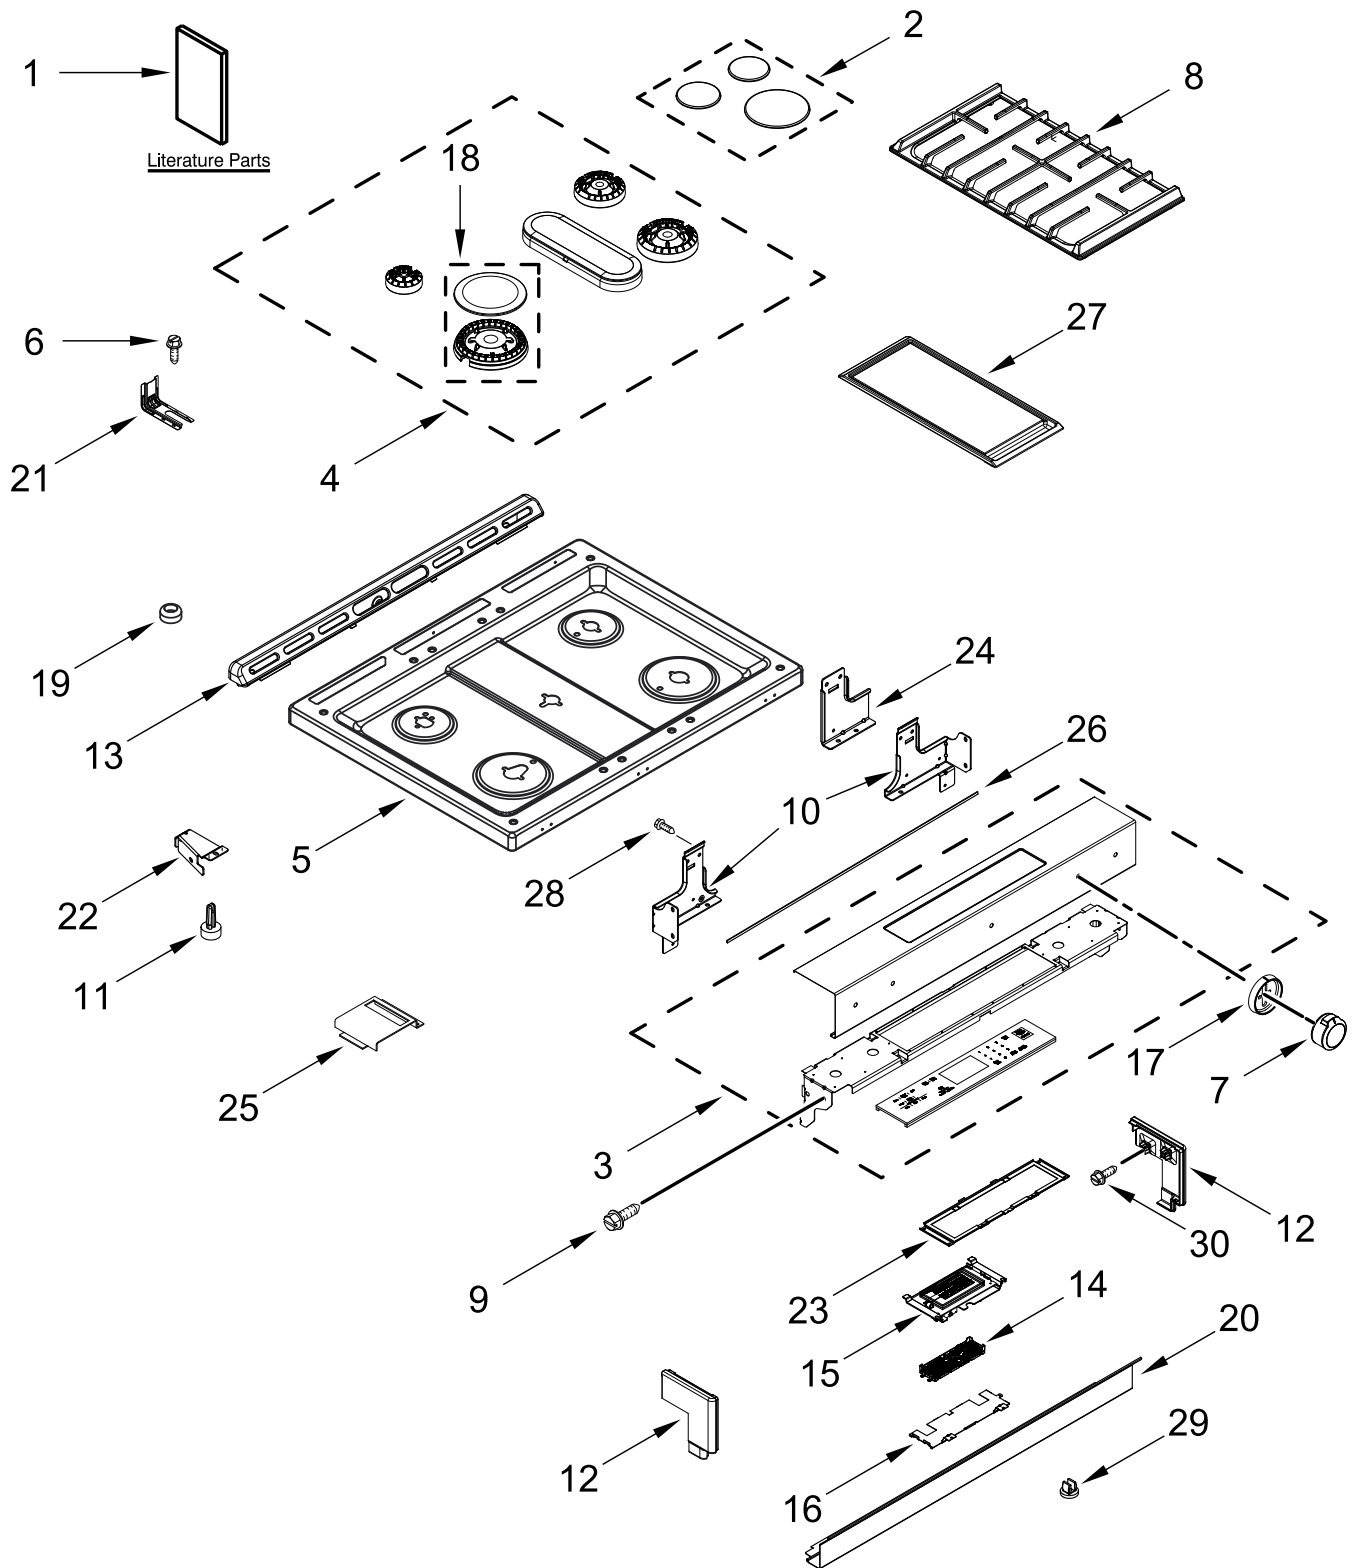

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	12		Endcap	27	W10432544	Griddle
	W11615559	Dimension Guide		W10557751	Stainless (Left)	28	W10067840	Screw
	W11602522	Owners Manual		W10557754	Stainless (Right)	29	W10645947	Grommet
	W11602648	Tech Sheet	13		Trim, Vent	30	9780274	Screw
	W11619449	Quick Start Guide		W10577782	Stainless			FOLLOWING PARTS NOT ILLUSTRATED
2		Burner Cap Kit	14	W11603772	Control, MRC2	W11635421		Harness, Main
	W11367440	Black (Set of 3)	15	W10759324	Assembly, Display	W10754419		Harness, Bake and Broil
3		Console	16	W10558372	Bracket, Control	W10598169		Harness, Display
	W11606821	Stainless	17		Bezel	W11635422		Harness, Bake and Warm Drawer
4	W11367105	Burner Kit (Set of 5)		W11592976	Stainless	W10575120		Harness, Keypad
5		Cooktop	18	W11366282	Burner Kit (Includes Cap and Spreader)	313438		Clip, Harness
	W11316217	Stainless			(Left Front)	3196520		Clip, Wire
6	7101P485-60	Screw, Anti-Tip Kit	19	W10854253	Bumper	W10580229		Wire, Ground
7		Knob	20		Console, Lower Panel			
	W11592981	Stainless (All except Left Front)		W10565662	Stainless			
	W10786064	Stainless (Left Front)	21	W11379947	Bracket, Anti-Tip			
8		Grate Kit	22	W10162253	Brace, Corner (Left)			
	W11188538	Black		W10162252	Brace, Corner (Right)			
9	3196169	Screw	23	W10557780	Bracket, Control			
10	W11563529	Bracket, Support (Left)	24	W10598048	Bracket, Console (Center)			
	W11563527	Bracket, Support (Right)	25	W11158783	Shield, Keypad			
11	8016P022-60	Glide, Main Top	26	W11512127	Gasket, Console and Cooktop			


CHASSIS PARTS

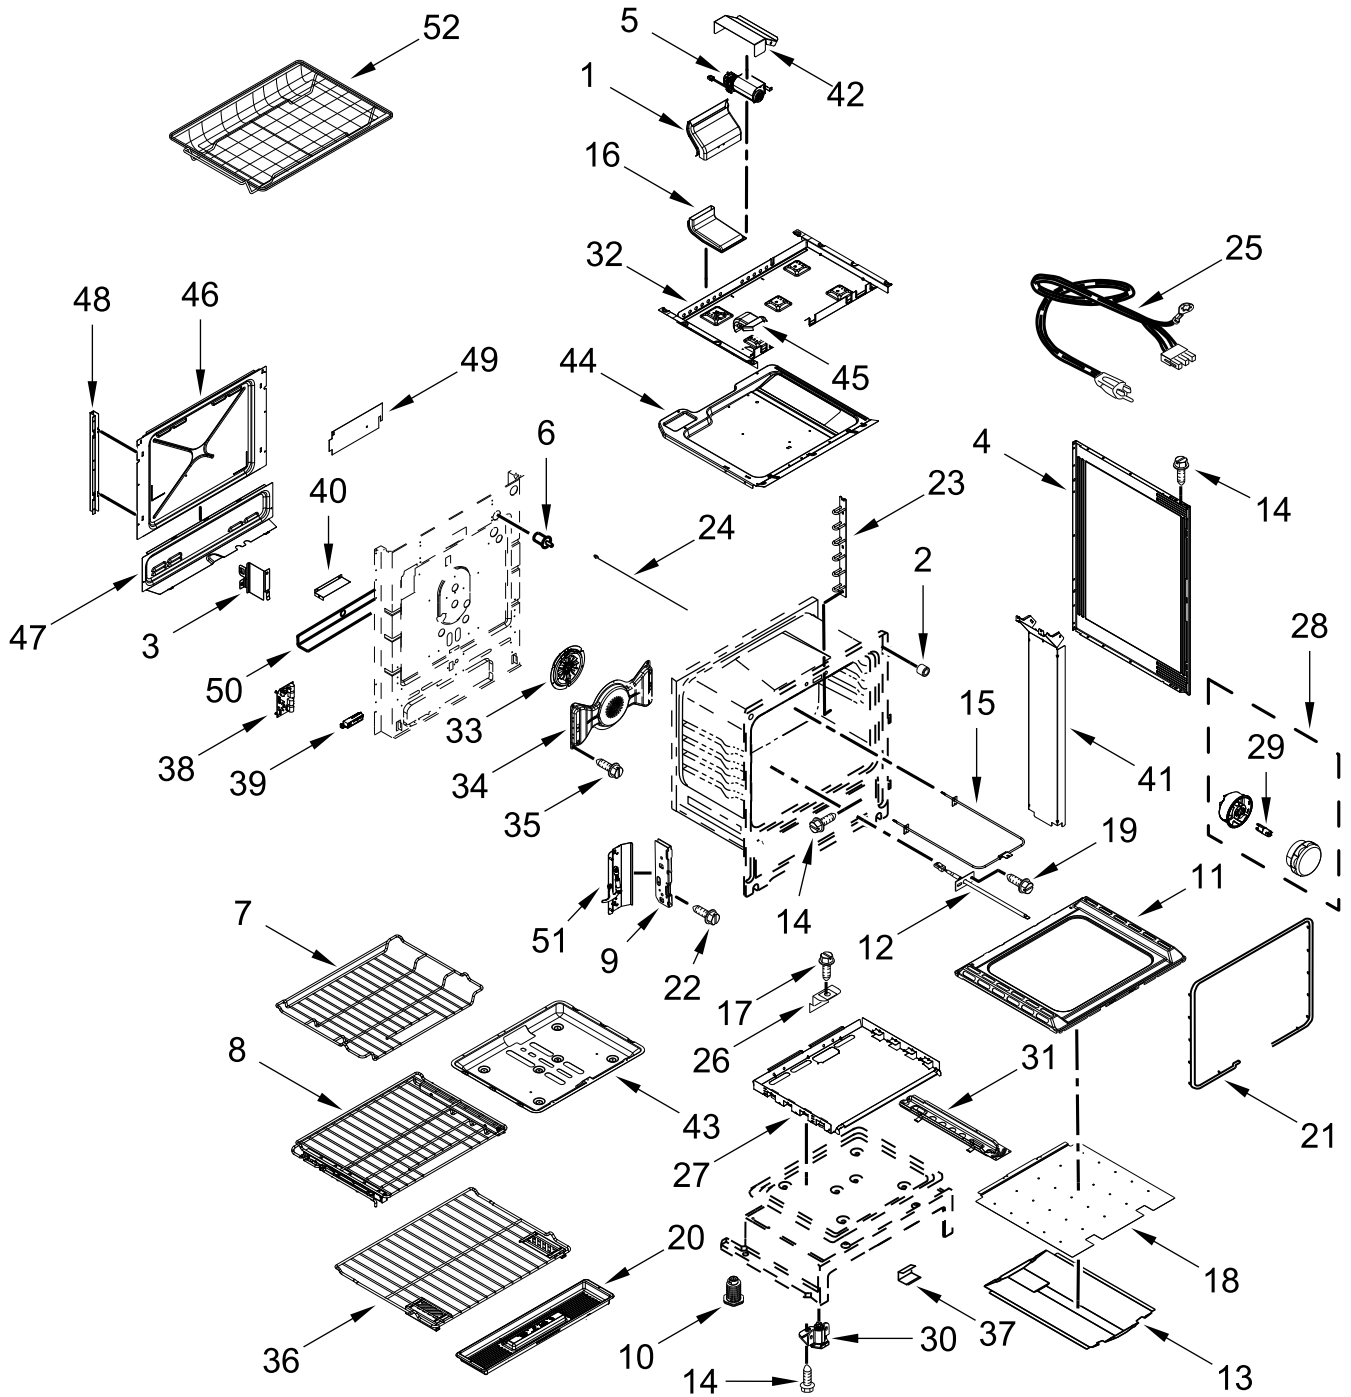

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10614920	Assembly, Flue	22	W10031780	Screw	42	W10162255	Duct, Cover
2	9758701	Spacer, Door	23	W10603482	Rack, Ladder	43	W11379356	Pan, Bake
3	W10273002	Bracket, Oven Support	24	W10273192	Rod, Door Switch	44	W10289168	Box, Burner SI
4		Panel, Side	25	W10889764	Cord, Power	45	W10162257	Duct, Cooktop
	W10162245	Black	26	W10035900	Support, Oven Bottom	46	W11379354	Cover, Back
5	W11467246	Cooling Fan	27	W10541959	Shield, Bake	47	W10162249	Cover, Wire
6	W11511828	Switch, Door	28	W11544377	Light Assembly	48	W10162241	Channel, Rear
7	W10554006	Rack, Maximum Capacity	29	W10571723	Bulb, Halogen 40 Watts	49	W11117035	Shield, Wire
8	W10911366	Rack, Sliding	30	W10341186	Front Foot Assembly	50	W10435470	Brace, Main Back
9	W10634238	Hinge, Receiver	31	W10390008	Base Rail Assembly (Left)	51	W10605411	Receiver, Slow Close Hinge
10	W10058460	Foot, Leveling		W10390007	Base Rail Assembly (Right)	52	W11526015	Basket, Air Fry
11	W10211368	Bottom, Oven						FOLLOWING PARTS NOT ILLUSTRATED
12	W10586204	Sensor	32	W11320442	Gas Box Burner		4820F015-59	Insulation, Strap
13	3601P356-45	Baffle, Bake Burner	33	W11353926	Convection Assembly		W10289173	Insulation, Wrap
14	3196178	Screw	34	W10554262	Baffle, Full Convection		W10162240	Insulation, Back
15	W10552502	Element, Broil Assist	35	W10362924	Screw		W10701082	Insulation, Vent Trim
16	W11040249	Assembly, Flue (Upper)	36	W10554005	Rack, Heavy Duty		7111P017-60	Clamp, Wire
17	W10362924	Screw	37	W10137382	Clip, Panel		3196896	Clip, Wire
18	W10323077	Diffuser, Flame	38	W10457998	Module, Spark (0 plus 2)			
19	3196178	Screw	39	W10475149	Module, Spark			
20	W10686408	Kit, Reservoir (Steam Rack)	40	W11206138	Guard, Splash			
21	W11491752	Gasket, Door	41	W10162254	Duct, Cooling			


MANIFOLD PARTS

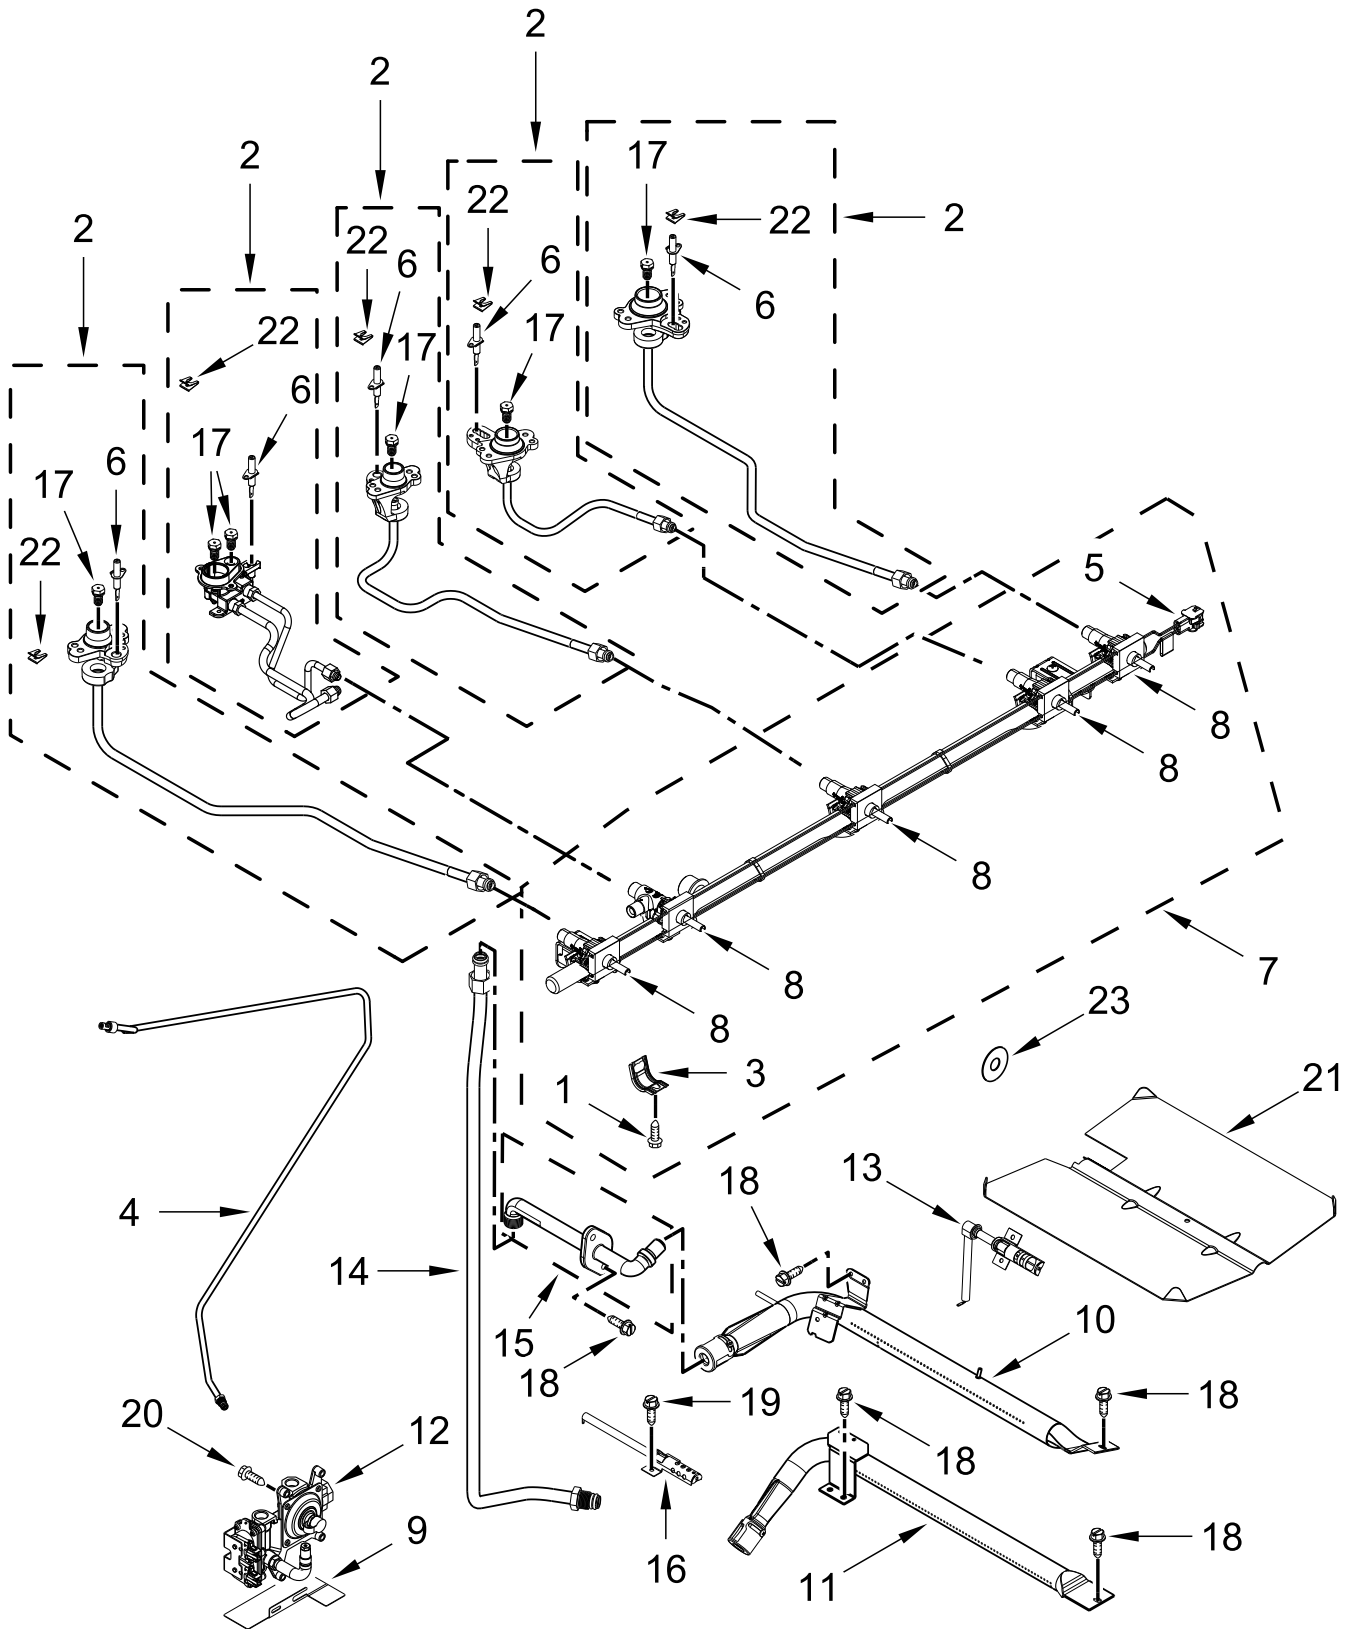

MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11577790	Screw	7	W11602206	Manifold Assembly	17	W11354862	Orifice (1.45K) (Left Front)
2	W11186511	Assembly, Orifice (19K) (Left Front)	8	W11593170	Valve, Gas (Dual) (Left Front)		W10702888	Orifice (18K) (Left Front)
	W11186508	Orifice, Assembly (Left Rear)		W11511819	Valve, Gas (Left Rear)		W10849719	Orifice (5K) (Left Rear)
	W11186524	Assembly, Orifice (15K) (Right Front)		W11511818	Valve, Gas (Right Front)		W10849717	Orifice (15K) (Right Front)
	W11186520	Assembly, Orifice (9.2K) (Right Rear)		W11511824	Valve, Gas (Right Rear and Center)		W10849714	Orifice (9.5K) (Right Rear)
	W11186517	Assembly, Orifice (8K) (Center)	9	W10224921	Bracket, Aegis		W10849715	Orifice (8K) (Center)
3	W10949105	Bracket, Saddle Valve	10	W10439242	Burner, Broiler	18	3196178	Screw
4	W10432252	Tube, Gas Supply	11	W10680035	Burner, Bake	19	3196385	Screw
5	W11596366	Harness, Spark Switch	12	W10554066	Valve, Regulator	20	3400016	Screw
6	W10898387	Electrode, Burner	13	W10324262	Igniter, Bake	21	3601P336-45	Baffle, Broil Burner
	W10669525	Electrode (Left Rear)	14	W10306050	Tube, Broil Supply (Broiler Fitting To Valve)	22	W10827923	Electrode, Spring
	W10669524	Electrode, Burner (Right Front and Center)	15	W10583216	Fitting, Broil Burner	23	W11507167	Seal, Switch Shaft
	W10669523	Electrode, Burner (Right Rear)	16	W10333842	Electrode, Broil			FOLLOWING PARTS NOT ILLUSTRATED
							W11397194	LP Conversion Kit (Burners)
							W10566535	LP Conversion Kit (Bake and Broil)
							W10182767	Tie, Manifold Wire


DOOR PARTS

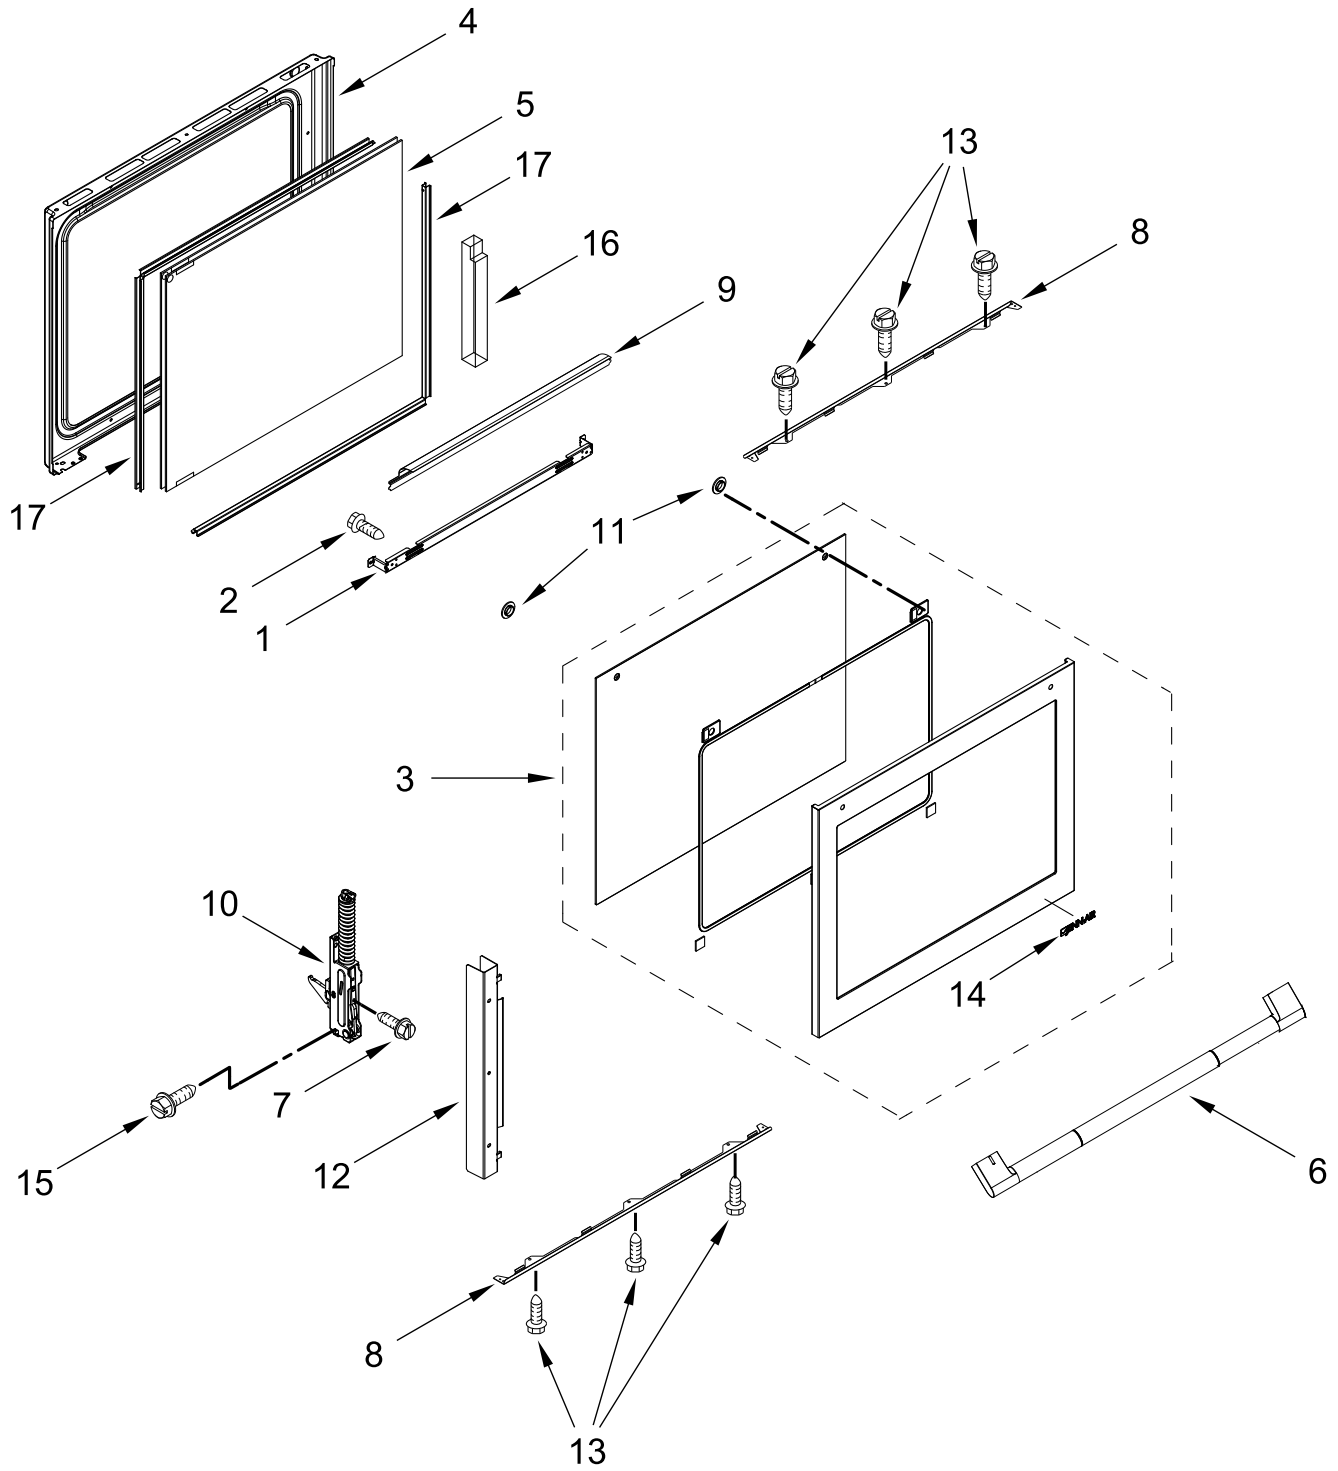

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10541911	Bracket, Glass Upper Handle	7	W10031780	Screw	15	W10327235	Screw
2	8533988	Screw	8	W10813140	Rail, Horizontal Support	16	W10766562	Insulation, Door
3		Assembly, Outer Door	9		Scoop, Door	17	W11379948	Glass Spacer
	W11618950	Stainless		W10551024	Stainless			
4	W10826568	Liner, Door	10	W11592970	Hinge, Slow Close			
5	W11223202	Glass, Inner	11	W10319024	Washer, Door			
6		Assembly, Door Handle	12	W10813139	Rail, Vertical Support			
	W11600908	Stainless	13	W10031790	Screw			
			14	W11238658	Stainless			

DRAWER PARTS

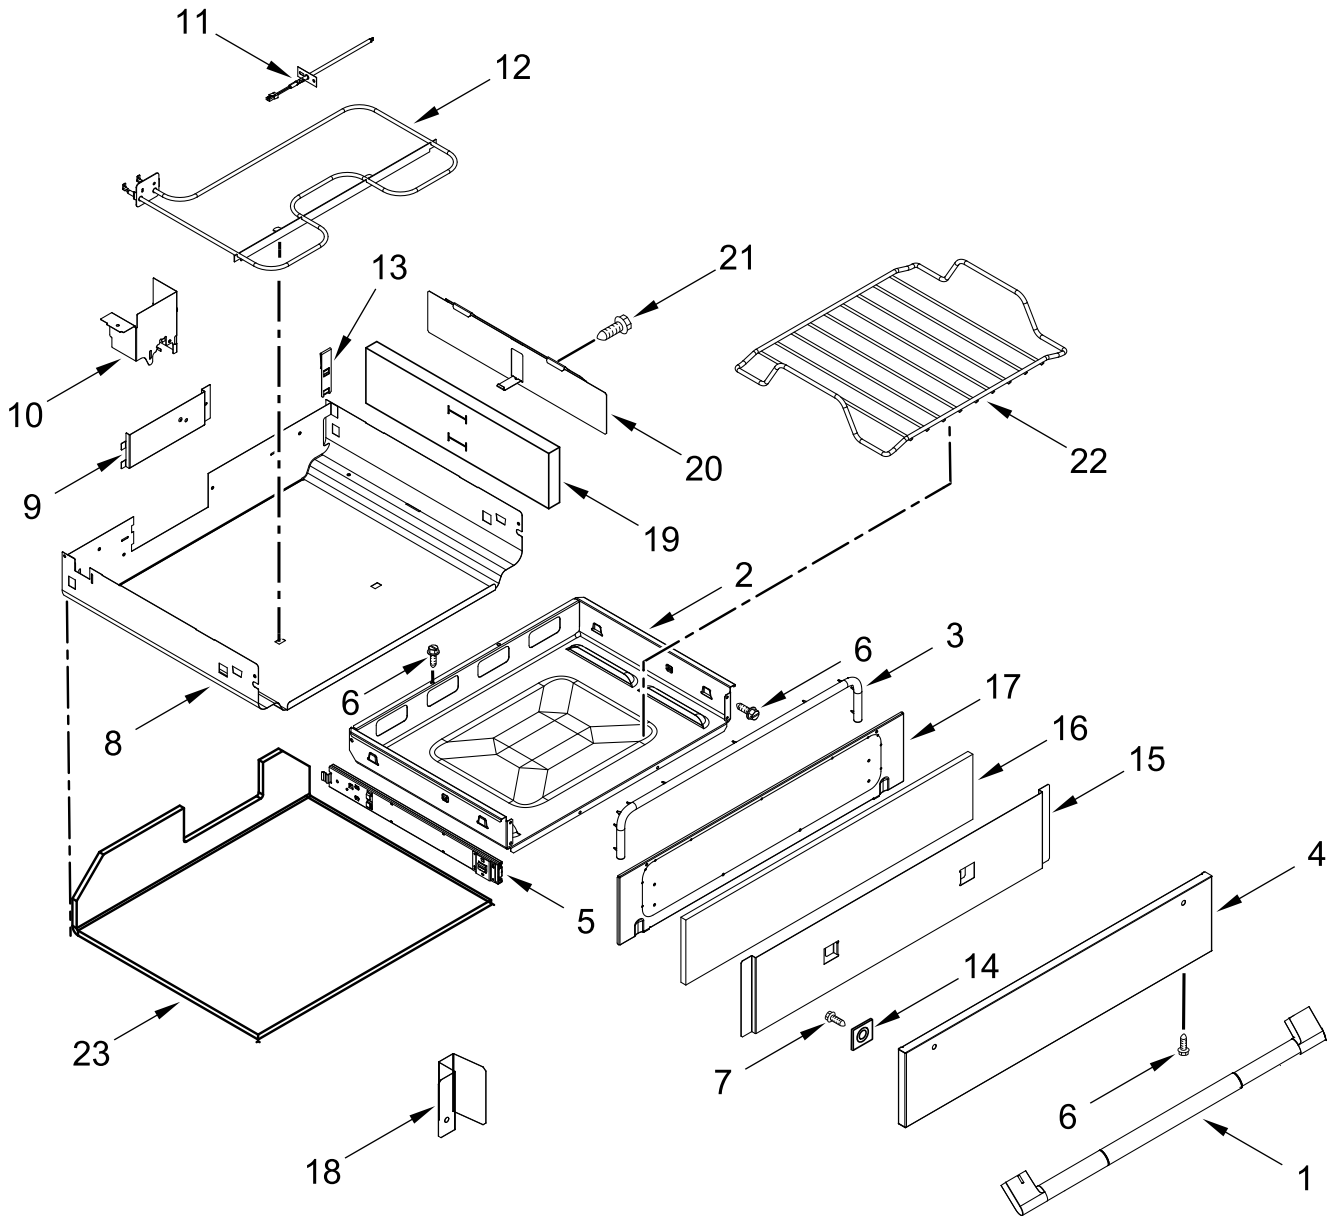

DRAWER PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Drawer Handle	11	W10586204	Sensor	23	W10551011	Insulation, Bake Drawer Bottom
	W11600908	Stainless	12	W10541944	Element, Bake			FOLLOWING PARTS NOT ILLUSTRATED
2	W10757442	Drawer,Bake	13	W10551019	Cover, Side			
3	W10550987	Seal, Drawer	14	3823F017-45	Spacer, Handle			
4		Panel, Drawer Front	15	W10551018	Insulation, Drawer Front		W10550983	Insulation, Retainer Bake Drawer
	W10541958	Stainless	16	W10550982	Insulation, Drawer		W10541960	Insulation, Drawer Top
5	W10921904	Slide, Drawer (Left)	17	W10541947	Panel, Front Inner			
	W10921905	Slide, Drawer (Right)	18	W10655446	Shield, Corner			
6	W10327235	Screw	19	W10550984	Insulation, Drawer Side			
7	8533988	Screw	20	W10550985	Retainer, Side Insulation			
8	W10634260	Enclosure, Warming	21	3196560	Screw			
9	W10727084	Cover, Gas Valve	22	W10602493	Rack, Bake Drawer			
10	W10634259	Cover, Wire						

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2 x 24 x 120 in)
	240132	Insulation (2-1/2 x 22 x 120 in)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350939	Enamel, Black
	285006	Black
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	W10391473	Pad, Cooktop Cleaning
	WA906B	Scraper, Cooktop
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting
	W10432545	Kit, Grill
	W10432019	Alt Cleaning Kit Assembly, Trim (Includes Blind Threaded Insert)
		(5/8 in)
	W10675026	Black
	W10675027	White
	W10675028	Stainless (1 1/8 in)
	W10731886	Black
	W10731885	White
	W10731887	Stainless Assembly, Backsplash
	W10655449	Black
	W10655448	White
	W10655450	Stainless