




**GAS DRYER
(Residential Commercial-Grade)**

MODELS:

MGDP586KW0 (White)


TOP AND CONSOLE PARTS

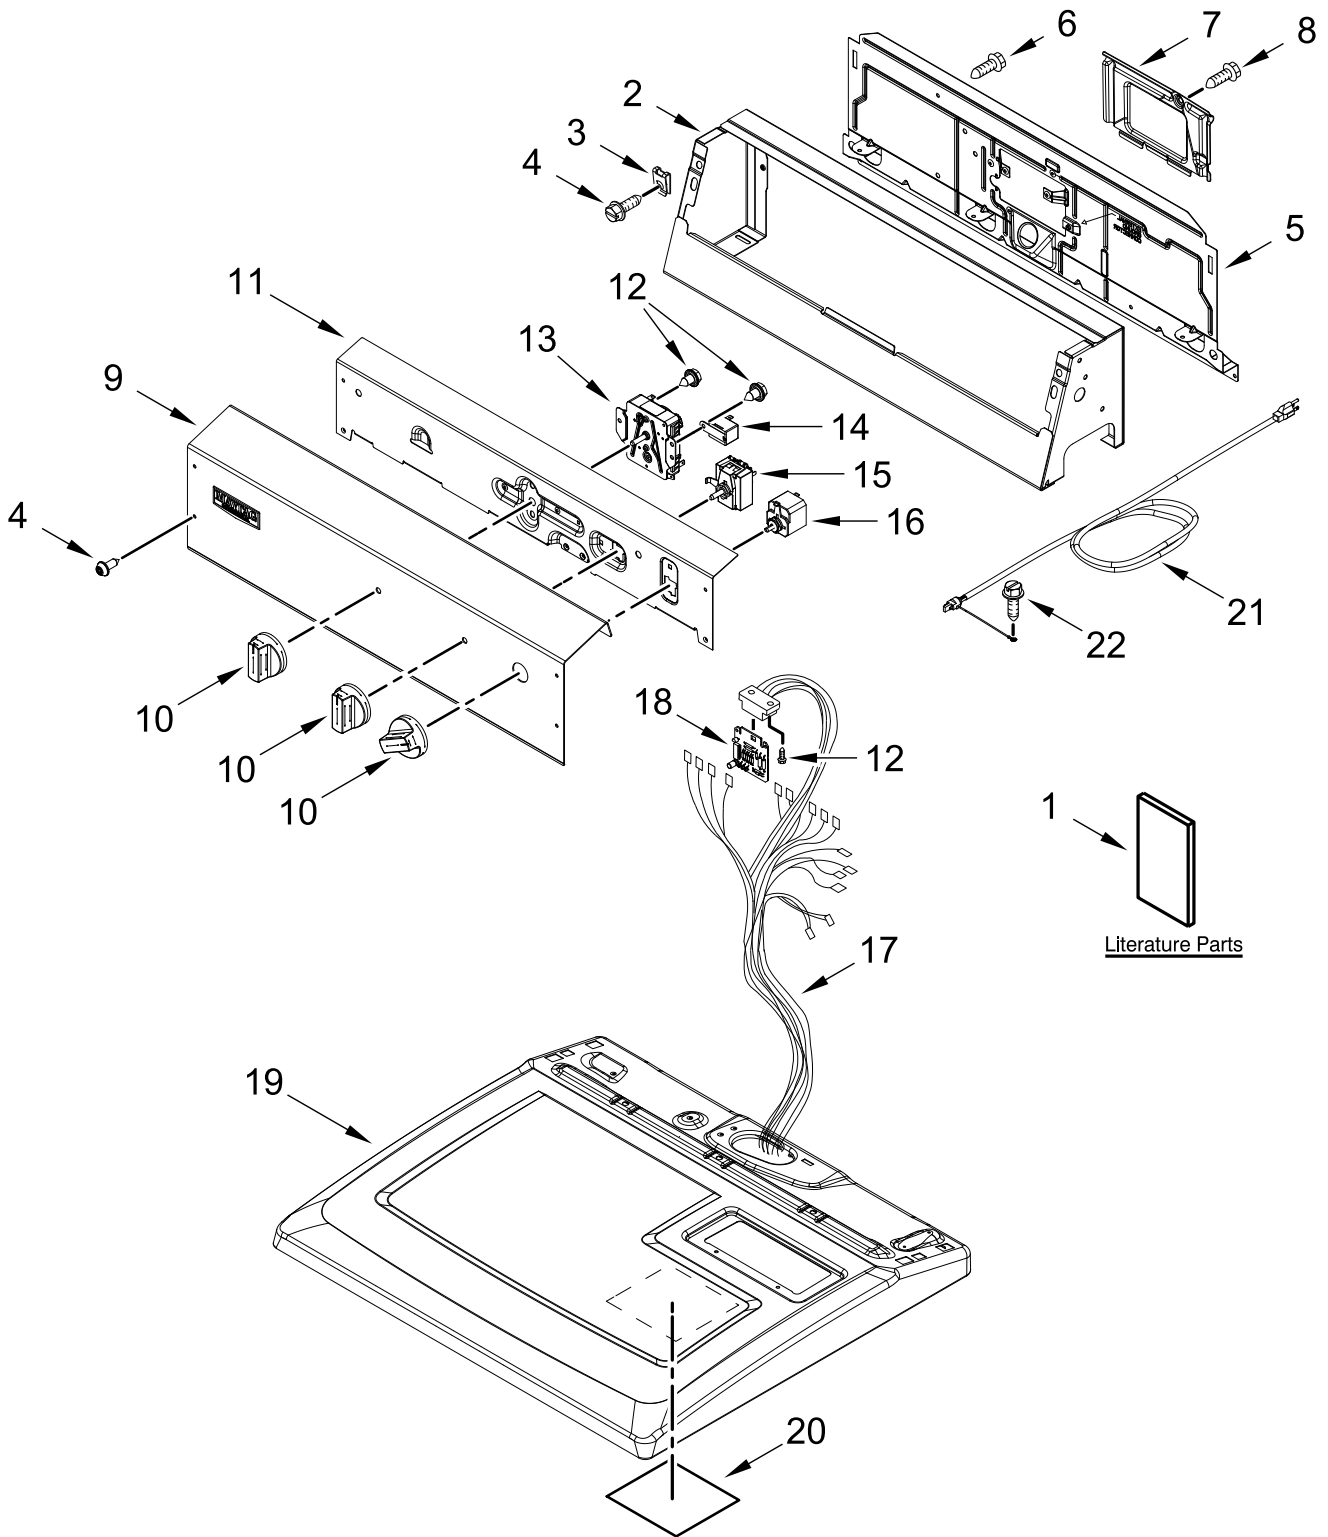

TOP AND CONSOLE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	8317339	Cover, Terminal Block	16	W11613271	Switch, Push-To-Start
	W11601611	Installation Instructions	8	3390631	Screw	17	W11551562	Harness, Main
	W11601607	Use and Care Guide	9	W11547354	Fascia	18	W10476828	Control, Electronic
	W11601605	Wiring Diagram	10		Knob	19		Top
	W11601608	Quick Start Guide		W11567082	Stainless		W10772880	White
2	W11124005	Console	11	W11547331	Bracket, Back	20	W10836097	Panel, Dampening
3	W10131123	Nut, "U"	12	8533971	Screw	21	W10869141	Cord, Power
4	W10386302	Screw	13	W10185992	Timer Assembly (60 Hz.)	22	W10773242	Screw
5	W10863352	Panel, Rear (Console)	14	694419	Buzzer, Mini			
6	3390647	Screw	15	3405155	Switch, Rotary (5 POS)			


CABINET PARTS

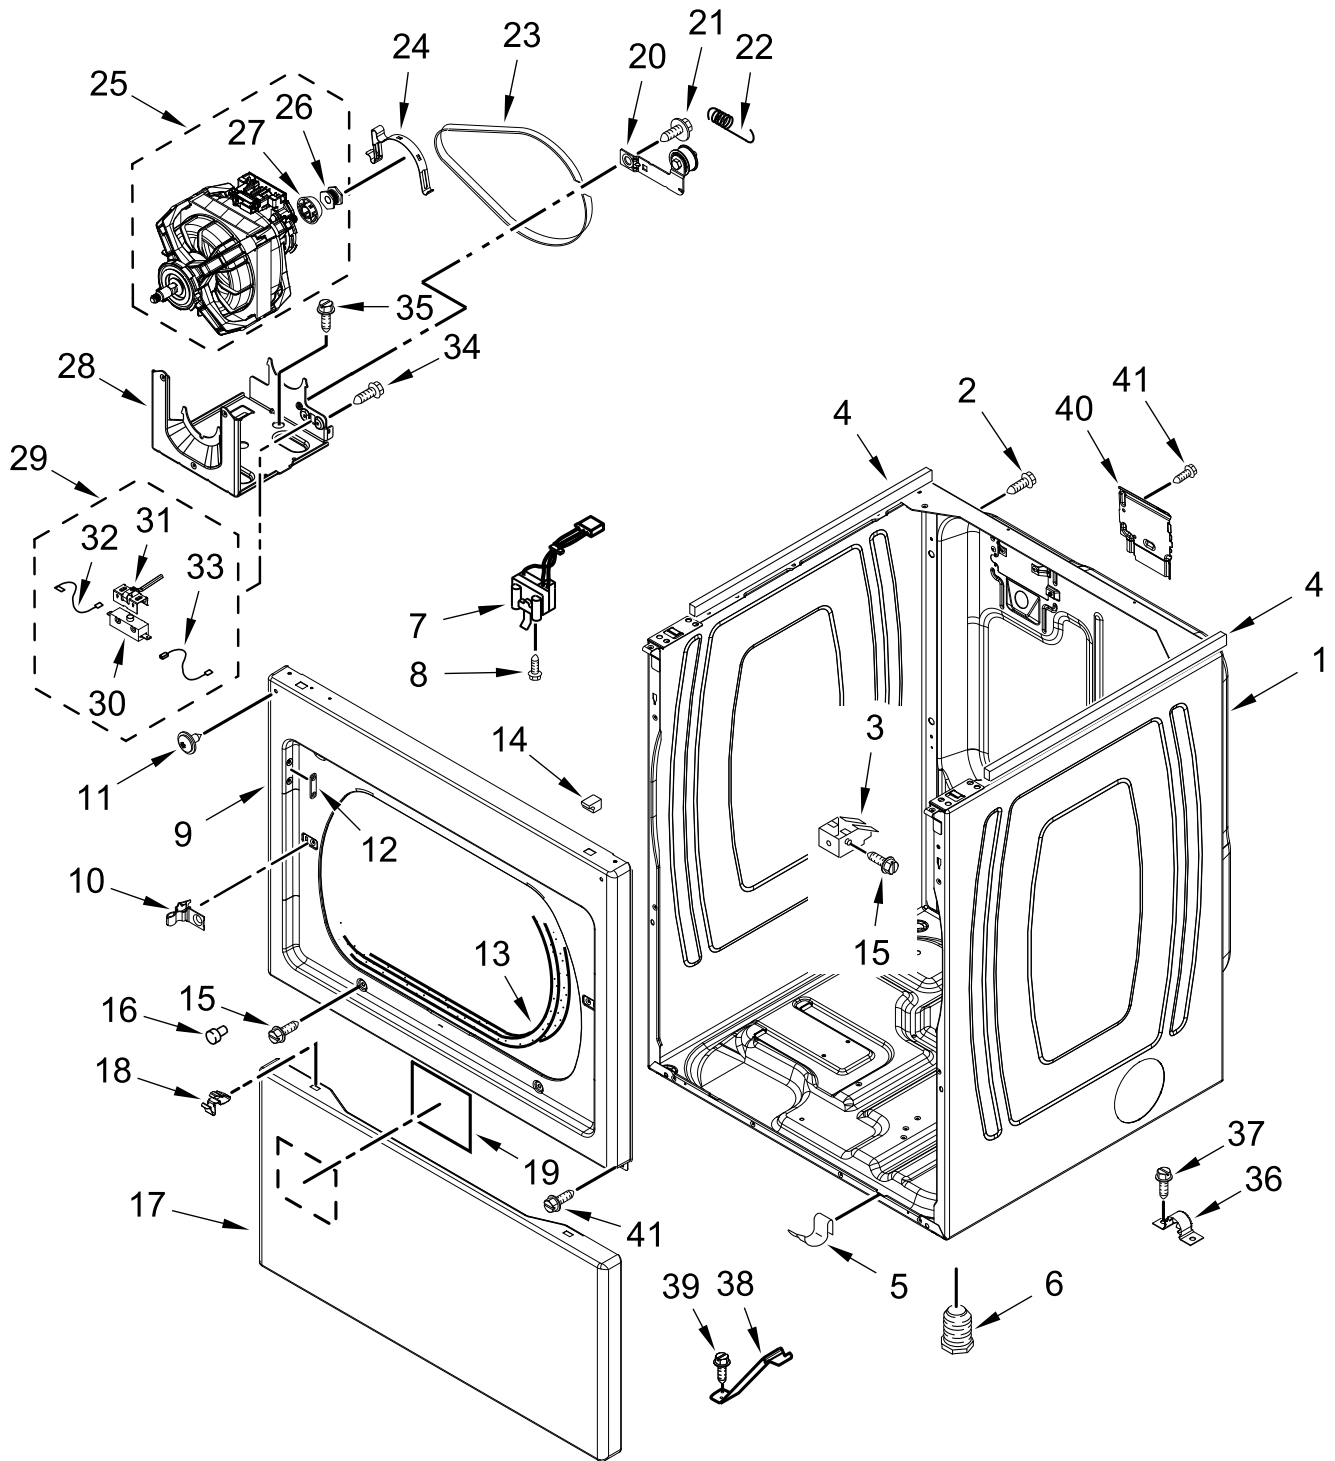

CABINET PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Cabinet	14	345670	Lock Top	29	8066134	Switch Assembly
	W11161907	White	15	3357011	Screw	30	3394881	Switch, Belt
2	W10773242	Screw	16	693152	Bumper	31	8066120	Lever, Belt Switch
3	3391846	Clip, Front Panel	17		Panel, Toe	32	W10167612	Wire, Belt Switch
4	W11241070	Seal, Foam		697215	White	33	3398948	Wire, Jumper (Broken Belt Switch)
5	W10291934	Clip	18	3388229	Retainer	34	98129	Screw
6	W10073890	Leveling Leg Assembly	19	W10836097	Panel, Dampening	35	343641	Screw
7	W10569603	Switch, Door	20	W10344193	Pulley-Idler Assembly	36	3387561	Clamp, Pipe
8	697773	Screw	21	3389420	Screw	37	8533971	Screw
9	W10694688	Panel, Front	22	W10446781	Spring, Idler	38	8529757	Bracket, Burner
10	W11224633	Strike, Door	23	W10131172	Belt, Drive	39	693995	Screw
11	W10879744	Screw	24	660658	Clamp, Motor	40	W11378153	Cover, Terminal
12		Plug, Hinge	25	W10396031	Motor	41	3390631	Screw
	W10191265	White	26	3394341	Pulley, Motor			
13	3387242	Seal, Front Panel	27	3393657	Restrainer, Belt			
			28	3387118	Bracket, Motor			


BULKHEAD PARTS

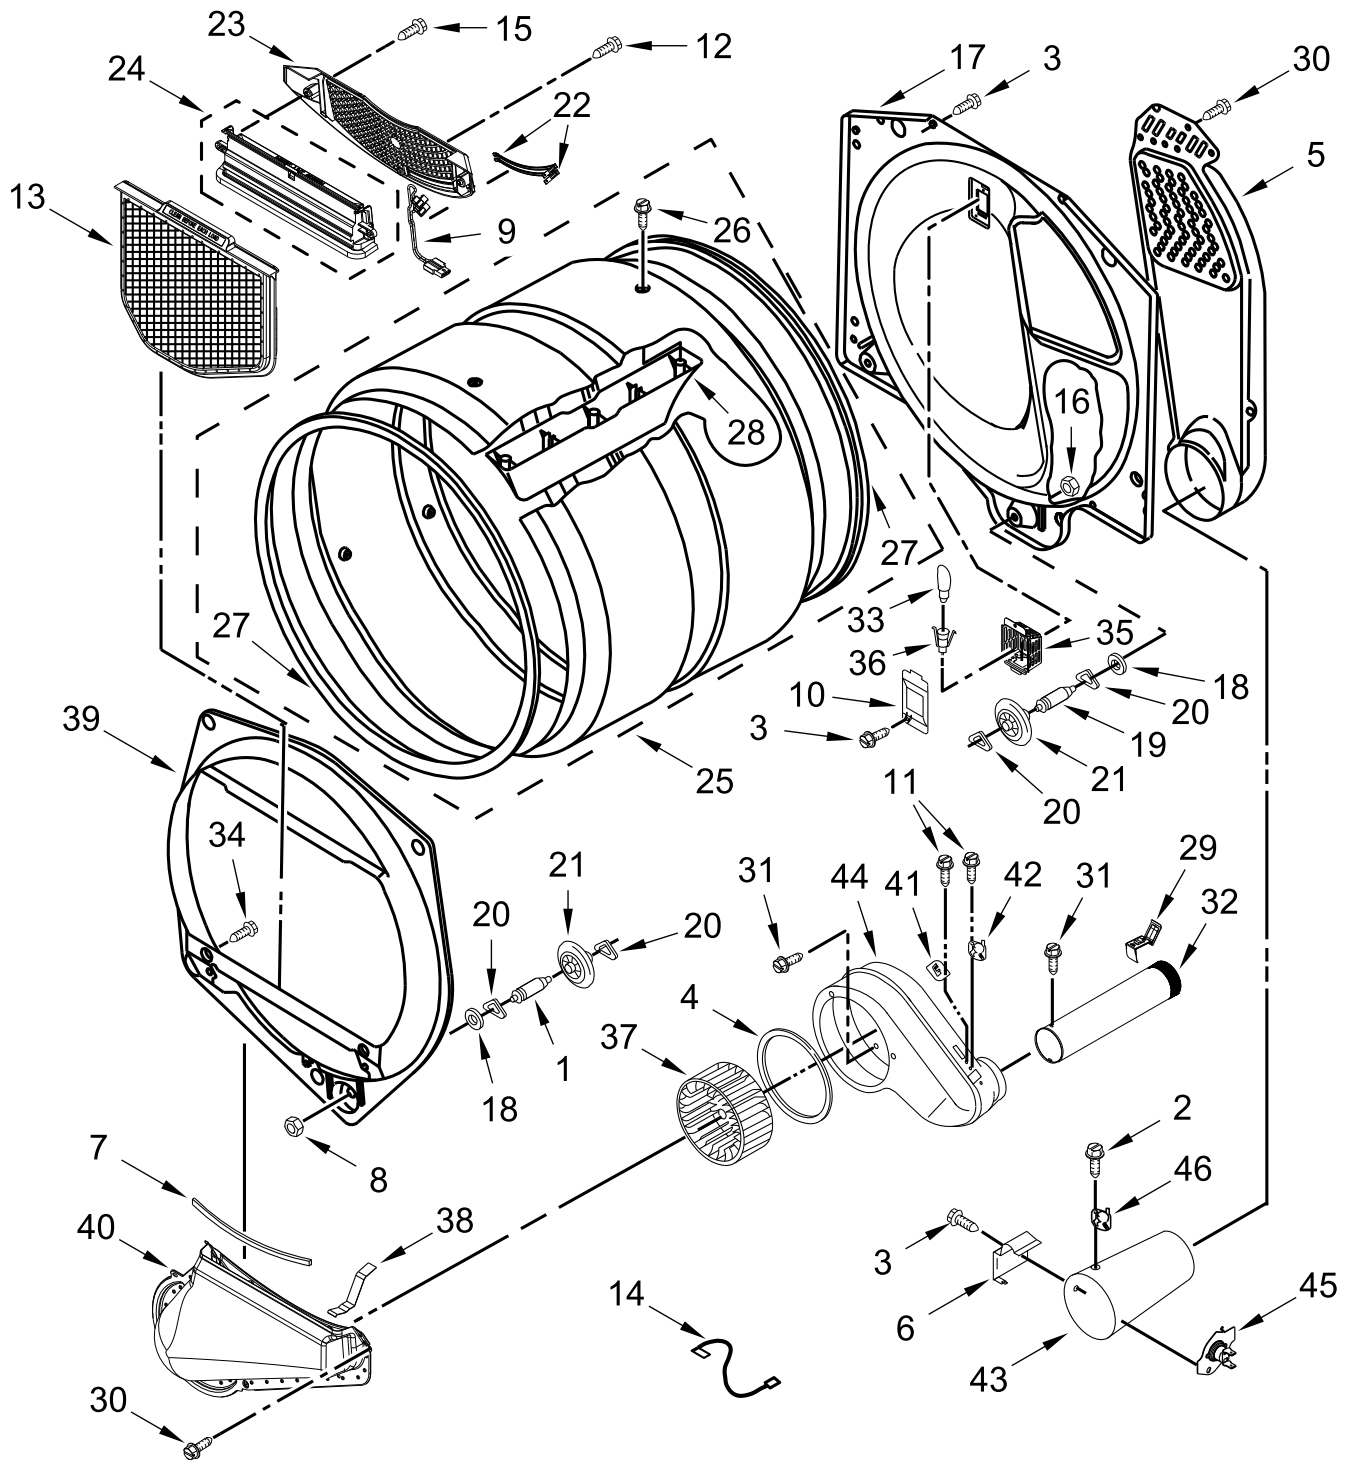

BULKHEAD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10359271	Shaft, Drum Roller - Right Hand Thread	17	W11162455	Bulkhead, Rear	33	3406124	Bulb, Light
			18	3387459	Washer	34	695240	Screw
2	90767	Screw	19	W10359272	Shaft, Drum Roller - Left Hand Thread	35	8578825	Bracket, Drum Light
3	3390647	Screw				36	W10214261	Socket, Light
4	697770	Seal, Plate Cover	20	W10512946	Washer, Tri Ring	37	W10349492	Wheel, Blower
5	W10293765	Assembly, Air Duct	21	W10314171	Roller, Support	38	W10345456	Clip, Spring
6	338906	Sensor, Radiant	22	3387223	Sensor, Electrode	39	697557	Bulkhead, Front
7	697814	Seal, Drum Front	23	W10692558	Grill, Outlet	40	8066168	Assembly, Lint Duct
8	3934666	Nut, Hex	24	W10685669	Assembly, Outlet Housing	41	3392519	Fuse, Thermal (91C)
9	W10298258	Harness, Sensor	25	W10545923	Assembly, Drum	42	8318268	Thermostat
10	3402841	Lens, Drum Light	26	W10219342	Screw	43	8573824	Funnel, Burner
11	693995	Screw	27	W10521118	Seal, Drum	44	8544362	Housing, Blower
12	3387230	Screw	28	697693	Baffle, Drum	45	8573713	Cut-Off, Thermal
13	W10049370	Screen, Lint	29	8572105	Clip, Exhaust	46	3391912	Thermostat, Hi Limit
14	3401707	Jumper, Wire	30	8533971	Screw			
15	3357011	Screw	31	489463	Screw			
16	W10001120	Nut, Hex (Left Hand Thread)	32	8066224	Pipe, Exhaust			

DOOR PARTS

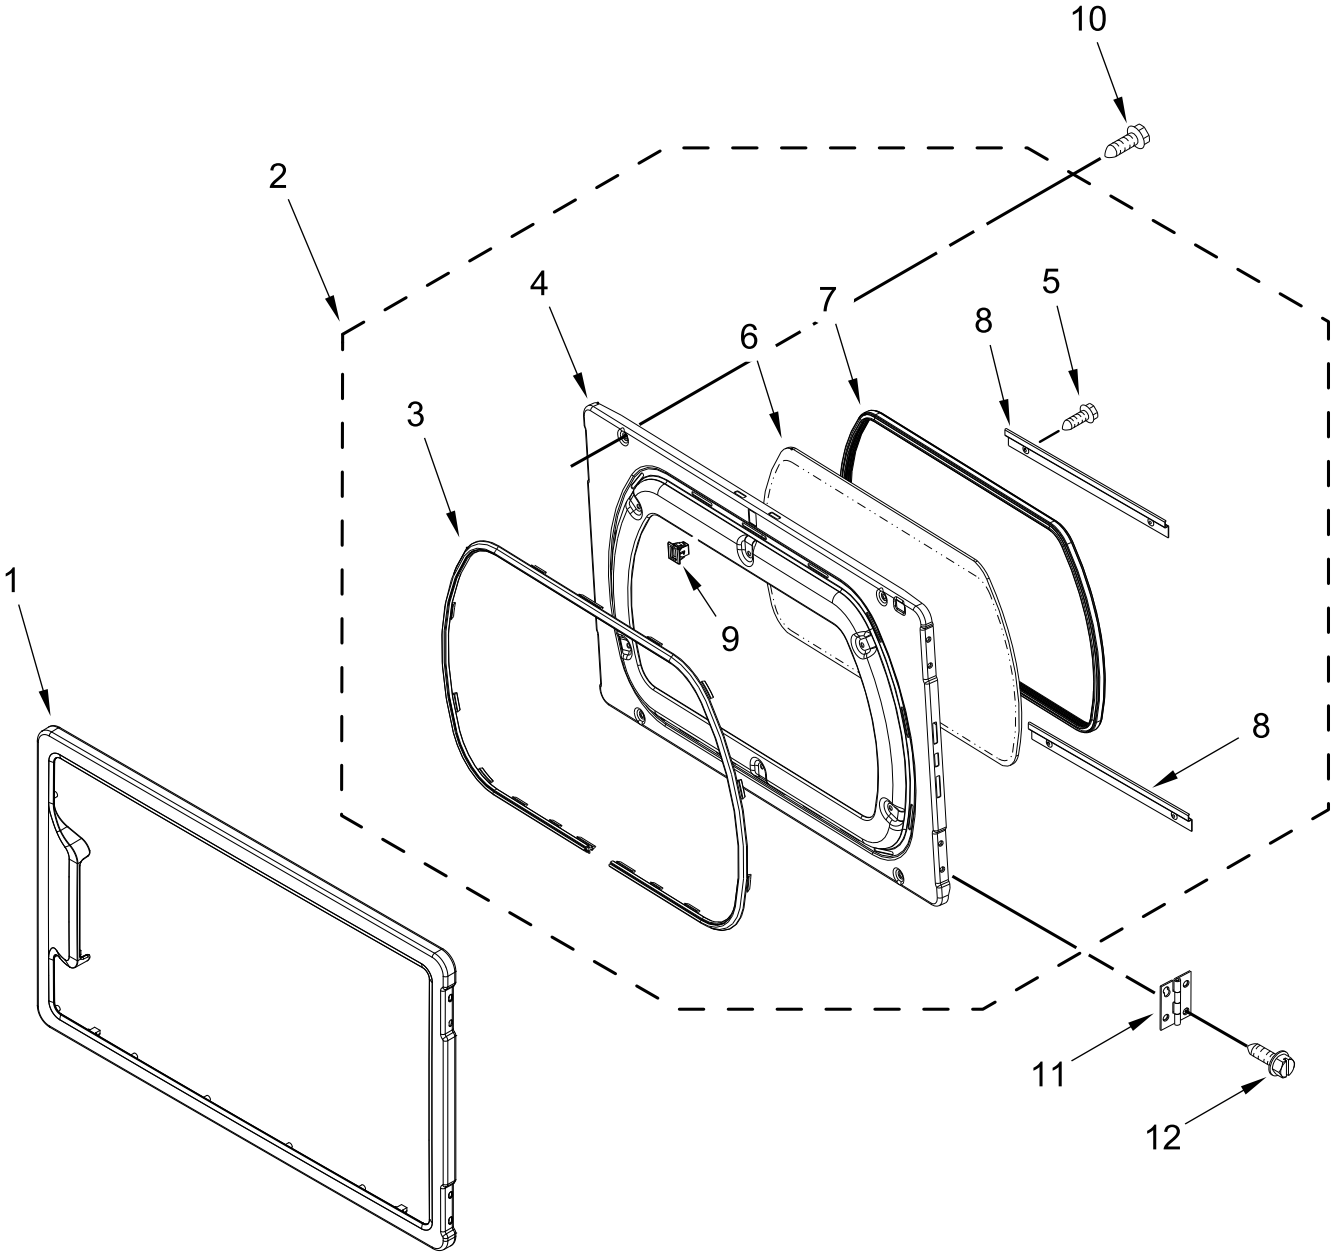

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Outer Door	4		Door, Inner	9	690081	Assembly, Door Catch
	W10284127	White		W10470571	White	10	W10192860	Screw
2		Assembly, Inner Door	5	3393258	Screw	11		Hinge & Pin Assembly
	W10513690	White	6	W10284121	Glass, Door		W10279703	Silver
3	W10354795	Seal, Door	7	W10284122	Seal, Window	12	342055	Screw
			8	8519354	Retainer, Window			

BURNER ASSEMBLY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8576353	Burner Assembly 60 Hz. (Type 1)(White Rodgers)	10		Orifice, Burner	16	694423	Screw, Regulator Adjustment
				15418	Type 1 (Natural)			
				15422	Type 4 (Propane)	17	694422	Spring, Regulator
2	688617	Tube, Burner		234867	Type 4 (Propane)	18	239822	Plug, Pipe
3	694298	Bracket, Ignitor	11	694421	Screw, Coil	19	3390647	Screw
4	686590	Ignitor	12	694538	Bracket, Coil	20	3387561	Clamp, Pipe
5	W10366705	Screw	13	694540	Coil, 60 Hz. (2 Terminal) (Main)	21	3389889	Bracket, Support
6	343641	Screw						FOLLOWING PARTS NOT ILLUSTRATED
7	W10118312	Valve, Gas 60 Hz. (Complete)	14	694539	Coil, 60 Hz (Split) (3 Terminal) (Pilot Position)		8576846	Conversion Kit (Type 1 to Type 4 LPG)
8	3387057	Screw						
9	3389871	Base, Burner	15	694424	Leak, Limiter			

OPTIONAL PARTS (NOT INCLUDED)

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	80047	Kit, Dryer Repair
	8522199	Kit, Dryer Vent Testing

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)